 


Radio Control System For Model

Users Manual

 
Model No.:T2S-27A

 
 
Transmitter (TX): This is the hand-held unit that sends the signal to the control unit. As you move the sticks on the transmitter, the motors in the airplane will react accordingly.

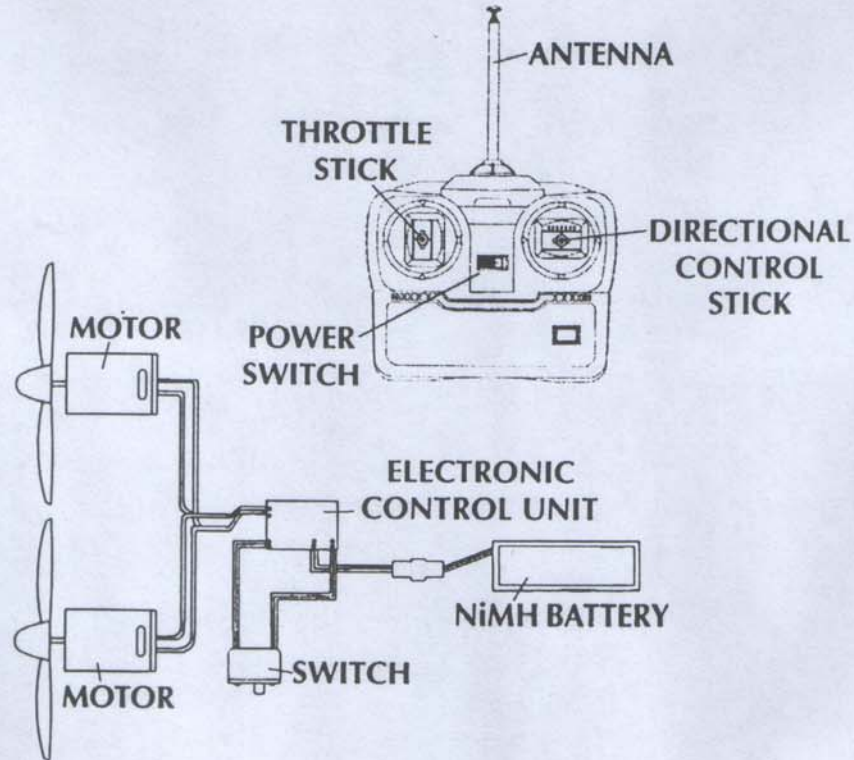

PREPARE THE TRANSMITTER

1. Remove the antenna from box and insert it in the top of the transmitter. Screw the antenna into the antenna base tightly. Do not overtighten.

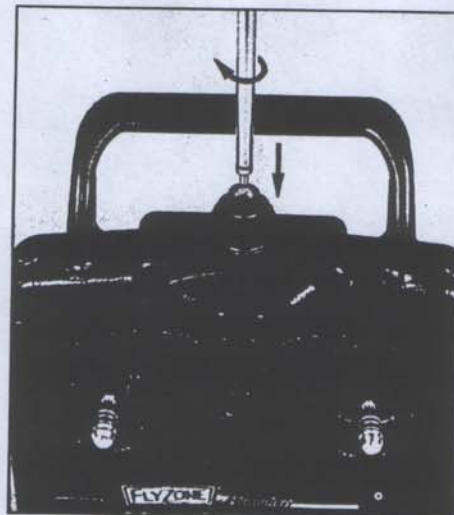

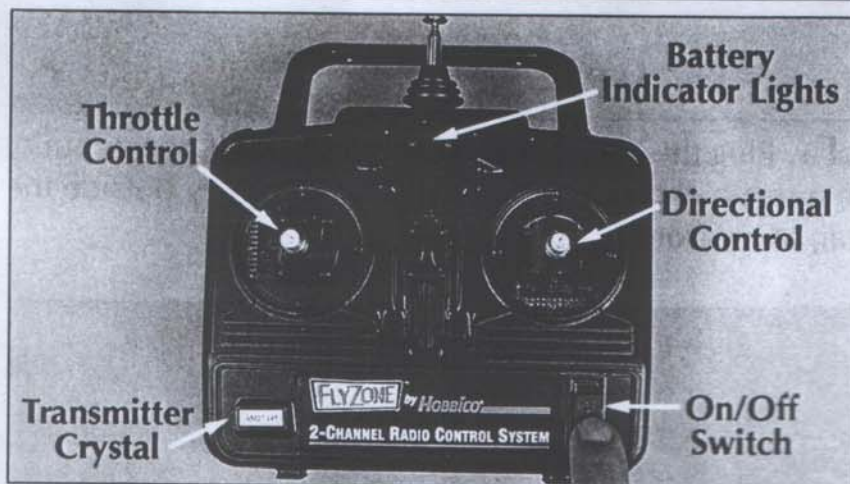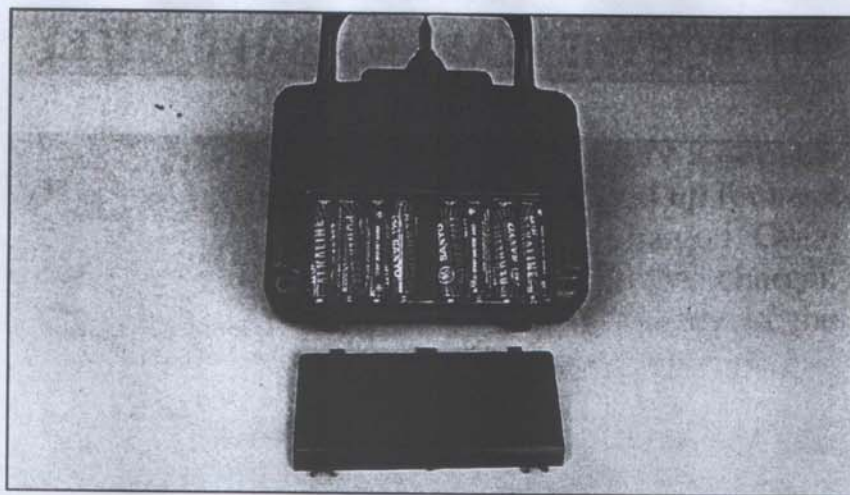

❑ 2. The transmitter that controls your airplane requires power, in the form of eight "AA" batteries. To install the batteries, just turn over the transmitter, remove the battery hatch and install the batteries following the diagram inside the battery compartment. Reinstall the battery hatch, switch on the transmitter and check the LEDs on the front of the transmitter. If the green light is on, it is safe to fly. If only the red light is on or flashing, you need to install fresh batteries.



❑ 3. On the bottom of the transmitter are two switches. Both switches should be positioned to the left.

Caution:

- Do not use rechargeable (NiCd) batteries.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (NiCd) batteries