

Vodafone Smart ultra 6

Quick Start Guide

LEGAL INFORMATION

Copyright © 2015 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www.ztedevice.com) for more information on self-service and supported product models. Information on the website takes precedence.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Images and screenshots used in this guide may differ from the actual product. Content in this guide may differ from the actual product or software.

Trademarks

ZTE and the ZTE logos are trademarks of the ZTE Corporation.

Google and Android are trademarks of Google, Inc.

The *Bluetooth*® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.

microSDHC logo  is a trademark of the SD-3C, LLC.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Qualcomm® Snapdragon™ processors are products of Qualcomm Technologies, Inc.

 
Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission.

 
Version No. : R1.0

Edition Time : March 12, 2015

Manual No. :

Getting to Know Your Phone

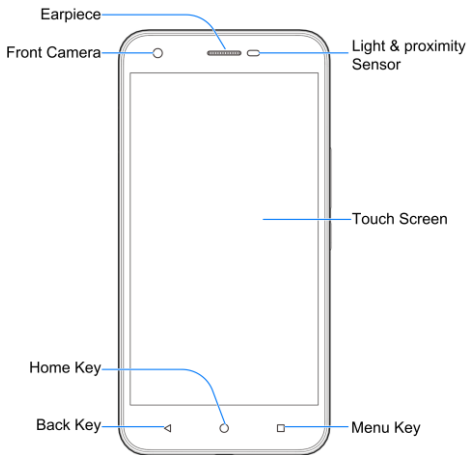

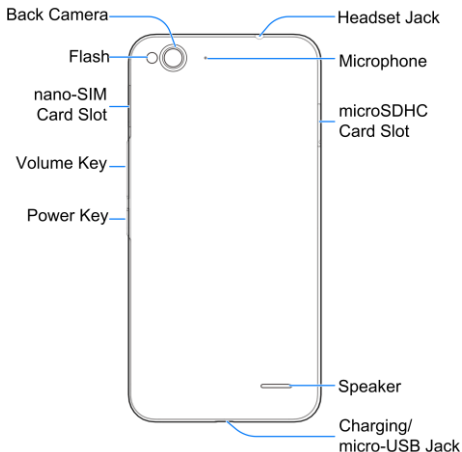

Power Key

- Press and hold to power on, select phone modes, turn on/off flight mode, restart or power off.
- Press to turn off or on the screen display.

Home Key

- Touch to return to the home screen from any application or screen.
- Touch and hold to get Google Search.

Menu Key

- Touch to get the options for the current screen.
- Touch and hold to see recently used applications.

Back Key

Touch to go to the previous screen.

 
Volume Key

Press or hold to turn the volume up or down.

Starting Up

Switch off your phone before installing or replacing the nano-SIM card. The microSDHC™ card is optional and can be installed and removed while the phone is turned on. Unmount the microSDHC card before removing it.


1. Use the tray eject tool to pull out the nano-SIM card tray and place the nano-SIM card (contacts facing down) on the tray as shown. Then carefully install the tray back.

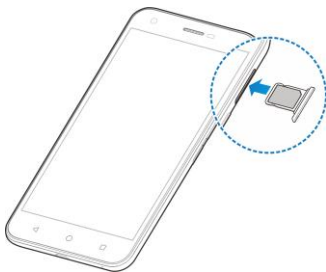

WARNING!

To avoid damage to the phone, do not use any other kind of SIM card, or any non-standard nano-SIM card cut from a SIM card. You can get a standard nano-SIM card from your service provider.

 2. Use the tray eject tool to pull out the microSDHC card tray and place the microSDHC card (contacts facing down) on the tray as shown. Then carefully install the tray back.

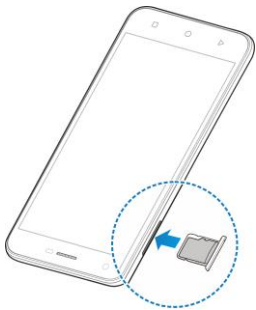

NOTE:

Your phone may come with a pre-installed microSDHC card. Some applications may not function normally after you remove the card, pre-installed or otherwise.

Charging the Battery

1. Connect the adapter to the charging jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging jack.



2. Connect the charger to a standard AC power outlet.
3. Disconnect the charger when the battery is fully charged.



NOTE:

If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 10 minutes. Contact customer service if you still cannot power on the phone after prolonged charging.

 
Powering On/Off Your Phone

Ensure that the battery is charged before powering on.

- Press and hold the **Power Key** to turn on your phone.
- To turn it off, press and hold the **Power Key** to open the options menu. Touch **Shut down**.

Getting to Know the Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding application shortcuts, folders, widgets, and more.

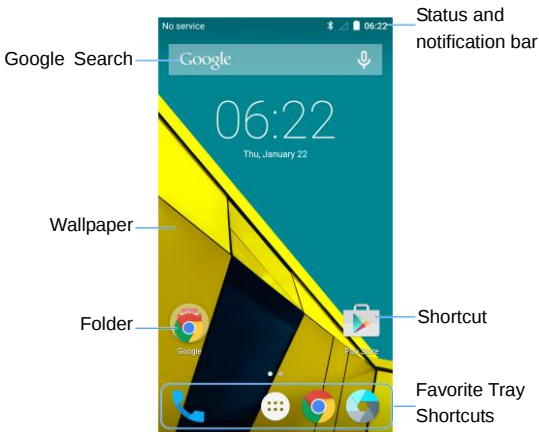



NOTE:

Your home screen extends beyond the initial screen, providing more space for shortcuts, widgets, and folders. Simply swipe left or right to see the extended home screens.

Opening Applications

1. Touch the **Home Key** if the current screen is not the home screen.
2. Touch .
3. Slide left or right on the screen and touch an app to open it.

Adding Shortcuts or Widgets

To add a shortcut:

1. Touch the **Home Key** > .
2. Touch and hold an app icon and drag it to the home screen.

To add a widget:

1. Touch and hold an empty place on the home screen and then touch **WIDGETS**.
2. Touch and hold a widget and drag it to the home screen.

Removing Shortcuts or Widgets

1. Touch and hold a widget or shortcut on the home screen.

2. Drag it to  Remove to remove it.

Organizing Shortcuts With Folders

1. Touch and hold a shortcut on the home screen.
2. Drag the shortcut icon over another and release your finger. A new folder is created and both shortcuts are added into the folder.
3. If needed, drag more shortcuts and drop them into the folder.

Applying New Wallpapers

You can set the wallpaper for the home screen or lock screen.

1. Touch the **Home Key > Menu Key > Wallpaper**.
2. Select a wallpaper source.

Checking the Phone Status

The status bar at the top of the screen displays phone and service status with various icons on the right side. Below are some of the icons and their meanings.

	3G connected		No signal
	4G connected		Signal strength
	Ringer off		Flight mode
	Vibrate mode		Bluetooth on
	Battery low		Connected to a Wi-Fi [®] network
	Battery partially drained		Wi-Fi in use
	Battery full		Speaker on
	Battery charging		Phone microphone off
	Wired headset connected		Alarm set

Managing Notifications

The status bar at the top of the screen provides notification alerts with different icons on the left side. Below are some of the icons and their meanings.

The notifications depend on the apps installed and you can touch and drag the status bar down to see more information.

	New SMS		microSDHC card unmounted
	New MMS		microSDHC card removed
	New email		Upcoming event
	New Gmail™ message		Call on hold
	Missed call		New Wi-Fi network detected
	Call in progress		Downloading data
	USB connected		Sending data
	Song is playing		USB tethering is on
	Updates available		Portable Wi-Fi hotspot
	GPS on		

Setting Ringtone and Sound

Setting Ringtone or Notification Sound

1. Touch the **Home Key** >  > **Settings** > **Sound & notification**.
2. Touch **Phone ringtone** or **Default notification ringtone**.
3. Select the ringtone you want to use.
4. Touch **OK**.

Setting System Tones

1. Touch the **Home Key** >  > **Settings** > **Sound & notification**.
2. Touch **Other sounds** and enable the types of sound you want to hear or disable those you do not need.

Adjusting Volume

To adjust call volume, press the **Volume Key** while on a call. To adjust other types of volume, follow the steps below.

1. Touch the **Home Key** >  > **Settings** > **Sound & notification**.

2. Drag the sliders to adjust the volume for music, video, games, and other media, the ringtone and notification volume, and the alarm volume.



NOTE:

Press and hold the **Power Key** and then touch  to enable the silent mode, touch  to enable the vibration mode, or touch  to disable the silent mode.

Setting a Screen Lock

You can protect your phone by creating a screen lock. When it is enabled, you need to swipe the screen, draw a pattern, or enter a numeric PIN or password to unlock the phone's screen and keys.

1. Touch the **Home Key** >  > **Settings** > **Security** > **Screen lock**.
2. Touch **Swipe**, **Pattern**, **PIN** or **Password**.
 - ▶ Touch **Swipe** to enable unlock with a 'swipe up' gesture.
 - ▶ Touch **Pattern** to create a pattern that you must draw to unlock the screen.
 - ▶ Touch **PIN** or **Password** to set a numeric PIN or a password you must enter to unlock your screen.

Checking Voicemail

1. Touch the **Home Key** > .
2. Touch  to open the dialer.
3. Touch and hold ¹ . If prompted, enter your voicemail password.
4. Follow the voice prompts to listen to and manage your voicemail messages.

Making a Call

1. Touch the **Home Key** > .
2. Touch  to open the dialer.
3. Enter the phone number with the on-screen keypad. Touch  to delete incorrect digits.
4. Touch the  icon below the keypad to place the call.



NOTE:

To call a contact, touch the **Home Key** >  > **CONTACTS** and touch a contact or a number.

Adding Contacts

Creating a New Contact

1. Touch  in the home screen and select **Contacts**.
2. Touch the **ALL CONTACTS** tab.
3. Touch , or **CREATE A NEW CONTACT** (if there are no contacts).
4. Enter the contact name, phone numbers, email addresses, and other information.
5. Touch  to save the contact.

Importing Contacts in Batches

1. Touch  in the home screen and select **Contacts**.
2. Touch the **ALL CONTACTS** tab.
3. Touch the **Menu Key > Import/export > Import from SIM card** or **Import from Storage**.
4. If prompted, select an account in which to save the contacts.
5. For importing from the nano-SIM card, touch all the nano-SIM contacts you want to import and touch .
For importing from the microSDHC card, select the vCard

file(s) on the microSDHC card and then it will be imported shortly.

Sending a Message

1. Touch  in the home screen and select **Messenger**.
2. Touch .
3. Enter the recipient(s) and message text. If you want to send an MMS, add subject and attachments.
4. Touch  to send the message.

Setting Up Email Accounts

Setting Up Gmail

1. Touch  in the home screen and select **Gmail**.
 **NOTE:**
If another Gmail account is already set up, touch the **Menu Key > Settings > ADD ACCOUNT**.
2. Touch **Existing** to sign in to your existing Google Account. If you have no Google Accounts, touch **New** to create one.
3. Follow the instructions on the screen to set up the account.

Setting Up Email

1. Touch  in the home screen and select **Email**.



NOTE:

If another email account is already set up, touch the **Menu Key > Account settings > ADD ACCOUNT**.

2. Enter the email address and password.
3. Touch **Next** and follow the onscreen instructions.

Setting Up an Exchange ActiveSync® Account

1. Touch  in the home screen and select **Email**.



NOTE:

If another email account is already set up, touch the **Menu Key > Account settings > ADD ACCOUNT**.

2. Enter the email address and password.
3. Touch **Manual setup > Exchange**.
4. If necessary, edit **Domain\Username, Password, and Server** information.
5. Read the onscreen activation disclaimer and, if prompted, touch **Next**.
6. If prompted, touch **OK** to allow the server to remotely control some of your phone's security features.

7. Configure the settings on the screen, such as **Days to sync**, and then touch **Next**.
8. If prompted, touch **Activate** to activate the Email app as a device administrator.
9. Identify your new account with a unique name and then touch **Next**.

Contact your server administrator for more help.

Connecting With a Bluetooth Headset

1. Turn on the Bluetooth headset and switch it to pairing mode. Refer to the headset's user guide for more information.
2. Touch  in the home screen and select **Settings > Bluetooth**.
3. Slide the **ON/OFF** switch if Bluetooth is off. When Bluetooth is on, the  icon appears in the status bar.



NOTE:

Your phone automatically scans for and displays the IDs of all available Bluetooth devices in range. You could touch the **Menu Key > Refresh** if you wanted to scan again.

4. Touch the ID of the headset, or any other device you want

to pair with your phone.



NOTE:

Touch the ID again to end the connection.

Installing Apps From the Google Play™ Store

There are tens of thousands of games and applications in the Google Play Store for you to download and install. You can send feedback or comments on an application.

Before you begin, ensure that you have signed in to your Google account.



NOTE:

The content you can access in the Play Store depends on your region and your service provider.

1. Touch the **Home Key** >  > **Play Store**.
The first time you launch **Play Store**, accept the Google Play Terms of Service.
2. Find the apps you need either by category or by touching .
3. Touch the app to see detailed description.

4. Touch **INSTALL** (free apps) or the price (paid apps). If the app is not free, you need to sign in to your Google Wallet™ account and select a payment method.



CAUTION:

Once installed, some apps can access many functions or a significant amount of your personal data. The Play Store will show you what the app can access. Touch **ACCEPT** to proceed, or touch the **Back Key** to cancel.

5. Wait for the app to be downloaded and installed automatically. Payment needs to be authorized before paid apps start downloading.

The app is successfully installed when the  icon appears in the status bar. You can find the new app after touching the **Home Key** > .

Taking a Photo

1. Touch  in the home screen and select **Camera**.
2. Aim the camera at the subject and make any necessary adjustment.



Number	Function
1	Switch between the front and back camera.
2	Choose time interval.
3	Change the flash setting, only available for the back camera.
4	Change the camera settings.
5	View pictures and videos you have taken.
6	Touch the shutter button to take a picture.
7	Start video recording.

3. Lightly touch  to take a picture.

Recording a Video

1. Touch  in the home screen and select **Camera**.
2. Aim the camera at the subject and make any necessary adjustment.
3. Touch  to start and  to stop recording.



NOTE:

While the recording is in progress, you can touch  to save the frame as a separate photo.

Playing Music

1. Touch  in the home screen and select **Music**.
2. Touch a category, such as Artists or Albums, to find the song you want to play.
3. Touch the song to play it back. When the song is playing, touch the album artwork to display more options.



Number	Function
1	Song and artist information.
2	Album artwork.
3	Track information.
4	Touch to enter dolby effect.
5	Touch to toggle repeat mode: sequential, repeating current song, or repeating all songs.

6	Touch to play the current playlist in shuffle mode, where tracks are played in random order.
7	Playback control. Skip songs or pause and resume playback. Drag the slider to jump to any part of the song
8	Add the song to the Favorites.
9	Share the song.
10	Get more options.

Connecting to PC

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in either direction. Your device stores these files in internal storage or on a removable microSDHC card.

1. Touch and hold the status bar across the top of the screen and flick down.
2. Touch  (**Connected as** [current connection mode]).
3. Choose one of the following options:
 - ▶ **Charge only:** Charge your phone via USB.
 - ▶ **USB mass storage:** Transfer files between your computer and your Android device.
 - ▶ **Install driver:** Install the driver needed for connecting your phone to your PC.

- ▶ **Media device (MTP):** Transfer media files on Windows® or Mac®.
- ▶ **Camera (PTP):** Transfer photos using camera software.

To disconnect the device from the computer, simply unplug the USB cable when you're finished.

Connecting to the Internet

Connecting via Wi-Fi

1. Touch the **Home Key** >  > **Settings** > **Wi-Fi**.
2. Slide the ON/OFF switch if Wi-Fi is off.

Your phone automatically searches for Wi-Fi networks in range and displays their names and security settings. Your phone also connects to previously linked networks when they are in range.

3. Touch a network name to connect to it.

If the network is secured, enter a password or other credentials. (Ask your network administrator for details.)

Connecting via Mobile Network

To connect to the Internet via mobile network you can use the default Access Point Names (APN). If you want to add a new APN, please contact the service provider to get the necessary

information. Do not change the default settings unless instructed by the service provider. Otherwise the service might stop working.

1. Touch the **Home Key** >  > **Settings** > **More** > **Cellular networks** > **Access Point Names**.
2. Touch .
3. Touch each item to enter the information you get from your service provider.
4. Touch the **Menu Key** > **Save** to complete.

Connecting via Bluetooth Tethering

You can connect to a device that supports Bluetooth tethering to share the device's Wi-Fi or mobile data service with your phone.

1. Enable the device's Bluetooth and Bluetooth tethering capabilities. Ensure that the device is 'visible'. Refer to the device's user guide for more information.
2. Touch  in the home screen and select **Settings** > **Bluetooth**.
3. Turn Bluetooth on and touch the device's ID to pair the phone with the device. Enter a passcode if prompted.
4. Touch the ID of the paired device to connect with it. As the  icon in the status bar turns blue, your phone is able to use data connection shared by the device.

Extending Battery Life

There are several things you can do to make your battery last longer.

- Turn on Wi-Fi, Bluetooth, GPS, mobile data, auto-sync only when you need to.
- Lower the screen brightness.
- Use Bluetooth tethering or USB tethering (when you have a cable) instead of portable Wi-Fi hotspot to share your phone's data service.
- From the home screen, touch  > **Task Manager** and close the apps you do not need but still run in the background.
- From the home screen, touch  > **Settings > Sound & notification > Other sounds** and uncheck **Vibrate on touch**.

Freeing Up Memory Space

Use **Task Manager** to free up memory space and optimize system speed.

1. From the home screen, touch  > **Task Manager**.
2. Touch the **Tasks** tab and touch the  button next to the application you do not need.
You can also touch **Close all** to stop all running

applications.

Managing the Phone Storage

Clearing Browser's Local Content

1. From the home screen, touch  > **Browser**.
2. Touch the **Menu Key > Settings > Privacy & security**.
3. Touch **Clear cache**, **Clear history**, and **Clear all cookie data**.

Product Safety Information

	Don't make or receive handheld calls while driving. Never text while driving.		Don't use at gas stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause choking.		Do not dispose of your phone in fire.
	Your phone can produce a loud sound.		To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Avoid contact with anything magnetic.		Avoid extreme temperatures.
	Keep away from		Avoid contact with liquid. Keep

	pacemakers and other electronic medical devices.		your phone dry.
	Turn off when asked to in hospitals and medical facilities.		Don't take your phone apart.
	Turn off when told to in aircrafts and airports.		Only use approved accessories.
	Turn off when near explosive materials or liquids.		Don't rely on your phone for emergency communications.

Declaration of RoHS Compliance

To minimize the environmental impacts and take more responsibilities to the earth we live on, this document shall serve as a formal declaration that the Vodafone Smart ultra 6 manufactured by ZTE CORPORATION is in compliance with the Directive 2011/65/EU of the European Parliament - RoHS (Restriction of Hazardous Substances) with respect to the following substances:

1. Lead (Pb)
2. Mercury (Hg)
3. Cadmium (Cd)
4. Hexavalent Chromium (Cr (VI))
5. Polybrominated biphenyls (PBBs)
6. Polybrominated diphenyl ethers (PBDEs)

The Vodafone Smart ultra 6 manufactured by ZTE CORPORATION meets the requirements of EU 2011/65/EU.

Disposal of Your Old Appliance



1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2012/19/EU.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

For this product's recycling information based on WEEE directive, please send an e-mail to wEEE@zte.com.cn

FCC Regulations:

This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Note:

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information (SAR)

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States.

During SAR testing, this device was set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage against the head with no separation, and near the body with the separation of 10 mm. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless devices employing a unit of measurement is known as the Specific Absorption Rate, or SAR.

The SAR limit set by the FCC is 1.6W/kg.

This device is complied with SAR for general population /uncontrolled exposure limits in ANSI/IEEE C95.1-1992 and had been tested in accordance with the measurement methods and procedures specified in IEEE1528. This device has been tested and meets the FCC RF exposure guidelines when tested with the device directly contacted to the body.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF

exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: SRQ-995N.

For this device, the highest reported SAR value for usage against the head is 0.27 W/kg, for usage near the body is 1.37 W/kg.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirements.

SAR compliance for body-worn operation is based on a separation distance of 10 mm between the unit and the human body. Carry this device at least 10 mm away from your body to ensure RF exposure level compliant or lower to the reported level. To support body-worn operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a separation of 10 mm between this device and your body.

RF exposure compliance with any body-worn accessory, which contains metal, was not tested and certified, and use such body-worn accessory should be avoided.