

# Internal Photographs

Internal View of EUT-1




Internal View of EUT-2 (ANT1)




Internal View of EUT-3 (ANT0)



Internal View of EUT-4

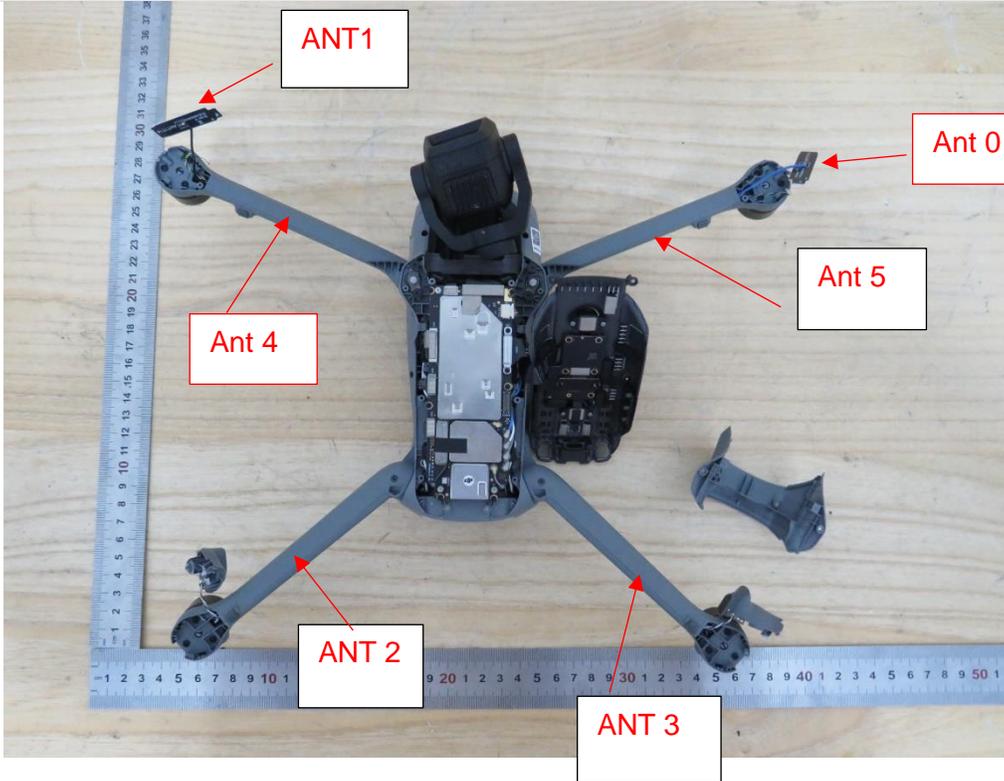

Internal View of EUT-5

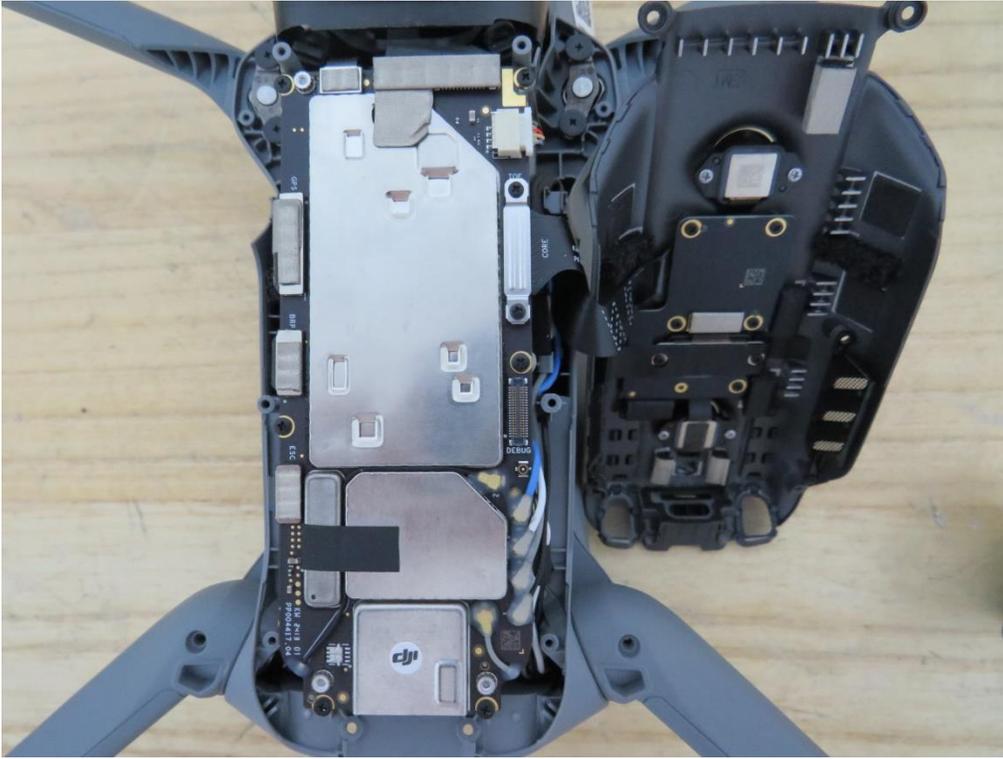


Internal View of EUT-6




Internal View of EUT-7




Internal View of EUT-8

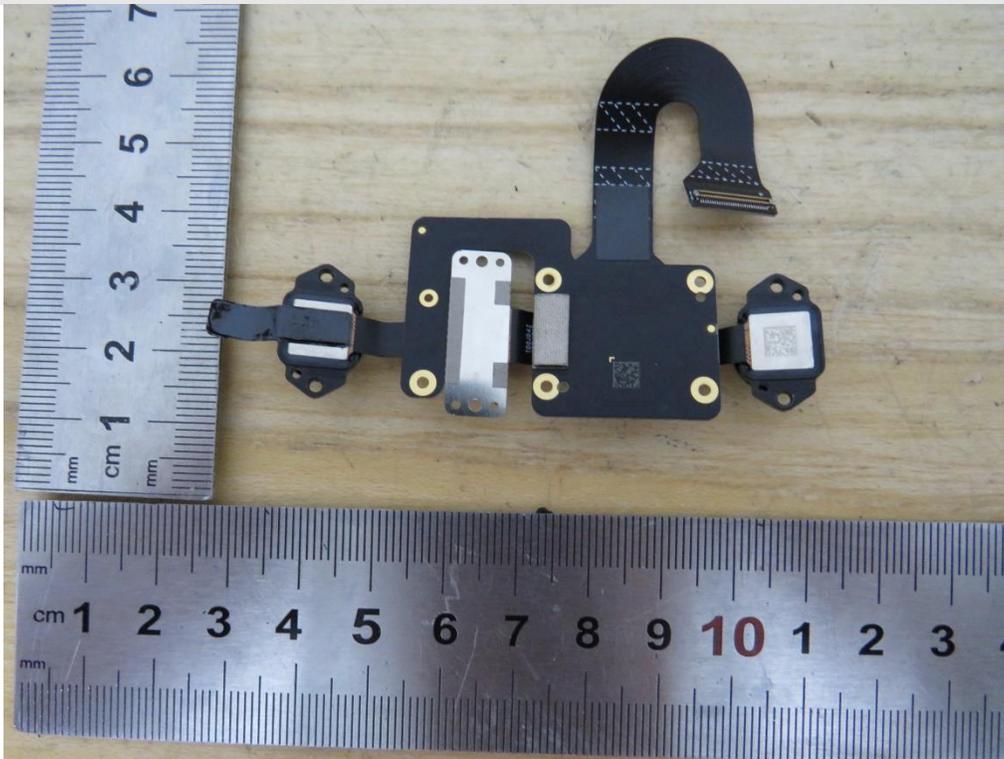

Internal View of EUT-9

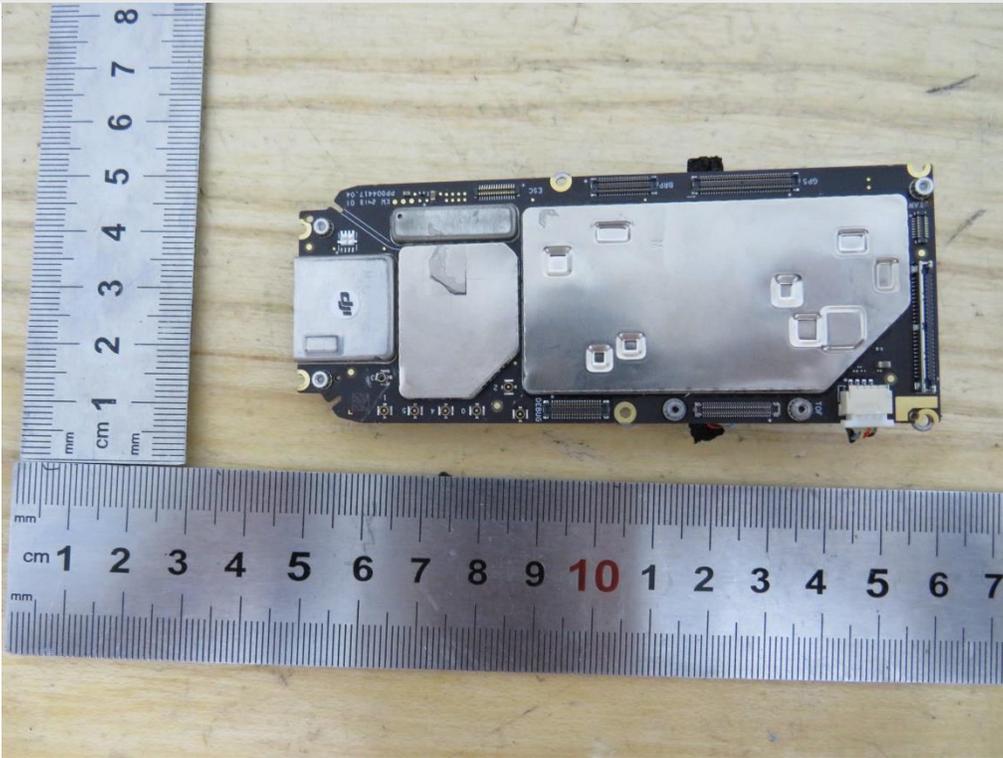


Internal View of EUT-10

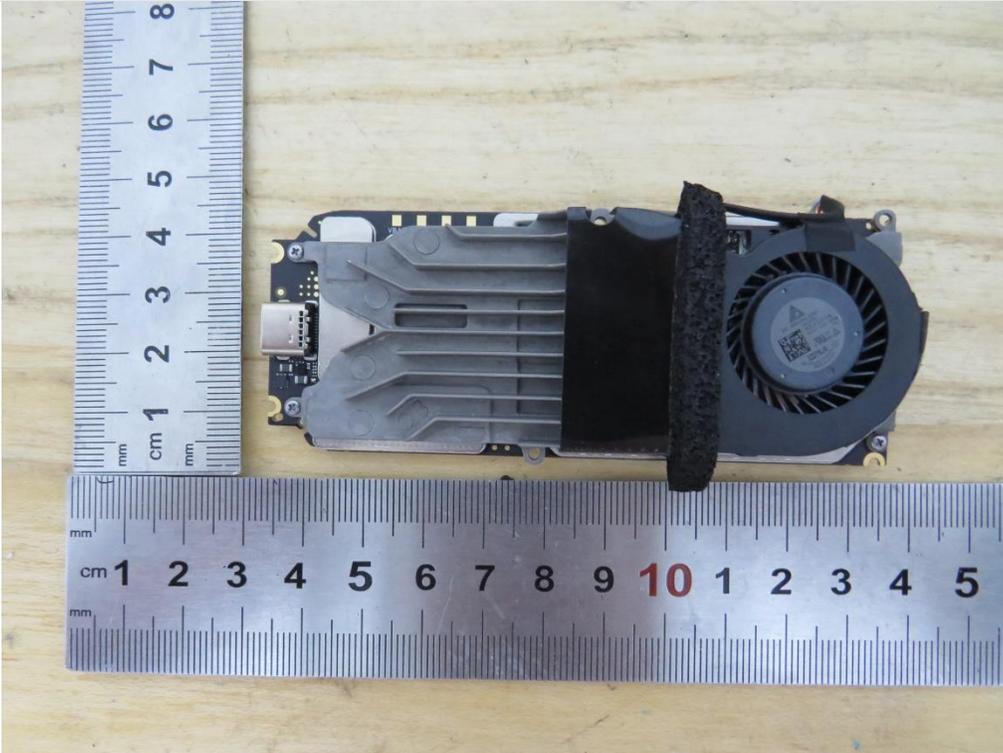


**Internal View of EUT-11**




**Internal View of EUT-12**

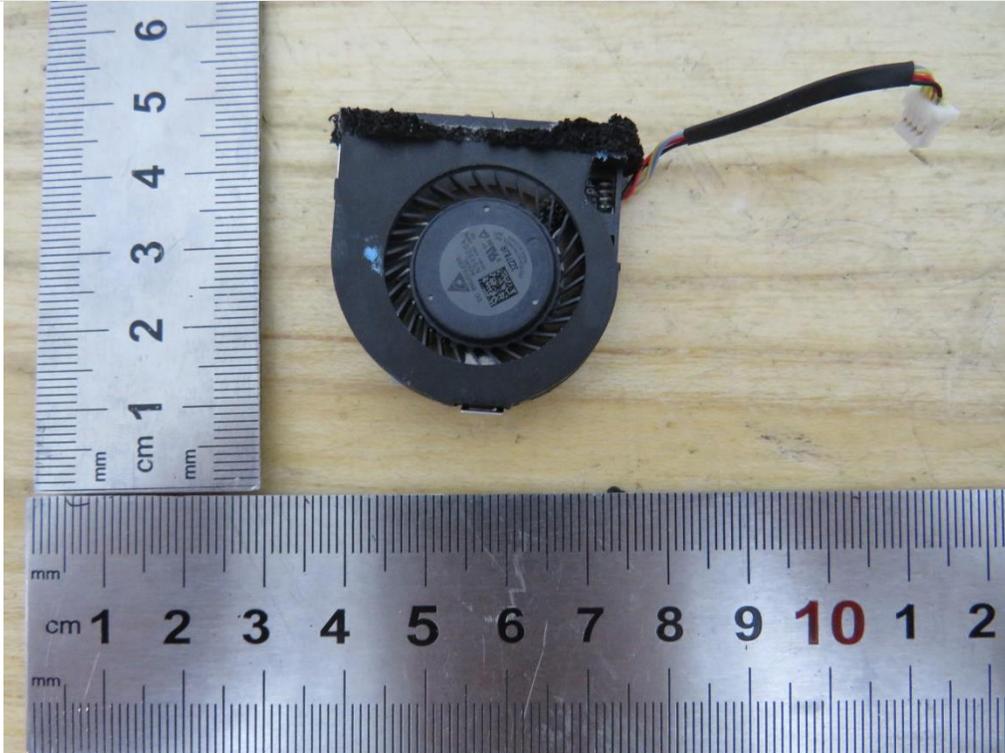


Internal View of EUT-13

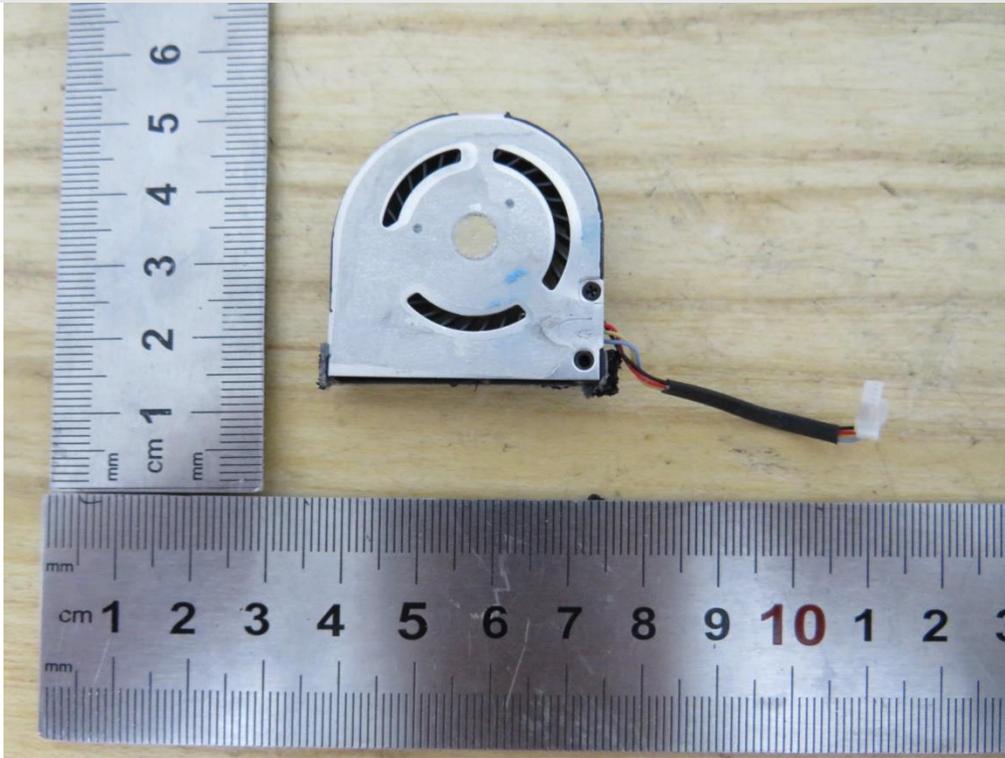


Internal View of EUT-14

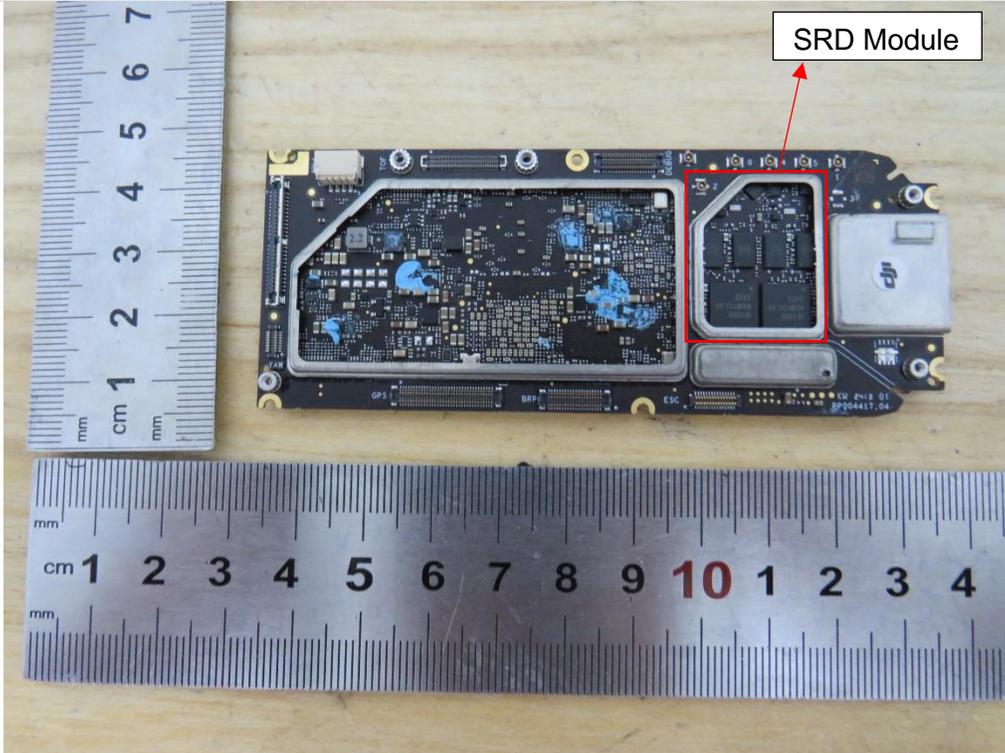


Internal View of EUT-15

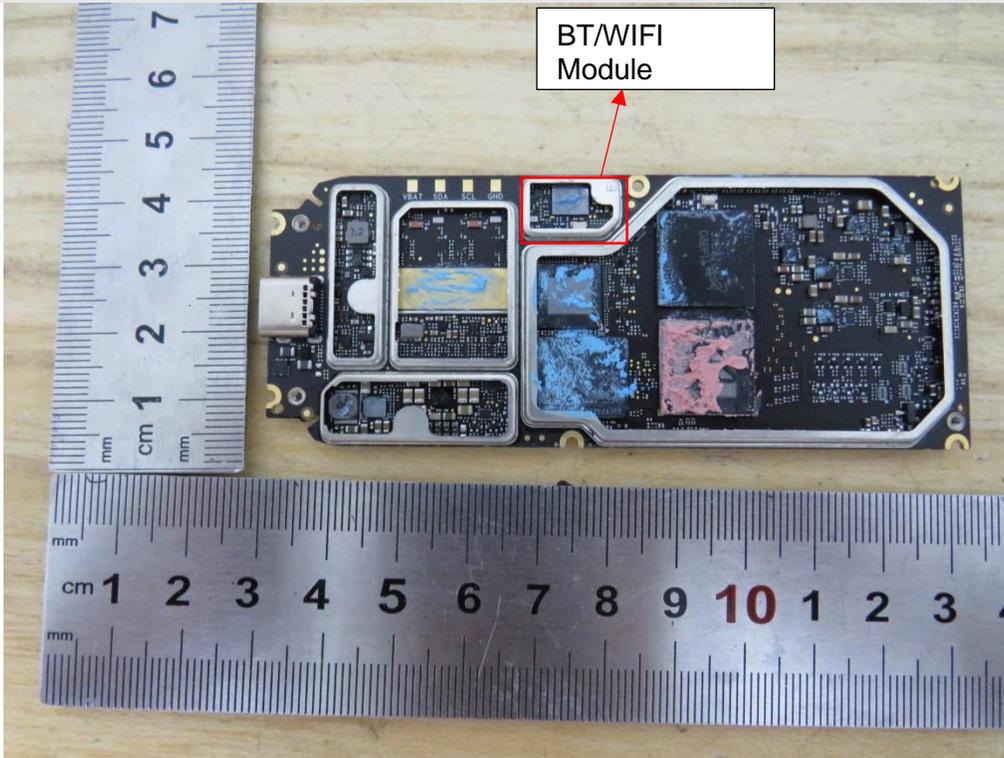


Internal View of EUT-16

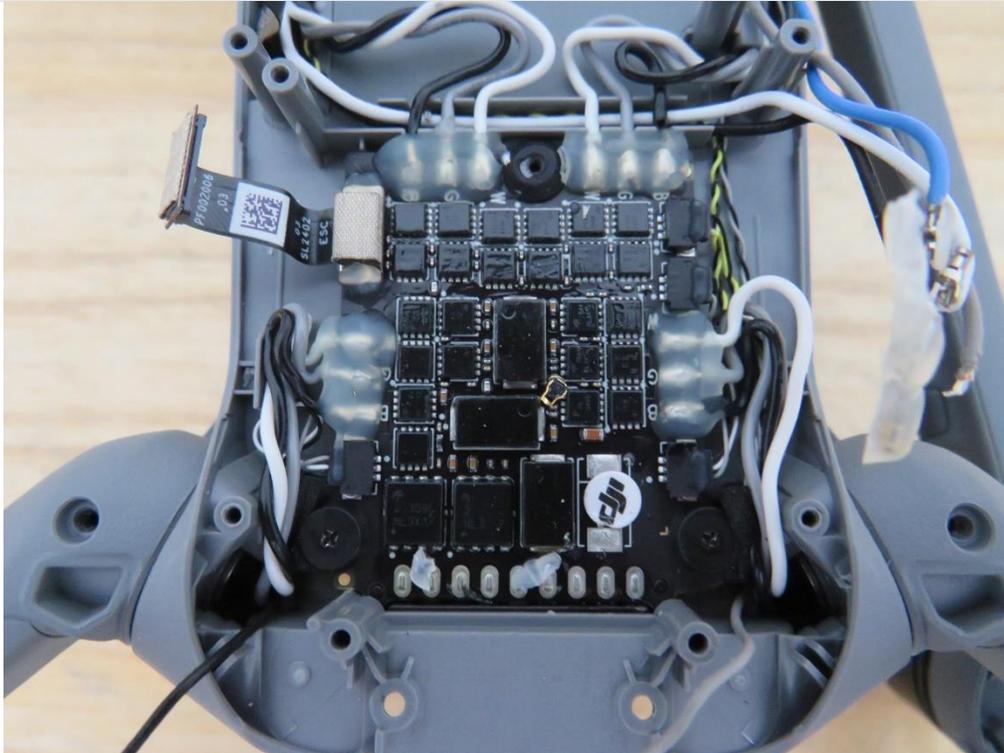


Internal View of EUT-17

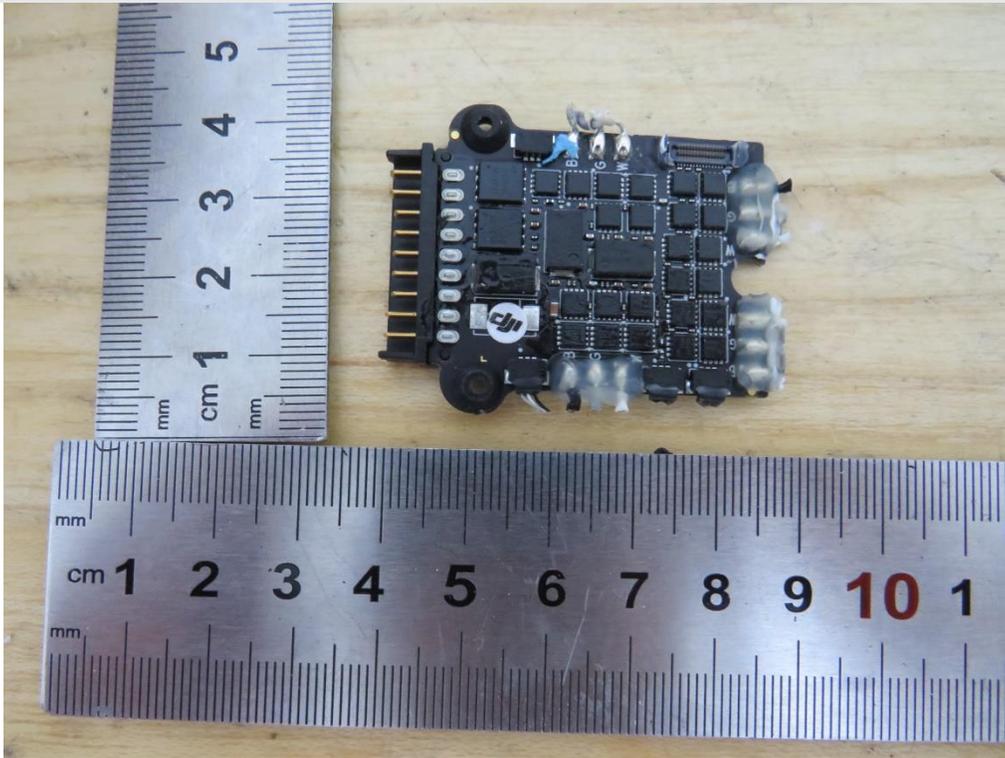

Internal View of EUT-18

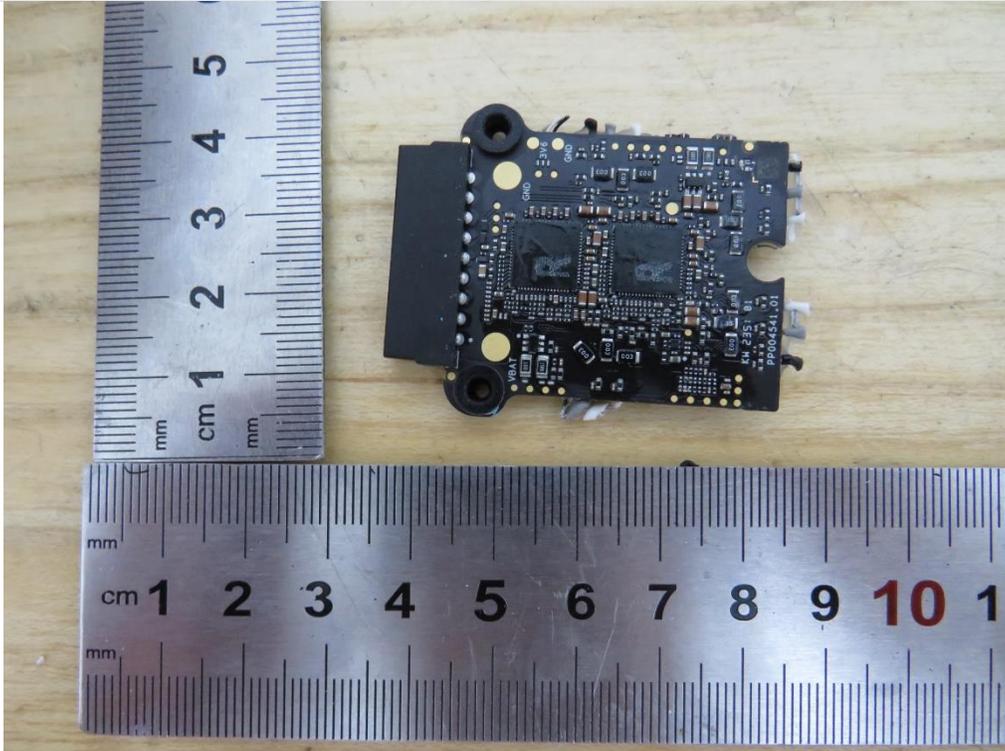


Internal View of EUT-19

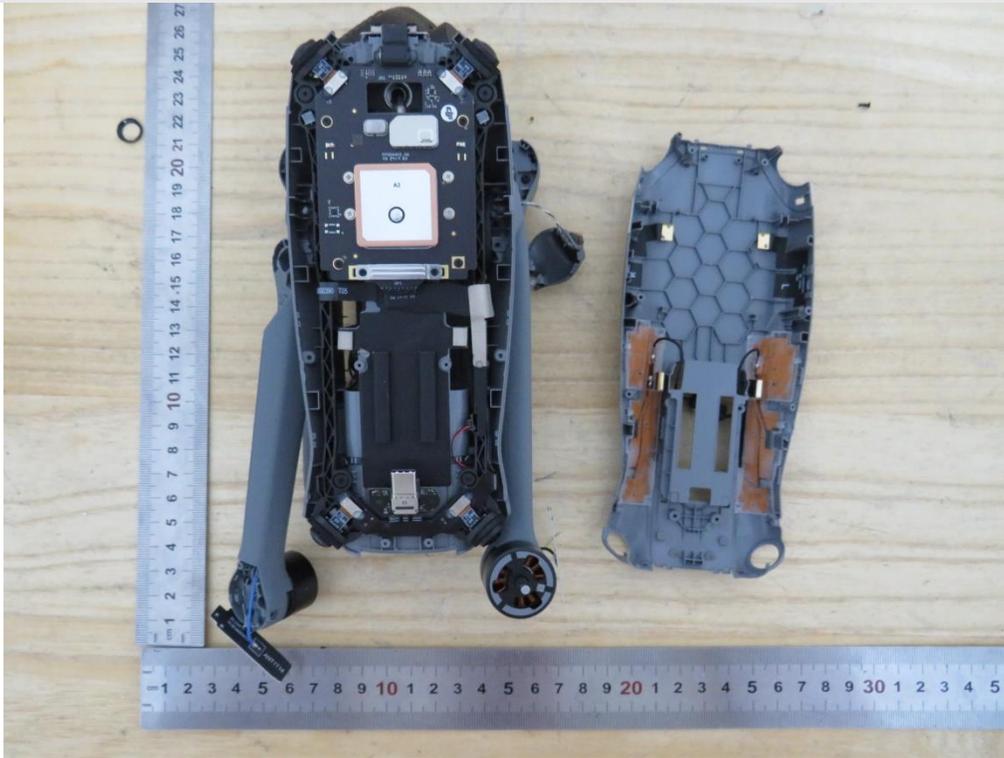


Internal View of EUT-20


The 4G function has been disabled via software

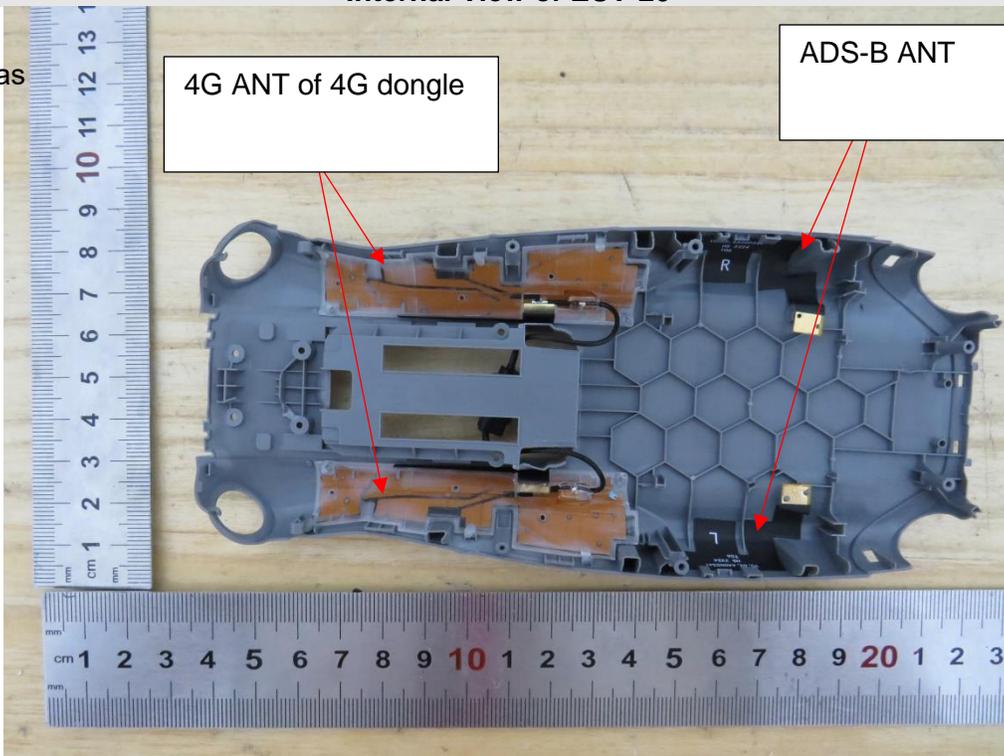


Internal View of EUT-21

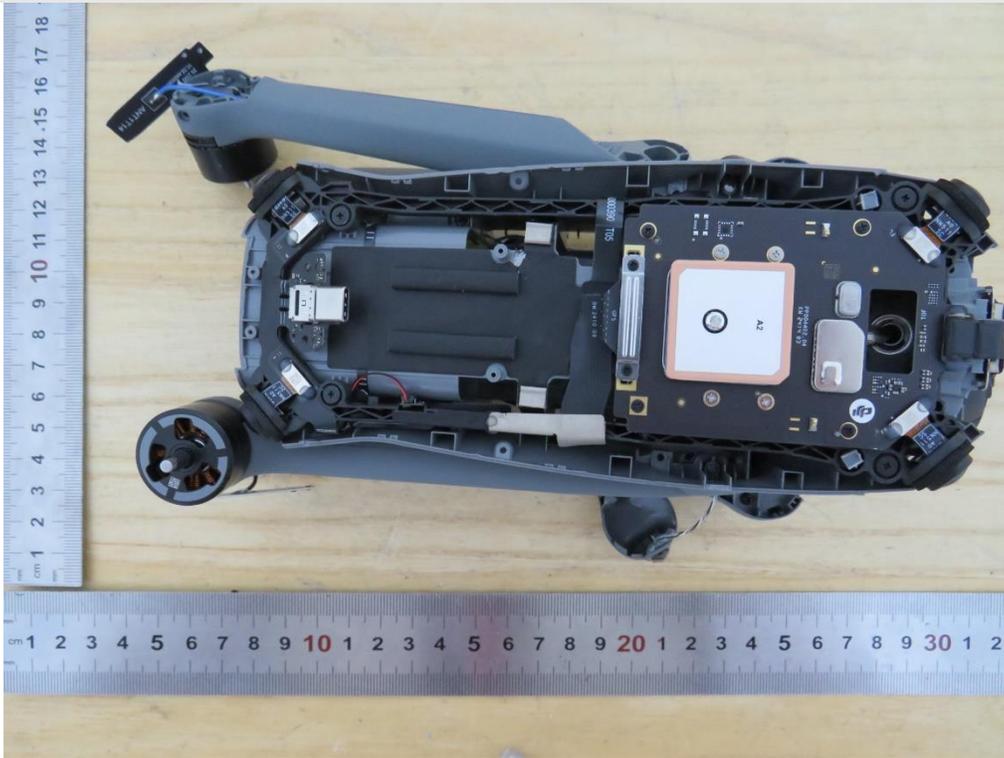


Internal View of EUT-22

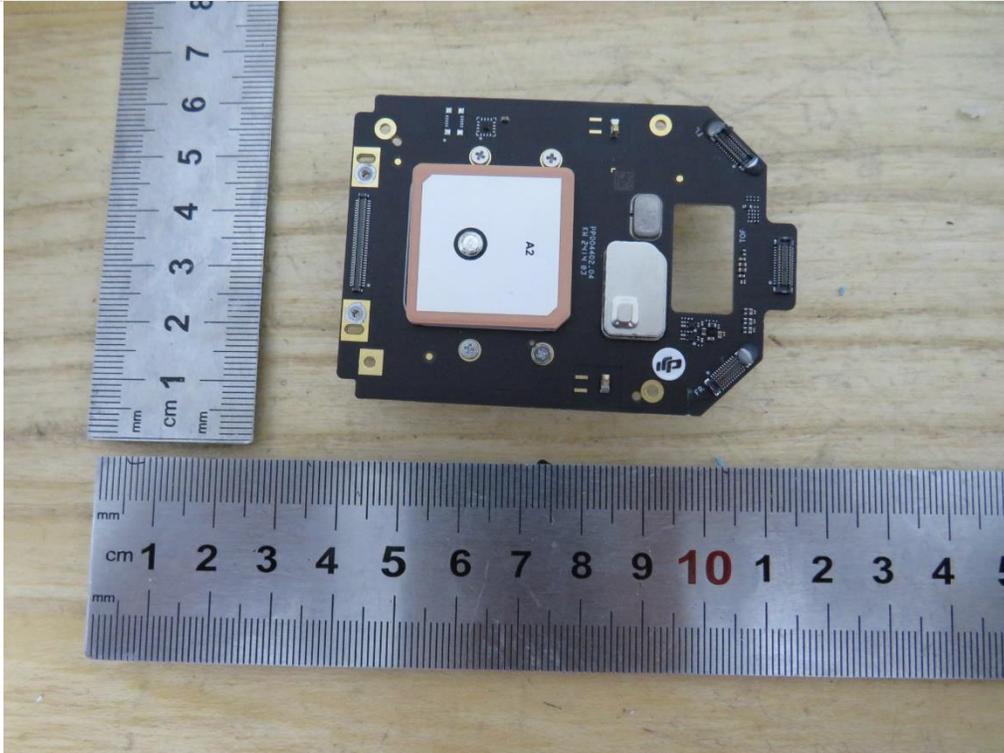


Internal View of EUT-23

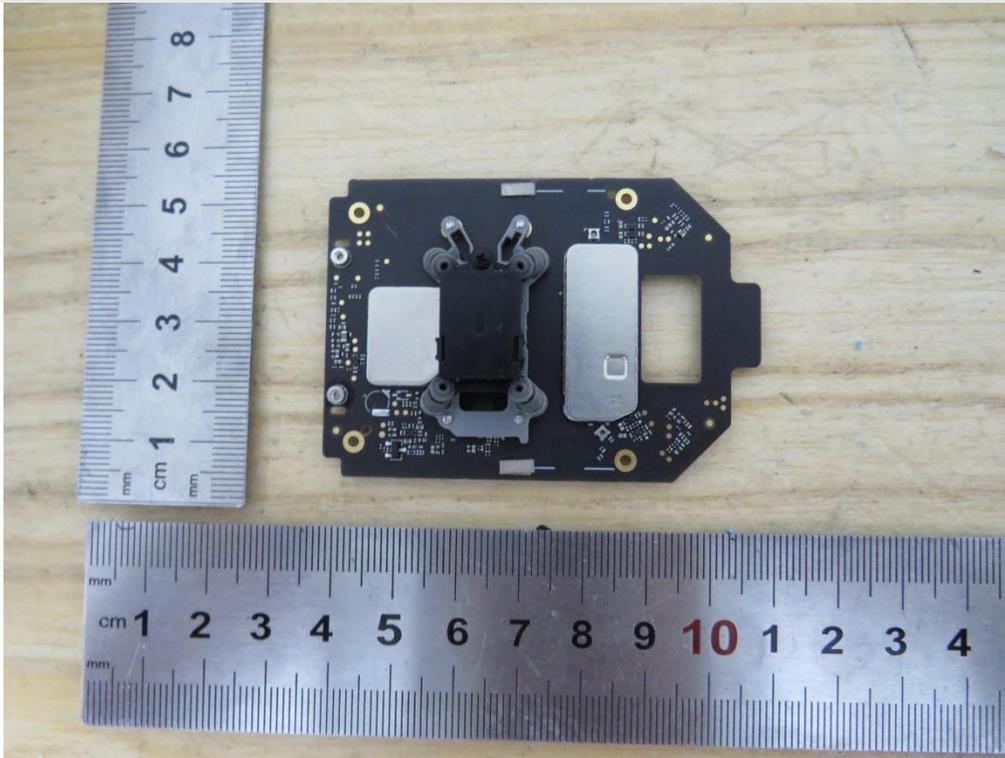

Internal View of EUT-24

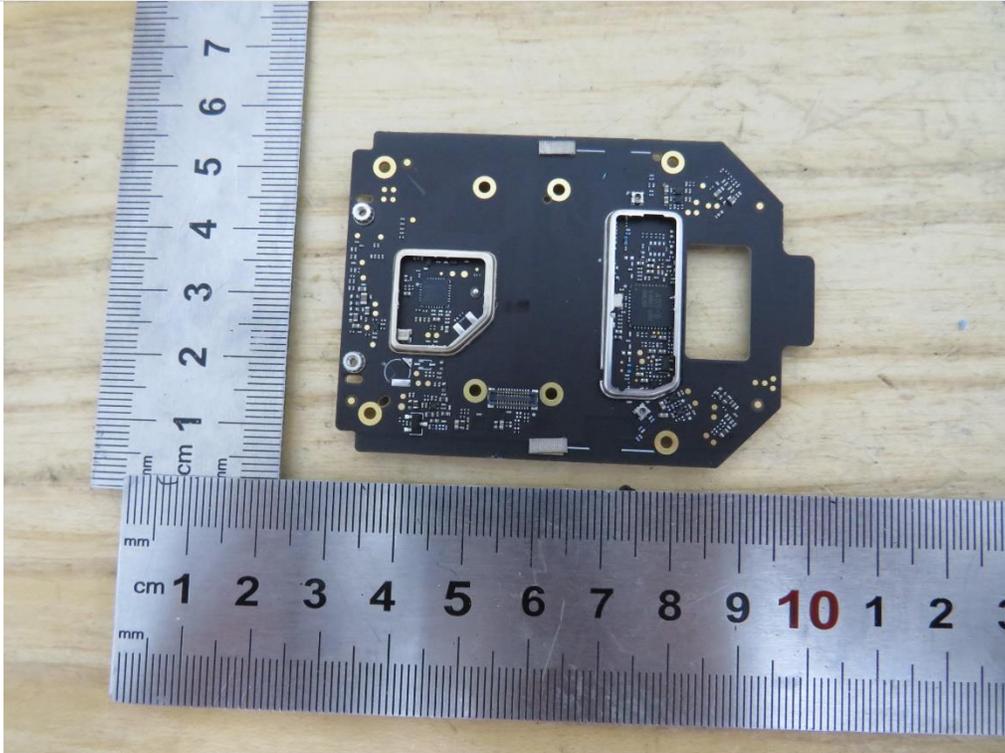

Internal View of EUT-25

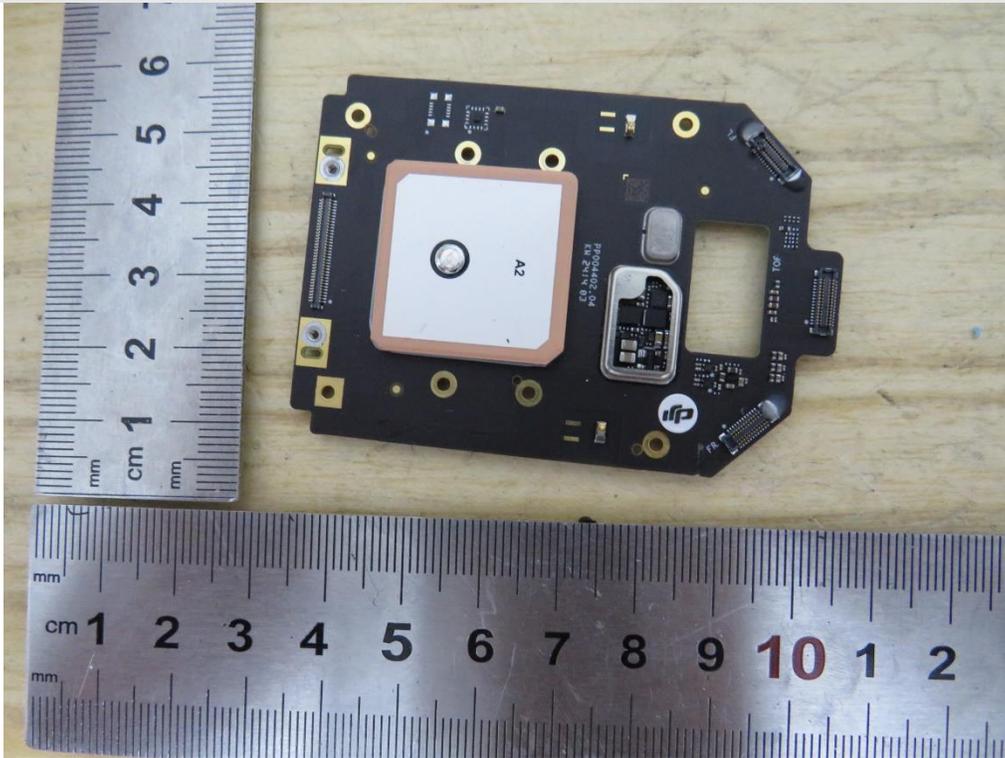


Internal View of EUT-26



Internal View of EUT-27




Internal View of EUT-28

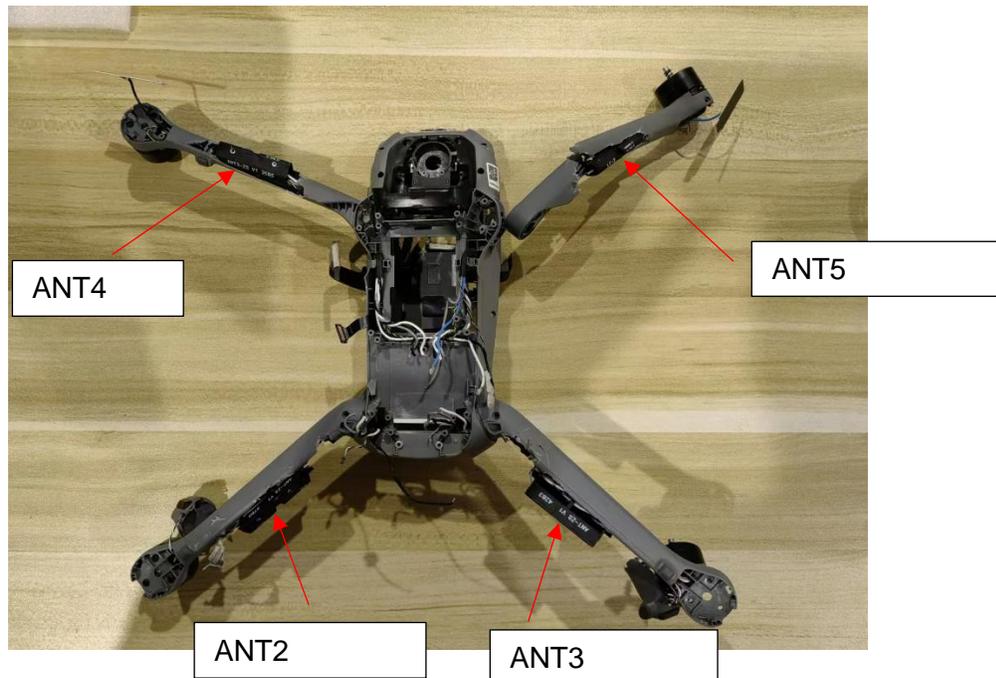

Internal View of EUT-29(ANT3)



Internal View of EUT-30(ANT3)

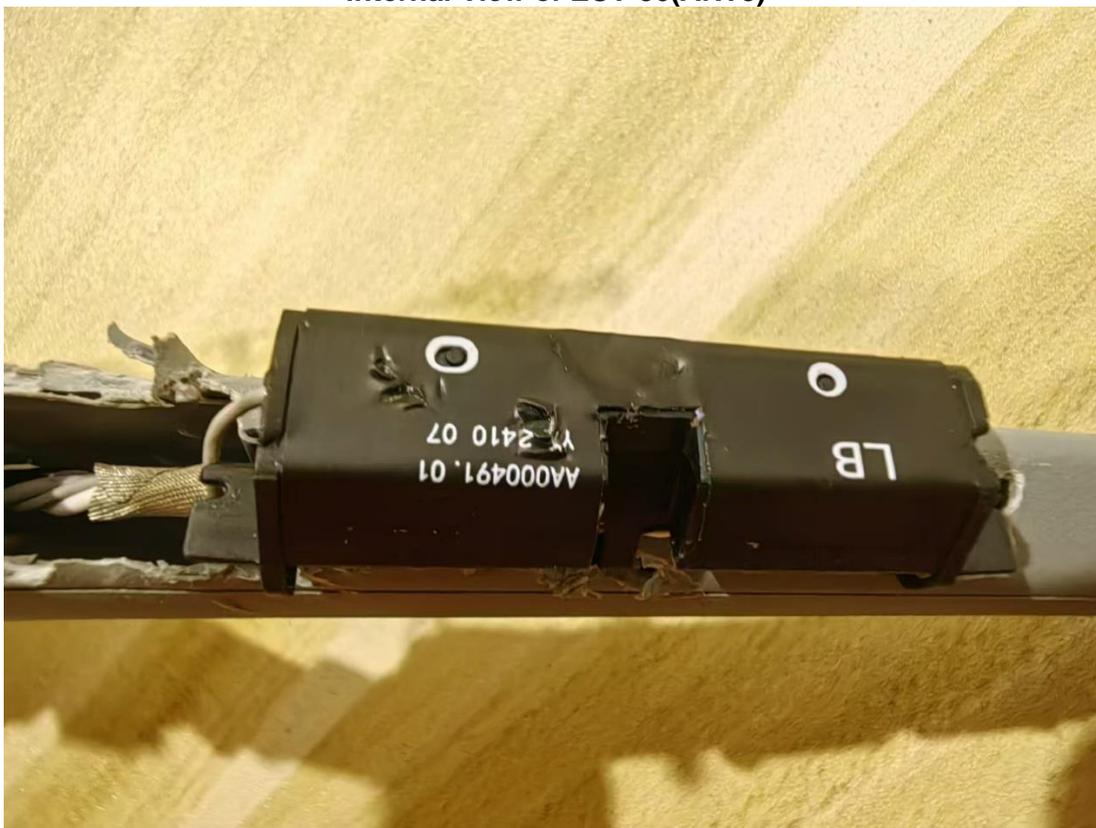

**Internal View of EUT-31 (ANT2)**




**Internal View of EUT-32(ANT2)**



Internal View of EUT-33 (ANT4)



Internal View of EUT-34 (ANT4)

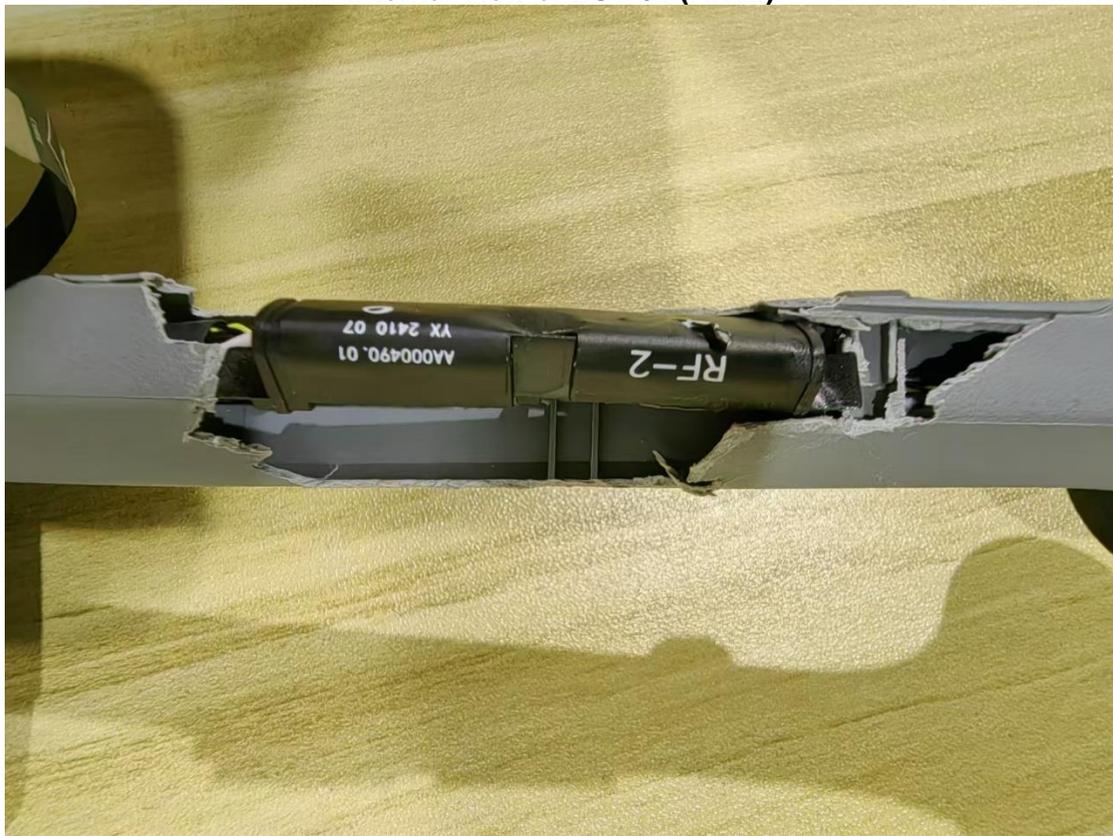

**Internal View of EUT-35 (ANT5)**



**Internal View of EUT-36 (ANT5)**

