



Internal View of EUT-77

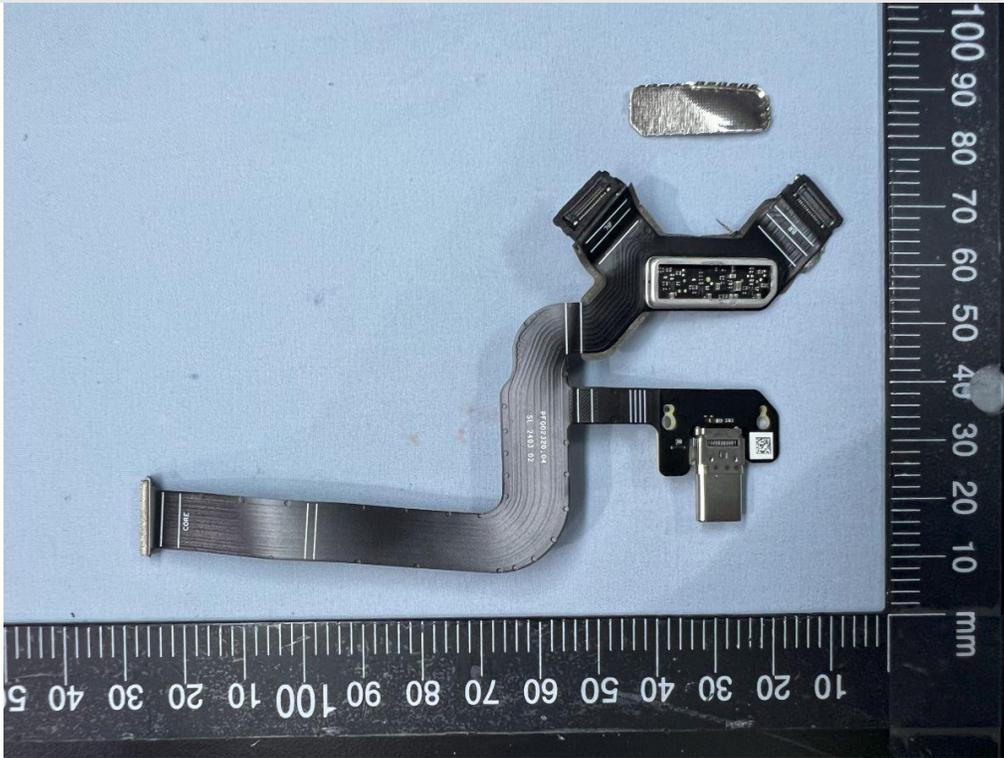

Internal View of EUT-78

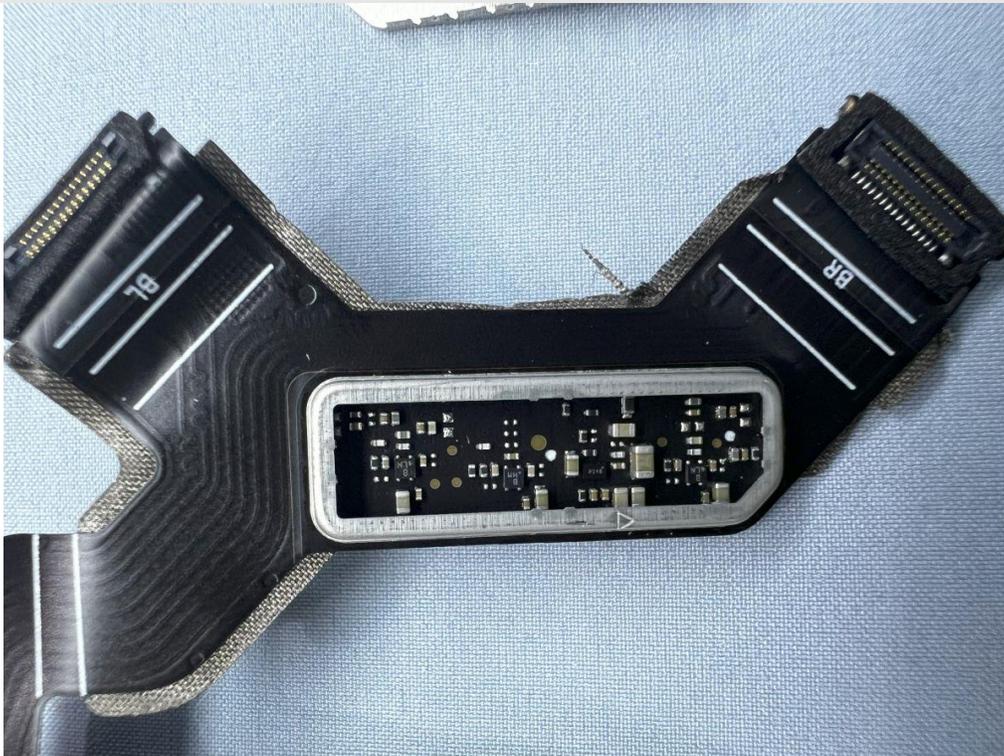


Internal View of EUT-79




Internal View of EUT-80




Internal View of EUT-81

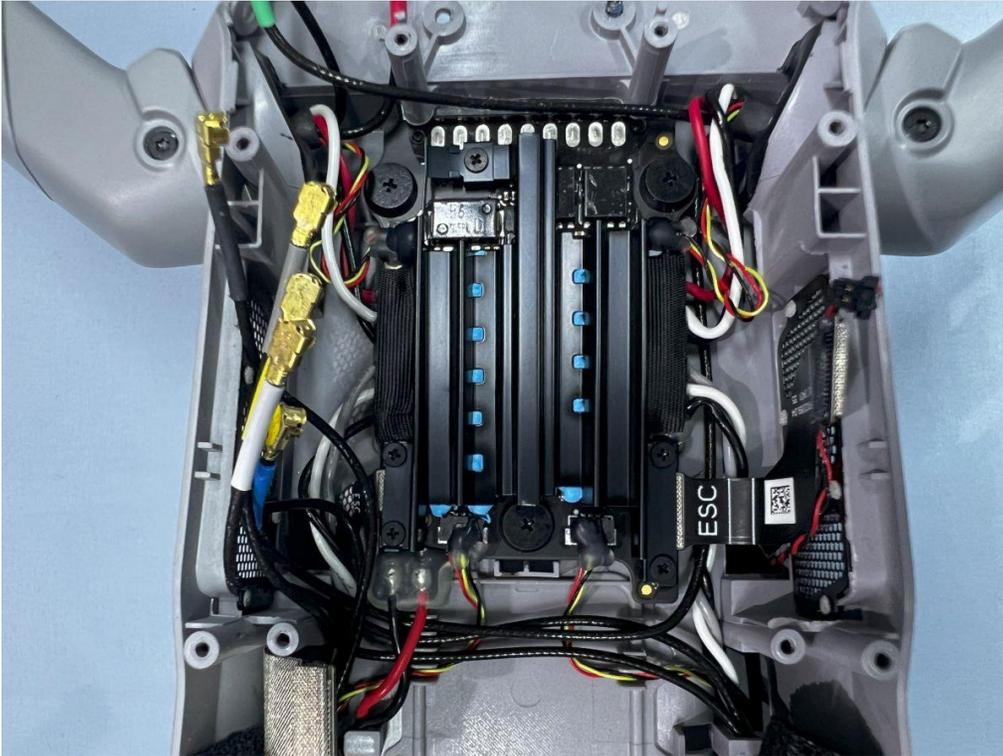


Internal View of EUT-82

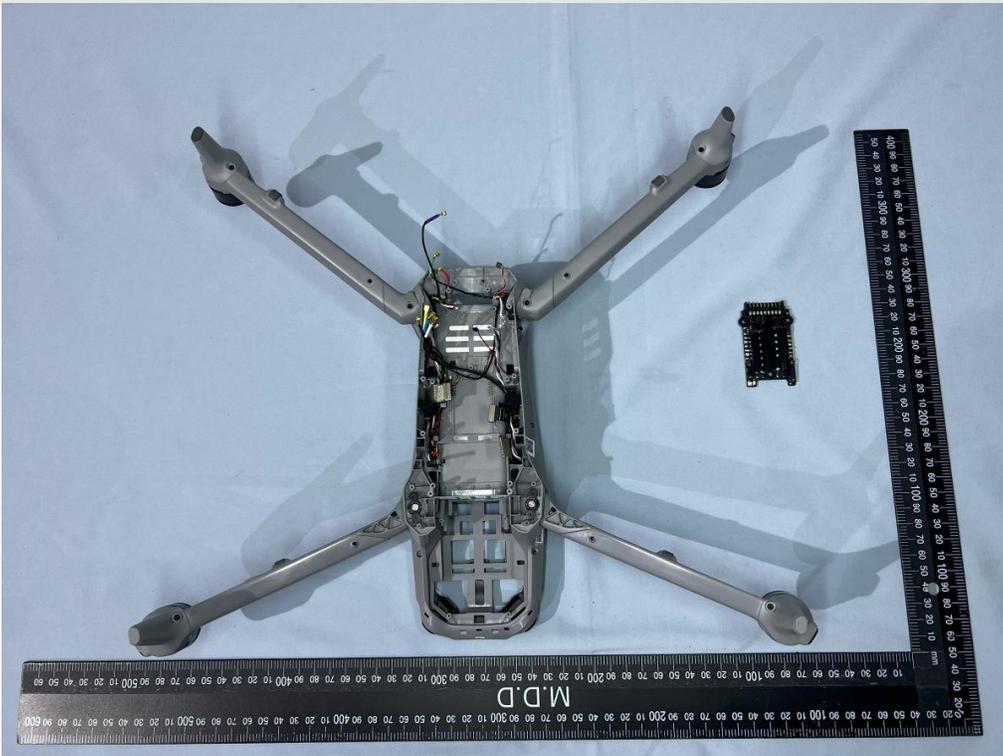


Internal View of EUT-83

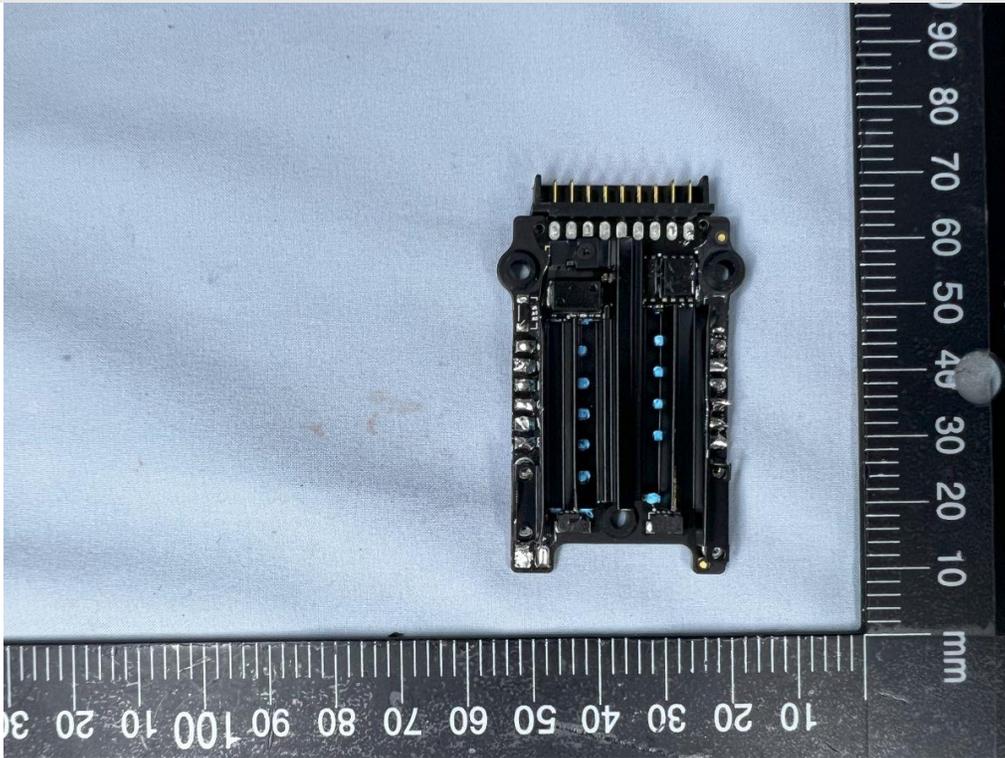


Internal View of EUT-84

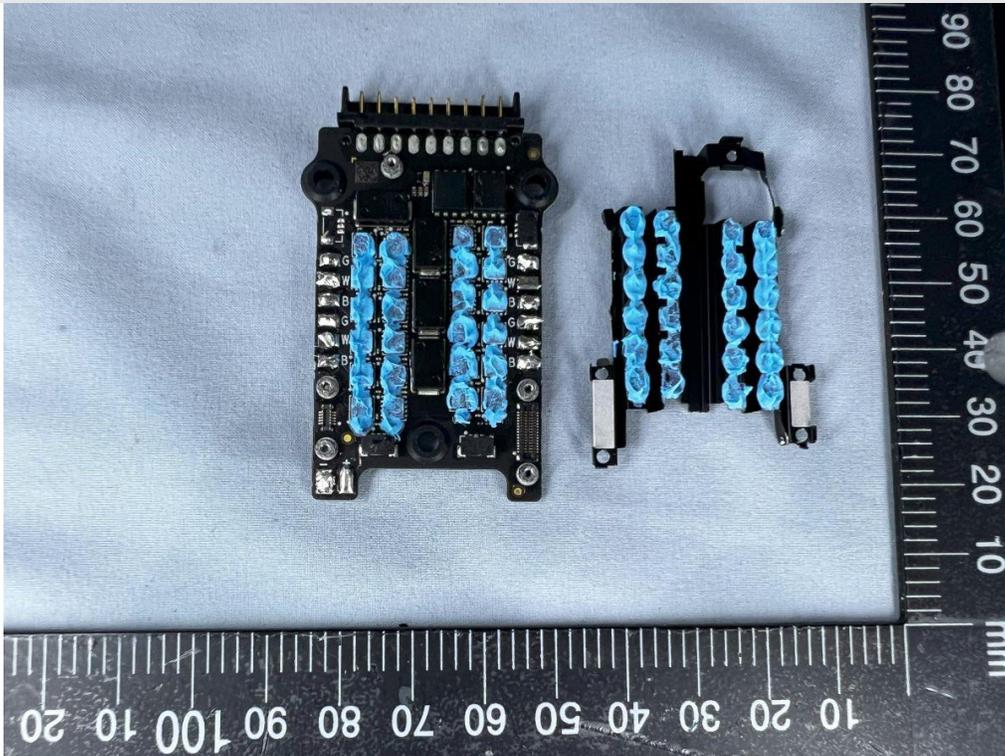


Internal View of EUT-85

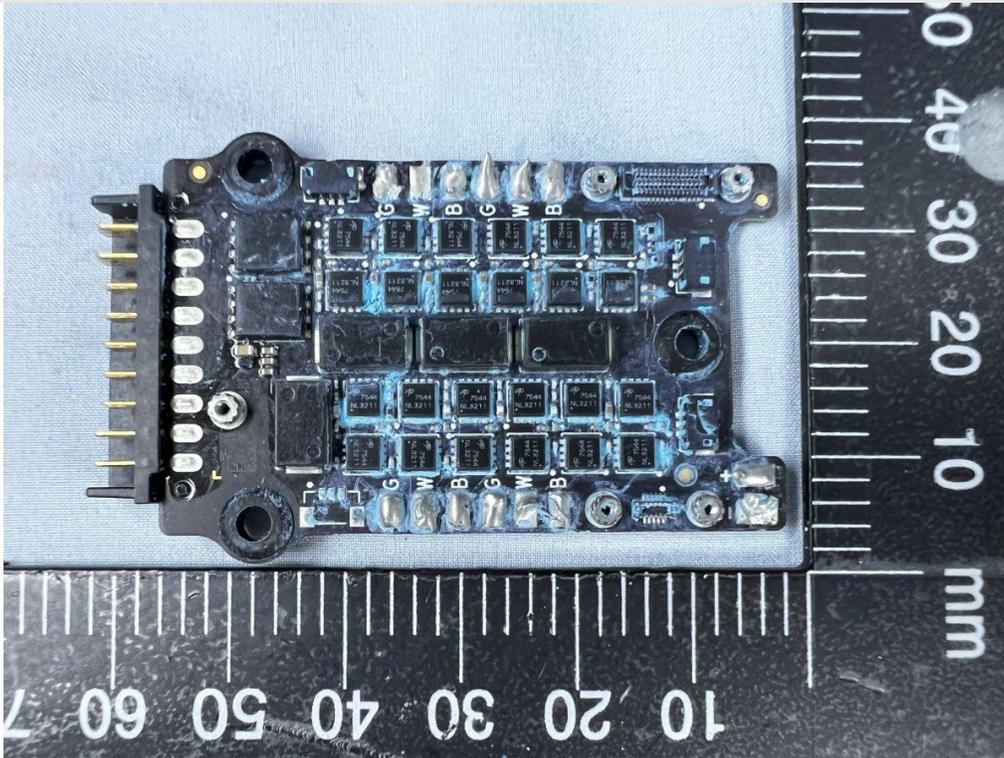

Internal View of EUT-86

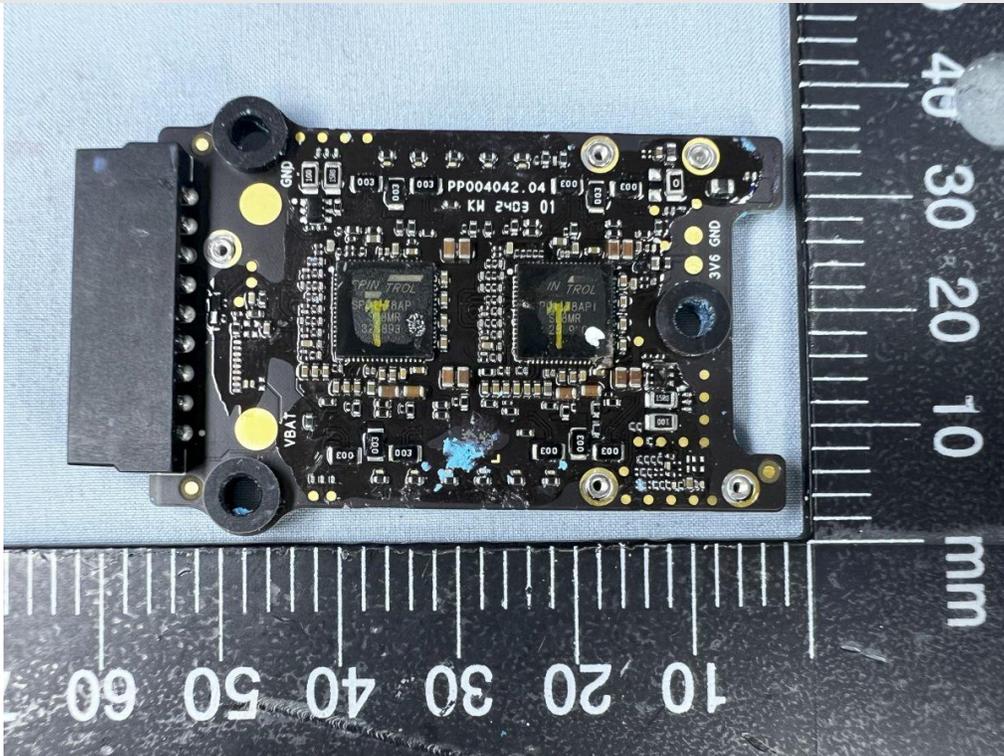

Internal View of EUT-87

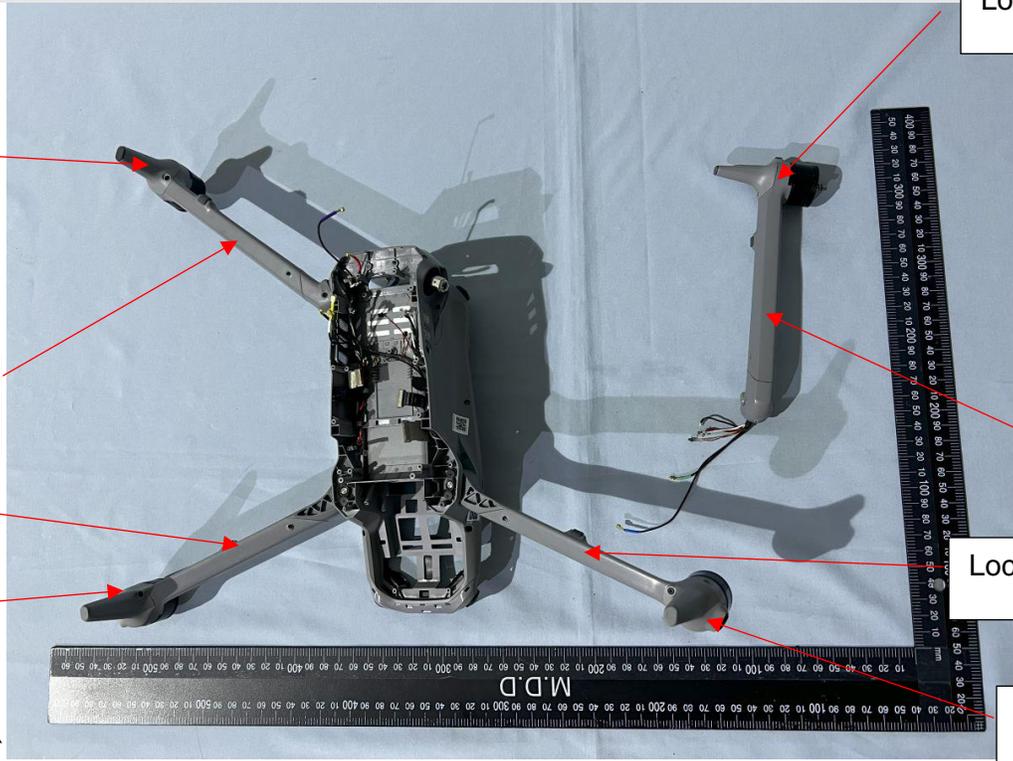

Location of ANT2

Location of ANT3

Location of ANT7

Location of ANT1


Location of ANT5

Location of ANT4

Location of ANT6

Location of ANT0

Internal View of EUT-88

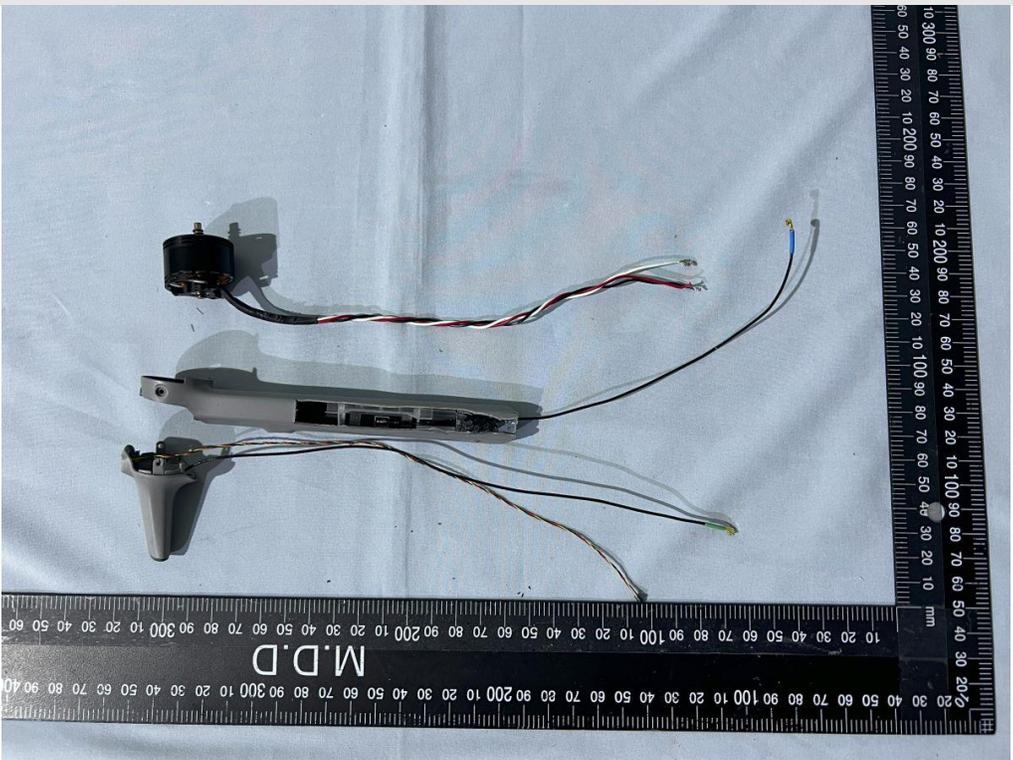

Location of ANT2

Location of ANT3

Location of ANT7

Location of ANT1

Location of ANT5

Location of ANT4

Location of ANT6

Location of ANT0


Internal View of EUT-89(ANT5)



Internal View of EUT-90(ANT5)



Internal View of EUT-91 (ANT5)

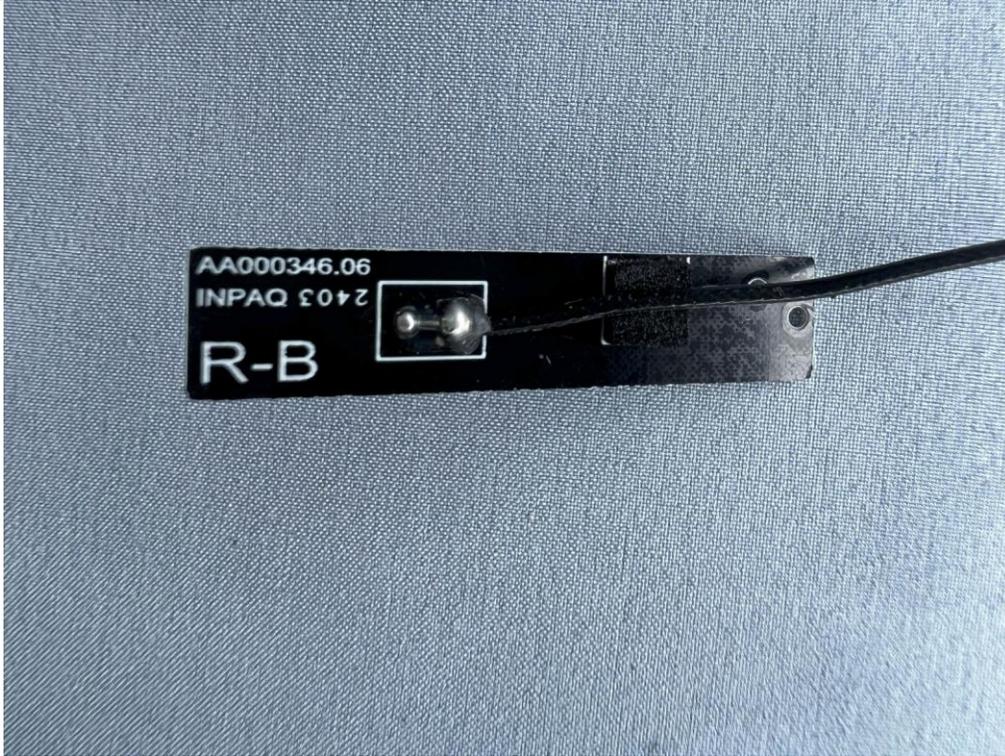


Internal View of EUT-92 (ANT5)



Internal View of EUT-93(ANT4)




Internal View of EUT-94(ANT4)

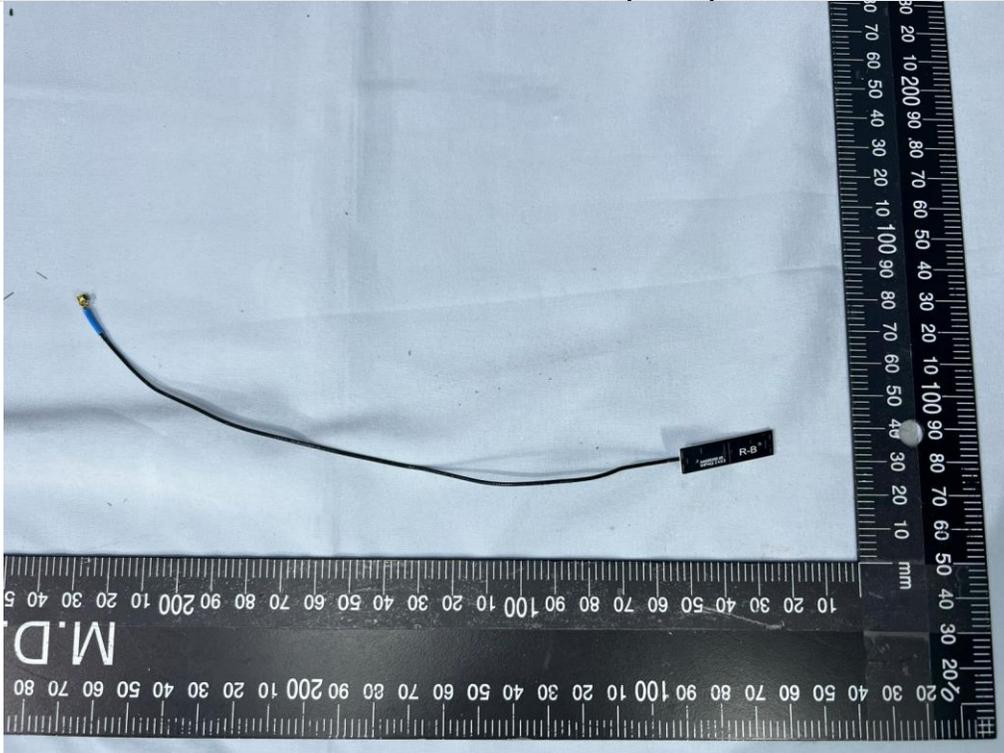


Internal View of EUT-95(ANT4)



Internal View of EUT-96(ANT4)

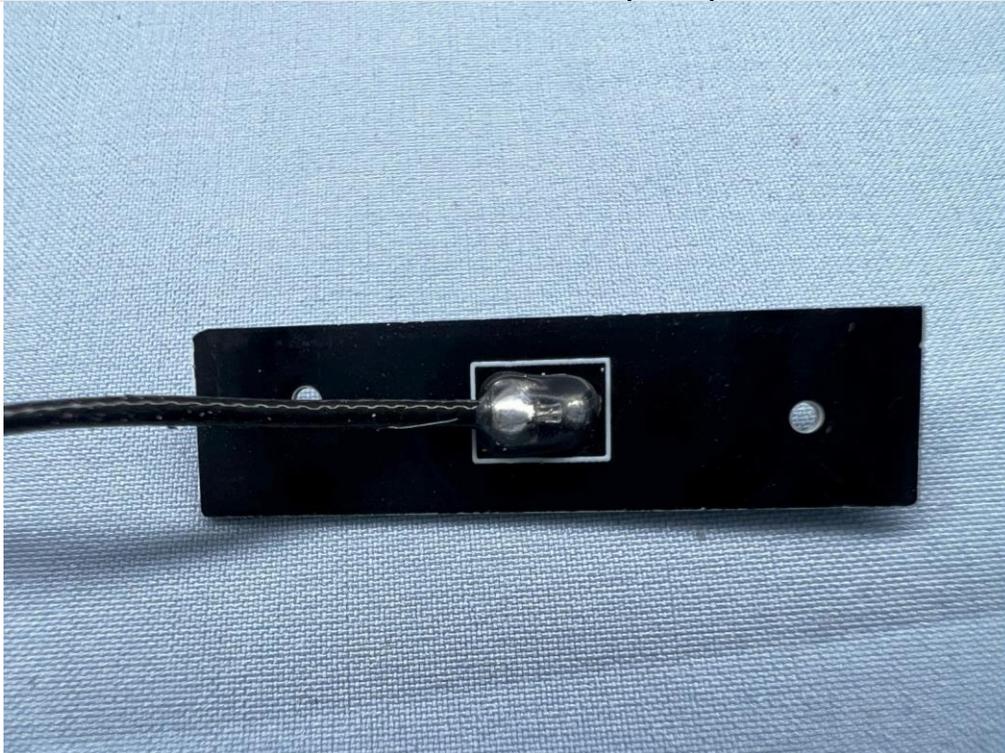

Internal View of EUT-97

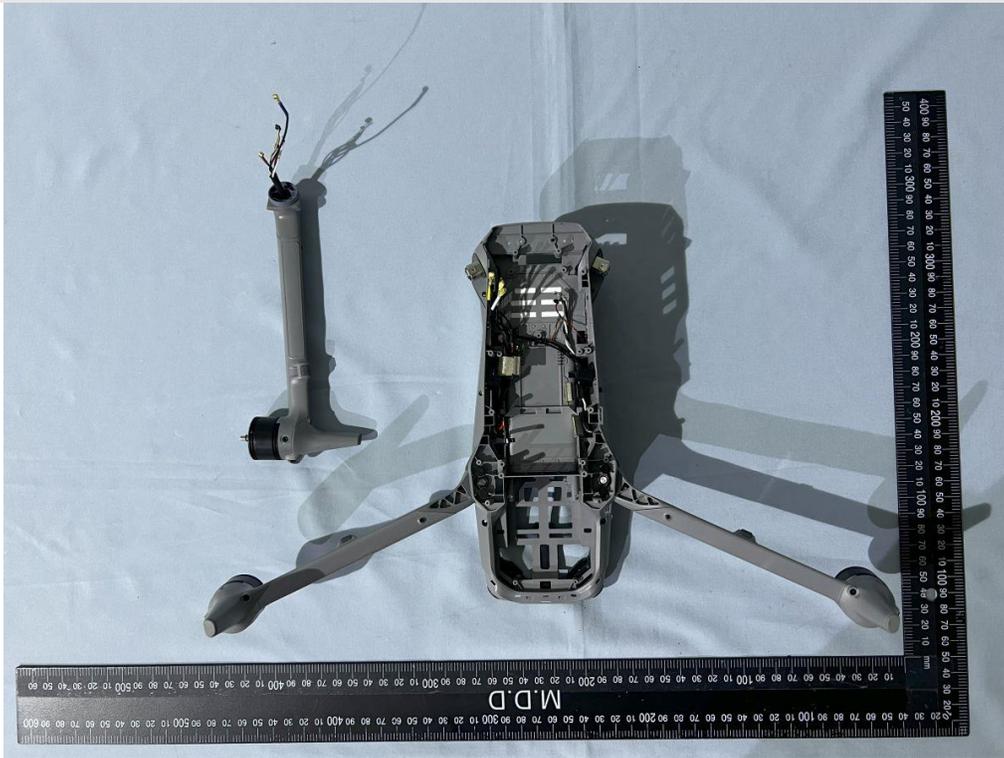


Internal View of EUT-98




Internal View of EUT-99(ANT2)




Internal View of EUT-100(ANT2)

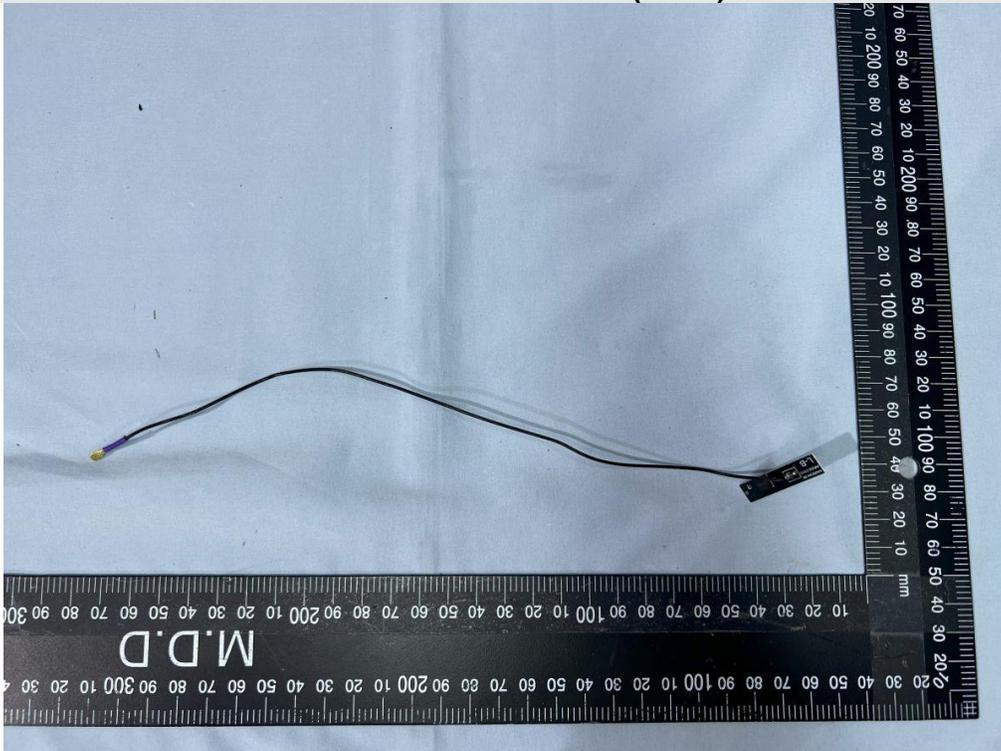

Internal View of EUT-101(ANT2)

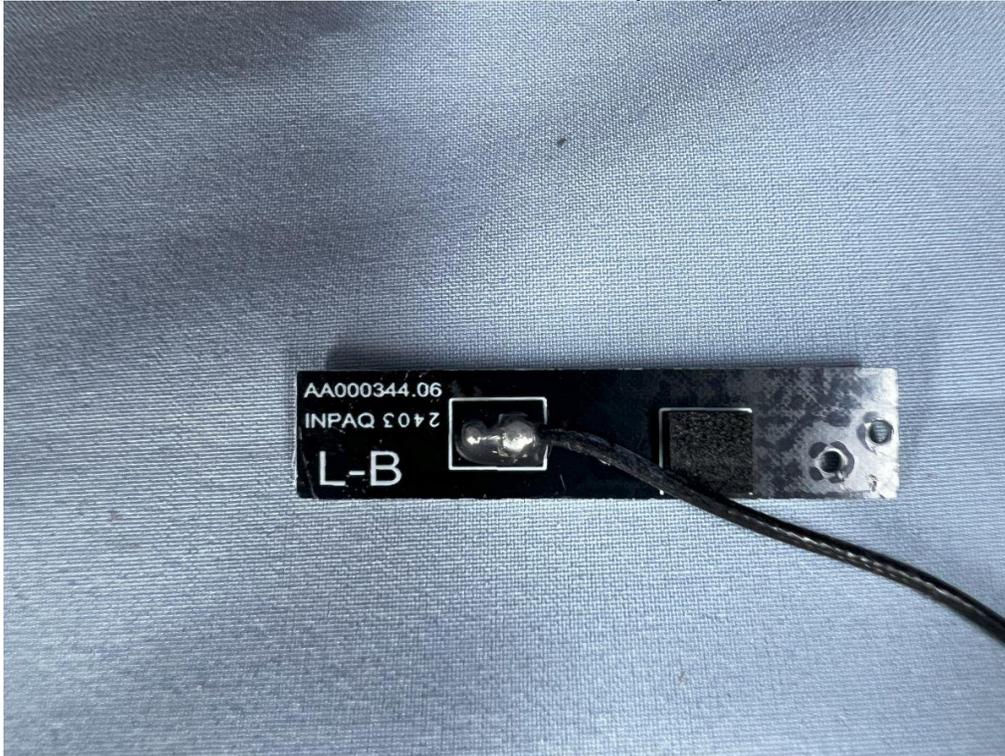

Internal View of EUT-102(ANT2)

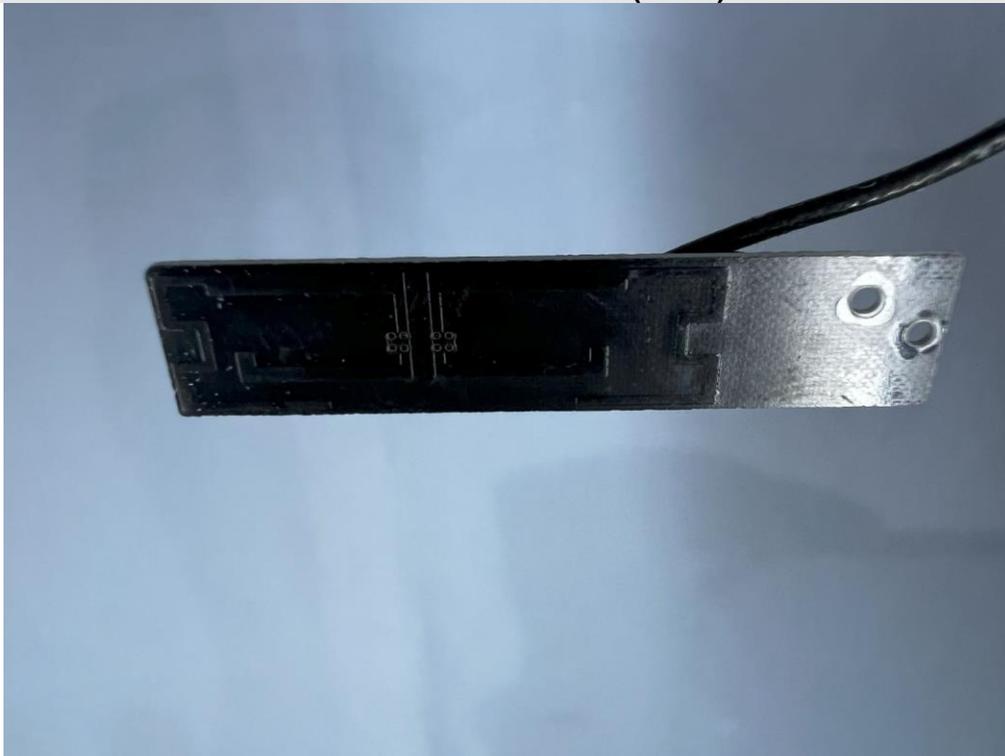

Internal View of EUT-103(ANT3)



Internal View of EUT-104(ANT3)

