


# RONIN-M User Manual

V1.4 2015.8

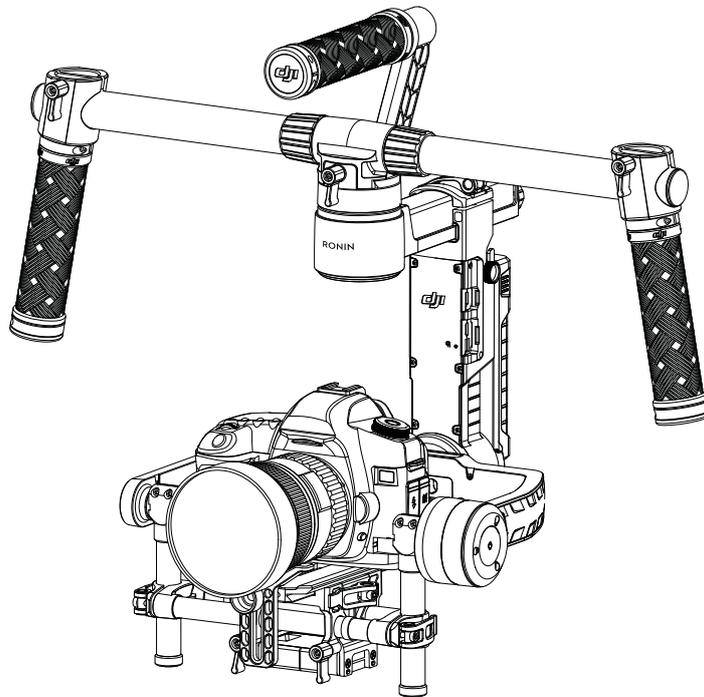

## Disclaimers and Warnings

Congratulations on purchasing your new DJI product. Please read this manual and disclaimer carefully before using this product. By using this product, you hereby agree to this disclaimer and signify that you have read it fully. You agree that you are responsible for your own conduct and any content created while using this product, and for any consequences thereof. You agree to use this product only for purposes that are proper and in accordance with local regulations, terms and any applicable policies and guidelines.

By reading this disclaimer, you also agree:

1. Any part of this disclaimer is subject to change without prior notice, refer to [www.dji.com](http://www.dji.com) for the latest version.
2. DJI reserves the right of final interpretation of this disclaimer.

Do not modify or adjust the Ronin-M.

The Ronin-M has been calibrated before it leaves the factory. No adjusting or amending to the Ronin-M is allowed. Make sure to use the original battery, otherwise performance may be hindered, and internal malfunctions and damage to the gimbal may be caused. Please download the corresponding Assistant software.

As DJI has no control over use, setup, final assembly, modification or misuse, no liability shall be assumed or accepted for any resulting damage or injury. By the using, setting up, or assembling of the product, the user accepts all resulting liability. DJI assumes no liability for damages or injuries incurred directly or indirectly from the use of this product.

DJI and Ronin-M are registered trademarks of DJI. All names of products, brands, etc., appearing in this manual are trademarks or registered trademarks of their respective owner companies. This product and manual are copyrighted by DJI, with all rights reserved. No part of this product or manual shall be reproduced in any form without the prior written consent or authorization of DJI. No patent liability is assumed with respect to the use of the product or information contained herein.

### FCC Compliance

Ronin-M complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device accepts any interference received, including interference that may cause undesired operation.

### Required Notices to Use in Taiwan

This device has been granted a designation number by the National Communications Commission (NCC) according to the Technical Regulations Conformity Certification of Specified Radio Equipment. Article 12 Certified by the type of low-power radio-frequency electronics, non-licensed, company or users are not allowed to change to frequency, increase the power or change the characteristics of the original design and function.

Article 14 The use of low-power radio-frequency electronics shall not affect aviation safety and interfere with legal communications.

## Using the Manual

### Legend



Important



Hints and Tips



References or Definitions

### Download the DJI Ronin-M Assistant App

Download and install the DJI Assistant app.

Search for "DJI Assistant" on the App Store and then follow the instructions for iOS installation.  
Search "DJI Ronin" on the Google Play and then follow the instructions for Android installation.



iOS 7.0 or above



Android 4.3 or above



<http://m.dji.net/dji-ronin>

## Contents

<b>Disclaimers and Warnings</b>	<b>2</b>
FCC Compliance	2
Required Notices to Use in Taiwan	2
<b>Using the Manual</b>	<b>3</b>
Legend	3
Download the DJI Ronin-M Assistant App	3
<b>Introduction</b>	<b>5</b>
<b>In the Box</b>	<b>5</b>
<b>Ronin-M Diagram</b>	<b>7</b>
<b>Getting Started</b>	<b>7</b>
DJI Intelligent Battery	7
Tuning Stand	9
Assembling the Handle Bar	10
Installing the Handle Bar onto the Gimbal	10
DJI Intelligent Battery Installation	10
Mounting the Camera	11
Configuring the Handle Bar	13
<b>Balancing</b>	<b>13</b>
Step 1: Balancing the Vertical Tilt	14
Step 2: Balancing the Roll Axis	14
Step 3: Balancing the Tilt Axis	14
Step 4: Balancing the Pan Axis	15
Advanced Roll Adjustment	15
<b>DJI Ronin-M Assistant App Tuning</b>	<b>16</b>
Download and Install	16
Basic Settings	16
Advanced Settings	17
<b>DJI PC / MAC Assistant Tuning</b>	<b>22</b>
Install DJI PC / MAC Assistant	22
Settings	24
<b>Remote Control</b>	<b>28</b>
Connecting the Remote Control to the Ronin-M	28
Remote Control Power LED Indicator Status	29
Remote Control Battery Level Indicator Status	29
Remote Control Features	30
Adding a Third-Party Transmitter/Receiver	31
<b>Operation Modes</b>	<b>31</b>
Underslung Mode	31
Upright Mode	31
Briefcase Mode	32
<b>Maintenance</b>	<b>32</b>
<b>Troubleshooting</b>	<b>33</b>
<b>Specifications</b>	<b>34</b>

## Introduction


Developed for filmmaking professionals, the DJI Ronin-M marks a generational leap forward in camera stabilization technology. The technology built into the DJI Ronin-M allows a broad spectrum of cameras, of varying sizes and weights, to be stabilized during filming. Based on the successful design of the DJI Ronin Handheld Gimbal, the DJI Ronin-M is lighter, smaller, and more convenient to use.

A brushless gimbal stabilization system is not simply three brushless motors moving on three axes. The motors work with position feedback and the IMU (Inertial Measurement Unit) to communicate with DJI's custom 32-bit processor, which processes movement calculations in milliseconds. This reduces angular vibration to less than  $\pm 0.02^\circ$  of translated movement, meaning that the camera will remain perfectly steady. The Ronin-M can be used in three different operation modes: Underslung Mode, Upright Mode, and Briefcase Mode.

## In the Box

### Gimbal ×1

The gimbal includes built-in DJI motor drive modules, an independent IMU module, a 32-bit DSP processor, a power supply module, a Bluetooth module, a transmitter/receiver module, a camera shelf, and a power breakout box.

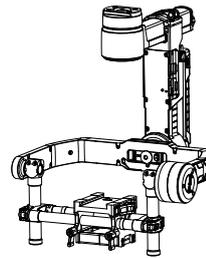

### Handle Bar ×1

Customizable handle bar for the gimbal. The handle bar is assembled from five parts, including a top handle, two handle bars and two grips.




### Remote Control – 2.4 GHz ×1

Control the gimbal's movements, switch work modes, and select gimbal speed.



### Tuning Stand ×1

For suspending or storing the gimbal.

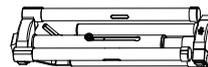

**Charger x1**

Automatic switching charger 110-240V



**DJI Intelligent Battery x2**

Power source for the gimbal.  
Supplies power for other external devices.



**Cable Pack x1**

ANSI cable  
JIS or CE cable (varies by region)



**Micro-USB Cable x1**

For firmware upgrades.



**Camera Mounting Plate x1**

For mounting your camera onto the gimbal.



**Accessories Package**

Camera Screw A (1/4") x2



Camera Screw B (3/8") x2



Camera Screw C (1/4") x2



Camera Screw D (3/8") x2



Lens Support Screw x1




Lens Support x1



Allen Wrench x2 (3 mm & 3/16")



## Ronin-M Diagram

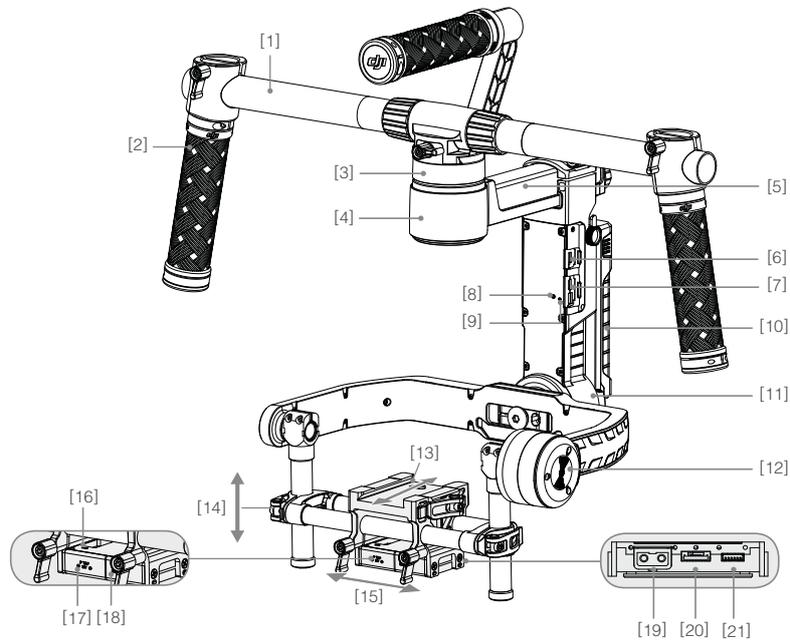


- |                                |                                       |
|--------------------------------|---------------------------------------|
| [1] Top Handle Bar             | [12] Tilt Motor                       |
| [2] Side Handle                | [13] Fore and Aft Adjustment          |
| [3] Quick Release Mount        | [14] Tilt Vertical Adjustment         |
| [4] Pan Motor                  | [15] Roll Adjustment                  |
| [5] Pan Adjustment Slider      | [16] IMU Port                         |
| [6] D-BUS Receiver Port        | [17] P-TAP Accessory Power Port       |
| [7] USB Port & CAN Bus Port    | [18] USB Accessory Power Port         |
| [8] Bind Button                | [19] P-TAP Port (rear side)           |
| [9] Gimbal LED Indicator Light | [20] DJI Lightbridge Port (rear side) |
| [10] DJI Intelligent Battery   | [21] GCU Port (rear side)             |
| [11] Roll Motor                |                                       |


## Getting Started

### DJI Intelligent Battery

Before you start using your Ronin-M, be sure to charge the battery. The DJI Intelligent Battery was specially designed for the Ronin-M. It has a capacity of 1580mAh, a voltage of 14.4V, and a variety of power management functions. Only charge the DJI Intelligent Battery with DJI approved charger (MODEL: BC235144015). When the DJI Intelligent Battery is fully charged, the Ronin-M has a maximum run-time of three hours.

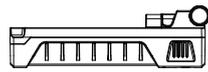

DJI Intelligent Battery

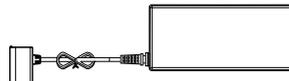

Charger

**DJI Intelligent Battery Functions**

Balanced Charging	Automatically balances the voltage of each battery cell during charging
Capacity Display	Displays current battery levels
Overcharge Protection	Charging stops automatically when the battery voltage reaches 16.8V, preventing overcharge damage
Over-Discharge Protection	Discharging stops automatically when battery voltage reaches 12V, preventing over-discharge damage
Short-Circuit Protection	Automatically cuts power supply when a short circuit is detected
Sleep Protection	Sleep mode is activated after 20 minutes of inactivity, saving power
Charging Temperature Detection	The battery will charge only when the temperature is between 0°C and 55°C

**DJI Intelligent Battery Specifications**


Type	LiPo
Capacity	14.4V, 1580mAh
Charging Environment Temperature	0°C~40°C
Operating Environment Temperature	-10°C~40°C
Charging/Discharging Environment Relative Humidity	< 80%



- Read the user manual, disclaimer, and battery safety guidelines before use. Users take full responsibility for all operations and usage.
- Always use DJI approved chargers. DJI takes no responsibility for any consequences resulting from the use of non-DJI approved chargers.

**Charging the DJI Intelligent Battery**

1. Connect the charger to a wall socket (100-240V, 50/60Hz).
2. Connect the DJI Intelligent Battery to the charger.
3. The battery level indicator lights display the current charge level as the DJI Intelligent Battery charges.
4. The DJI Intelligent Battery is fully charged when the battery level indicator lights turn off. Disconnect the battery from the charger when charging is complete.

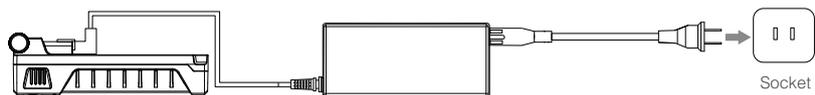

## Using the DJI Intelligent Battery



**Checking the battery level:** When the DJI Intelligent Battery is turned off, pressing the battery power button once will display the current battery level.

**Powering on:** When the DJI Intelligent Battery is turned off, press and hold the power button for 1 second to turn on the DJI Intelligent Battery.


**Powering off:** When the DJI Intelligent Battery is turned on, press and hold the power button for 1 second to turn off the DJI Intelligent Battery.

Getting Started

## Tuning Stand

You can use the tuning stand during setup, or to store the gimbal. The following steps show how to use the tuning stand.

1. Hold the stand in the upright position as shown in the picture below.
2. Press the buttons [1] on the outsides of the lower legs and rotate the legs downwards, away from the stand. Then press the buttons [2] on the outsides of the upper support arms and pull them upwards, away from the stand. Press the button [3] on the vertical support and slide it up to extend the stand, as shown.
3. The upper half of this tuning stand can be removed by loosening the knob on the rear of the stand [4]. You can use it with any C-stand style stud that fits into the hole [5] where the support arms converge. When mounting this section to a C-stand, always be sure to check the balance of the stand so that the Ronin-M, if it is fitted with a camera, does not tip over. When setting on a table, make sure the table is flat and level.

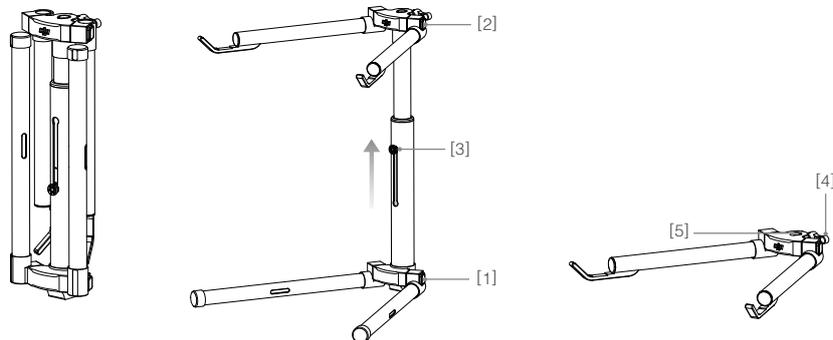

### Assembling the Handle Bar

1. Attach the handle bars to both sides of the top handle and tighten the grip screws.




2. Attach the grips to the handle bar and lock them in the preferred position.



### Installing the Handle Bar onto the Gimbal

1. Place the handle bar in position, as shown below, then slide it horizontally into the gimbal and tighten the lock-knob.
2. Holding the gimbal by the grips, make sure that the gimbal is not obstructed during a 360 degrees pan. The installation is complete.

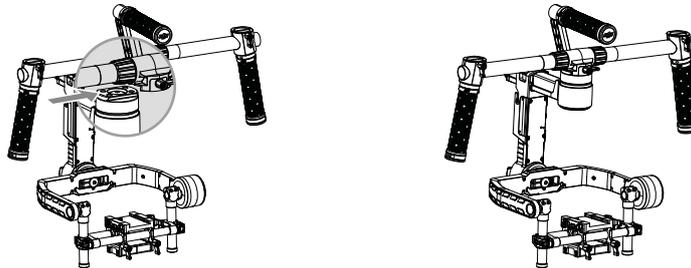

### DJI Intelligent Battery Installation

1. Loosen the screws on either side of the DJI Intelligent Battery. Slide the DJI Intelligent Battery directly into the gimbal and then slide it down. Be sure the battery's thumb screws go fit into their locating slots, so that the DJI Intelligent Battery makes full contact with the gimbal's electrical leads.
2. Tighten the screws on the DJI Intelligent Battery to lock it in place.




- ⚠ • Make sure the DJI Intelligent Battery is turned off during installation.
- An incorrectly installed battery may lead to (1) Poor battery connection, or (2) Unavailable battery information.

## Mounting the Camera


The Ronin-M uses an adjustable camera mounting plate that allows you to easily balance, install, and remove the camera. The Ronin-M has been tested with the following types of cameras. Other cameras similar in size and weight may also be compatible.

Black Magic Cinema Camera	Canon 5DMKIII	Nikon D800
Black Magic Pocket Cinema Camera	Canon 6D	Panasonic GH3
Canon 1Dc	Canon 7D	Panasonic GH4
Canon 5DMKII	Canon C100	Sony Alpha 7

- ⚠ • Camera Size Requirements: The maximum depth from the center of gravity on the camera base plate is 120 mm. The maximum height, measured from the top of the camera base plate, is 195 mm. The maximum width is 160 mm as shown in the image to the right.
- To avoid obstructing camera movement, the use of soft connection cables is recommended.

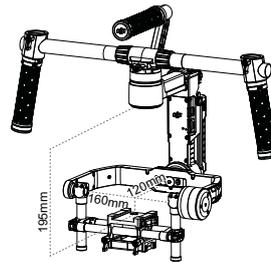

1. Attach the camera mounting plate to your camera using the provided camera screws A, B, C or D. Camera screws A and B only fit the holes of the mounting plate, while camera screws C and D only fit the slot of the mounting plate. Be sure to use the correct 1/4" or 3/8" screws. Secure the camera as firmly as possible. Some cameras have two tripod mounting holes. If two mounting holes are available on your camera, use them both. Choose the correct screw holes, according to your camera's configuration.
2. Install the lens support by gently pushing it up, so that it is applying light pressure to the lens. Then tighten the thumbscrew.

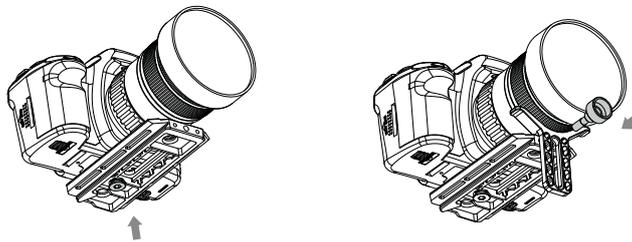




Why do you need to use a lens support?

Certain cameras have a very tight lens securing system, and some cameras such as the Canon 5D MK II and MK III have very loose lens securing systems. The Ronin-M balances the camera as one solid unit. If the mounted camera has a loose lens securing system, the lens support must be used. This is because a loose connection between the lens and the camera body may allow vibrations that travel through to the camera but not directly to the lens, resulting in the two masses shaking at different frequencies. The resulting oscillations will be transmitted to the IMU, causing the whole gimbal to shake. If the lens support fits, it's best to use it at all times.




- The lens support can be installed facing outward or inward to accommodate different lens types.
- Ensure alignment of the camera plate and then tighten the mounting screw, before tightening the lens support.

3. With the gimbal facing outward on the tuning stand, slide the mounting plate into the receiver until the safety lock engages. Make sure the gimbal is not turned on when balancing the camera.

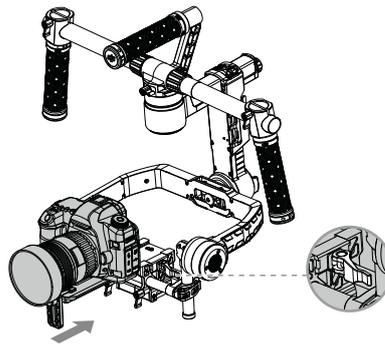


4. When the camera achieves a rough balance, tighten the camera base side clamp. You can adjust the tightness of the clamp with an M3 Allen wrench.

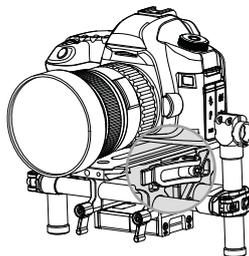


## Configuring the Handle Bar

The customizable handle bar of the Ronin-M can be removed, if necessary, by following the steps below.

1. Loosen the two grip screws where the handle bar meets the gimbal, as shown.

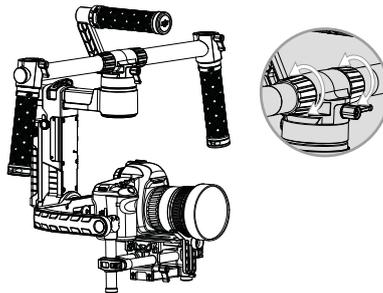

2. Remove the grips from the handle bar.
3. You can remove one or both sides of the handle bar.
4. The resulting configuration is shown below.

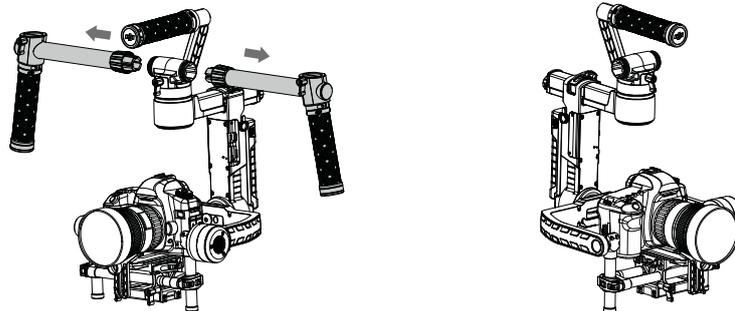

## Balancing


To obtain the best performance from the Ronin-M, proper balancing is a must. Accurate balance is critical for shots where the Ronin-M will be subjected to extreme movements or accelerations (running, horseback riding, biking, car mounts, helicopters, etc.). Proper balance will also offer a longer battery runtime. There are three axes that need to be accurately balanced prior to turning on the Ronin-M and setting up the software.

- 
-  The camera needs to be fully configured, with all accessories, prior to installing and balancing the camera on the gimbal. If the camera has a lens cap, be sure to remove it prior to balancing. Be sure that the Ronin-M's power is turned off while balancing the camera.
-

### Step 1: Balancing the Vertical Tilt

To adjust the vertical balance, you will need to change the camera's vertical position. Adjust the height of the crossbar to achieve vertical tilt balance.

1. Rotate the Tilt Axis so that the camera lens is pointing upward and loosen the two vertical adjustment tabs.
2. Gently slide the camera mount crossbar forwards or backwards until the camera points upwards when released.
3. Tighten the tabs and manually rotate the assembly, simulating tilt, to ensure there is no binding in the tilt motor. When proper balance is achieved, you can rotate the camera to any tilt angle, and it will stay in that position.

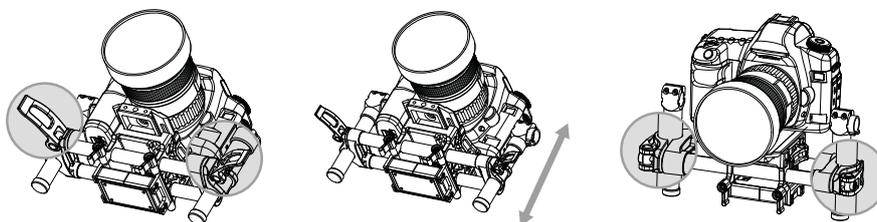


⚠ Ensure the measurement marks match up on either side of the vertical bars. If they do not match up, the assembly could possibly be skewed higher or lower on one side, which would cause the tilt motor to bind.

### Step 2: Balancing the Roll Axis

Balancing the camera, from left to right, on the Roll Axis is also required. When the proper left/right roll balance is achieved, the camera will stay level.

1. Loosen the two lock-knobs to allow the camera and mounting plate to slide left and right.
2. Slide the camera left or right until the Roll Axis remains level.
3. Tighten the two lock-knobs to lock the camera mounting plate in position.

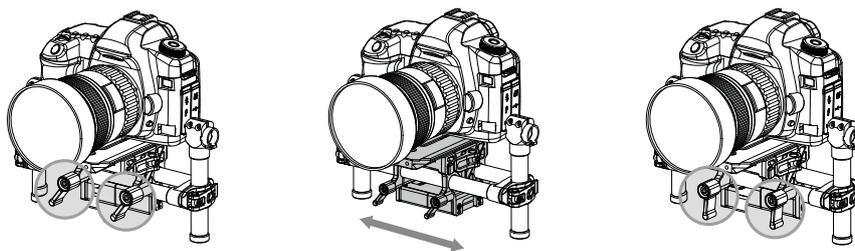


⚠ When adjusting the roll balancing position of the camera, only loosen the two lock-knobs a few turns to allow the camera base to slide. Do not loosen the lock-knobs excessively.

### Step 3: Balancing the Tilt Axis

Balancing the camera on the tilt axis is also necessary. When the proper fore and aft tilt balance is achieved, the camera will stay level when you remove your hand (while holding the roll axis in position).


1. Loosen the camera base's side clamp to allow the camera and mounting plate to slide forwards and backwards.
2. Slide the camera forwards or backwards until the tilt axis remains level. Only very small adjustments are required to achieve the proper balance.
3. Tighten the side clamp to lock the camera and mounting plate in position. If properly balanced, the camera should be able to remain steady at any given tilt angle.

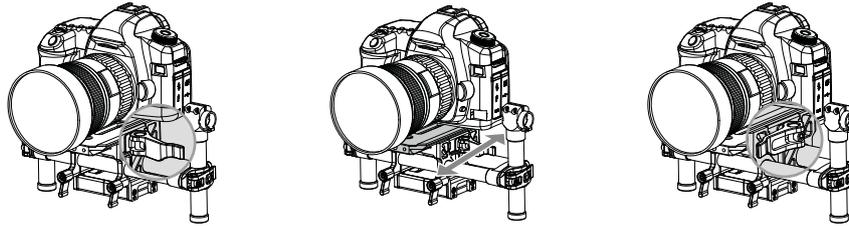

#### Step 4: Balancing the Pan Axis


The entire mass below the pan motor must be balanced on the central axis line of the pan motor. To achieve this balance, you must adjust the pan axis slide.

1. Open the clamp [1] on the pan axis and turn the knob [2] to slide the assembly. Identify if the Ronin-M is front heavy or rear heavy.
2. While the Ronin-M is resting on the tuning stand, try rotating the Ronin-M along the pan axis by lifting one side of the handle bar. If the camera does not swing, the pan axis is properly balanced. Tighten the clamp after balancing is completed.

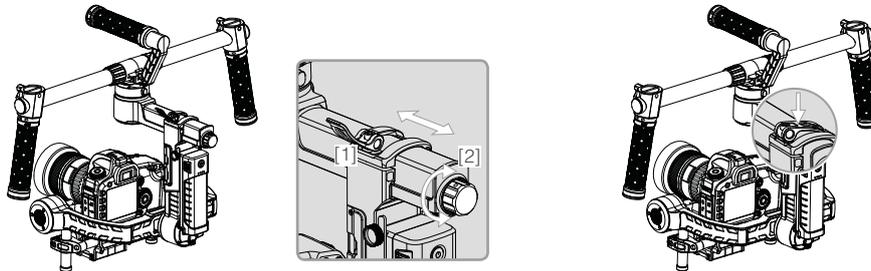

#### Advanced Roll Adjustment

If additional roll adjustment is needed in cases where the camera itself is too light in comparison to the tilt motor assembly, advanced roll adjustment can be achieved by loosening the indicated screws and pushing the assembly to the right or left.

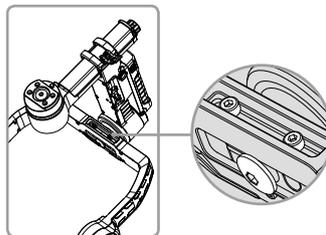

## DJI Ronin-M Assistant App Tuning

After balancing the mechanism, you can fine tune the balance by adjusting software parameters in the DJI Assistant App.

### Download and Install


1. Download the DJI Assistant app:  
For the iOS version, search "DJI Assistant" in the App Store, then follow the installation instructions. Search "DJI Ronin" on the Google Play then follow instructions for the Android version.
2. Ensure that Bluetooth is enabled on your mobile device and orient the camera in the standard operating position (facing forwards). Turn on your Ronin-M, then open the DJI Assistant App.
3. When using the DJI Assistant App for the first time, you will be prompted to register using a valid e-mail address.
4. Connect your device to the Ronin-M by following the step-by-step instructions in the DJI Assistant App. After connecting to the gimbal's main control, you will see the Wizard menu. When the indicator at the top of the screen displays solid green and the blue light is blinking, the connection is complete. The green LED on the Ronin-M will also light up.



After enabling Bluetooth on your mobile device, return to the DJI Assistant App to connect to the Ronin-M. The Ronin-M will not appear in the mobile device's Bluetooth device list. It can only be connected via the DJI Assistant App.

### Basic Settings

The functions accessible in the Wizard are the most basic functions you may want to adjust upon receiving your Ronin-M. These options are also the most frequently used functions during standard operation. You can adjust all of these settings in the Wizard menu.

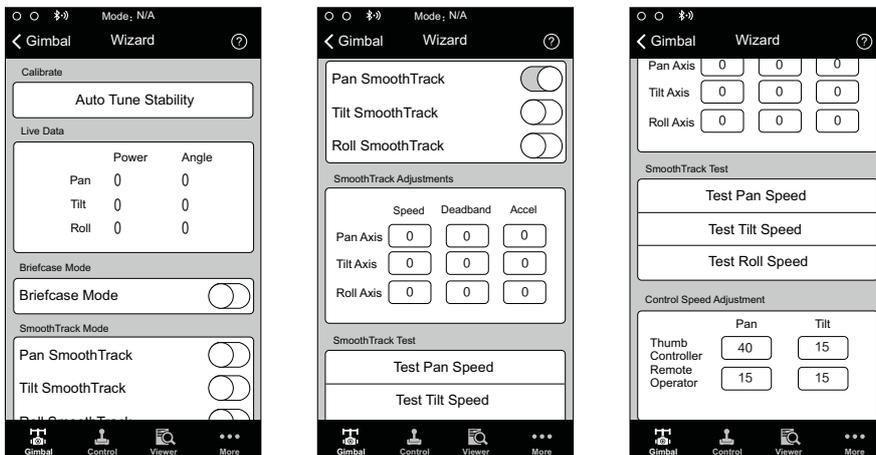

#### 1. Calibrate

Auto Tune Stability provides an easy one-touch button for automatic configuration of each axis. The trajectory, speed, power, and stiffness of motors are automatically tuned for the camera configuration that is mounted. Auto Tune Stability should be tapped whenever a new camera configuration is mounted or whenever the lens or accessories are changed. This will ensure stability and provide ideal calibrated settings.

### 2. Live Data

This data represents the feedback from each motor axis. If a particular motor axis indicates a power reading greater than 10, this often means the mechanical balancing of the camera hasn't been properly adjusted. A properly balanced camera rig will display readings close to 0 power on each axis, but these values may vary. The angle reading indicates the current angle of each axis in relation to center.

### 3. Briefcase Mode

When Briefcase Mode is switched on, the Ronin-M will be able to seamlessly transform into this operation mode. With Briefcase Mode turned off, the Ronin-M will allow the camera to roll when the Ronin-M is tilted past the standard roll axis parameters.

### 4. SmoothTrack Mode

When SmoothTrack Mode is enabled, the Ronin-M will can be "steered," on the selected axis, by the camera's operator. The steering/translation speed can be adjusted for each axis independently. When the Ronin-M's top bar is rotated left or right, the camera will move, smoothly following the user's input, and stop at the appropriate angle. In the SmoothTrack options menu, the settings for the pan axis, roll axis and the tilt axis can be independently adjusted.

The pan axis speed will determine how fast the camera will travel while translating a pan movement. Pan deadband will determine how much movement the gimbal will tolerate prior to translating the camera's pan. The roll axis speed will determine how fast the camera will travel while translating a roll movement. Roll deadband will determine how much movement the gimbal will tolerate prior to translating the camera's roll. The tilt axis speed will determine how fast the camera will travel while translating a tilt movement. Tilt deadband will determine how much movement the gimbal will tolerate prior to translating the camera's tilt. The SmoothTrack pan, roll, and tilt speed can be tested. Ensure there is no obstruction of the camera before tapping the test button.

### 5. Control Speed Adjustment

The remote control speed can be adjusted here. This setting represents the maximum speed in the pan and tilt axis when the remote control sticks are pushed all the way in any given direction.

DJI Ronin-M Assistant App Tuning

## Advanced Settings

There are more advanced functions you can adjust through the Assistant to meet your requirements.

### Gimbal Menu

