


Block Diagram

BLOCK DIAGRAM

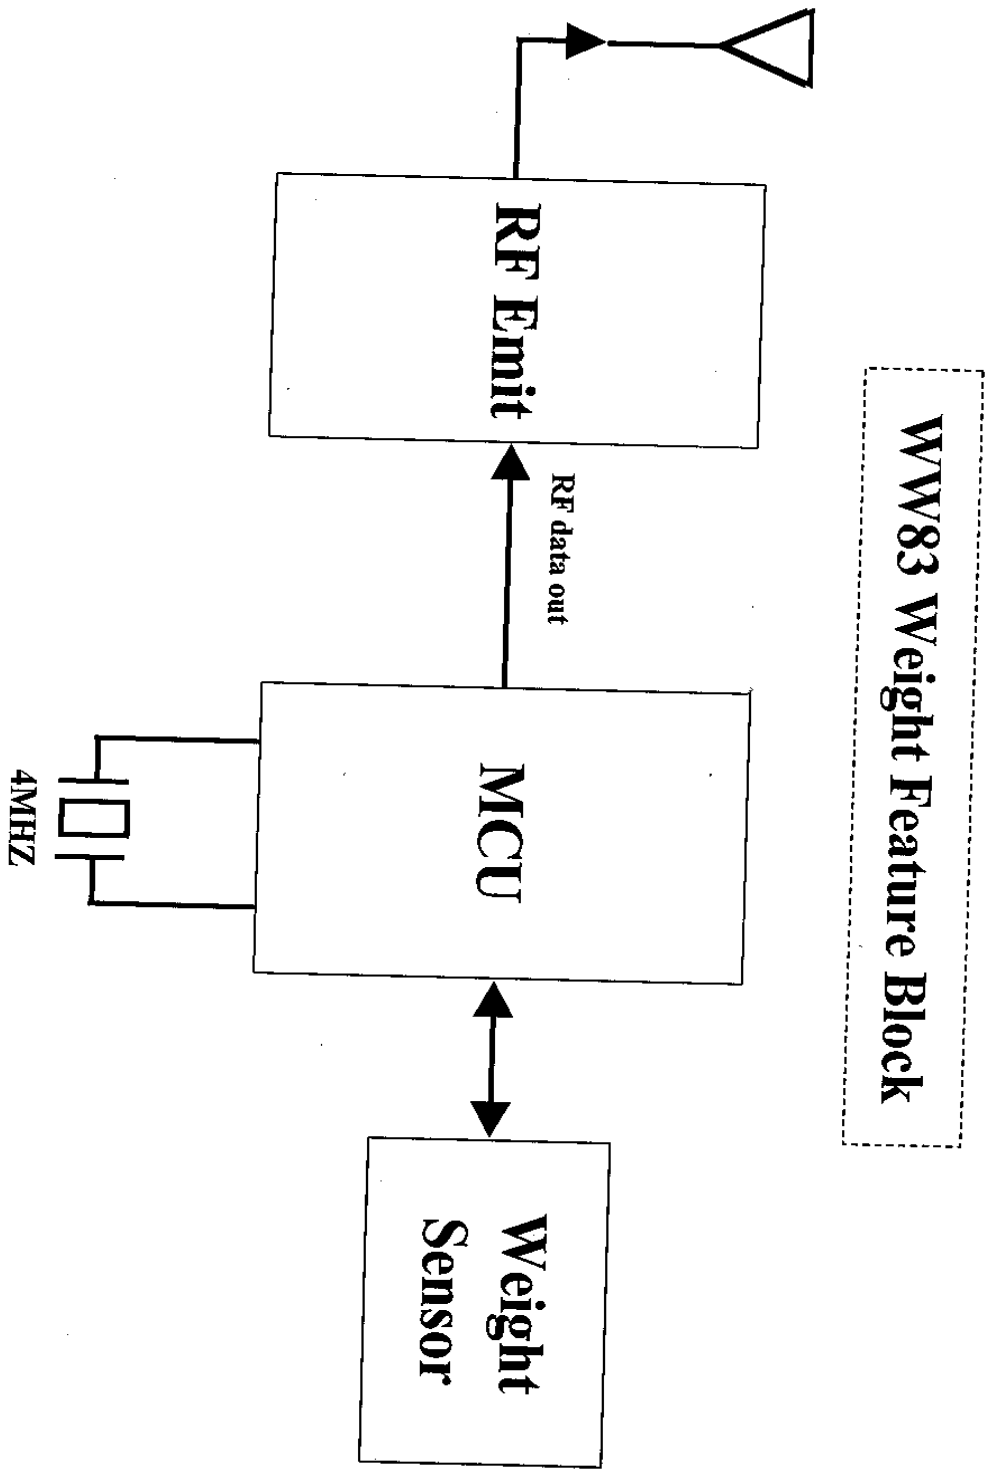

WW83 Scale Base Module:
When the scale is loaded, MCU receives weight from the weight sensor and opens the RF Emitter module to transmit weight every 800 ms. The transmission time