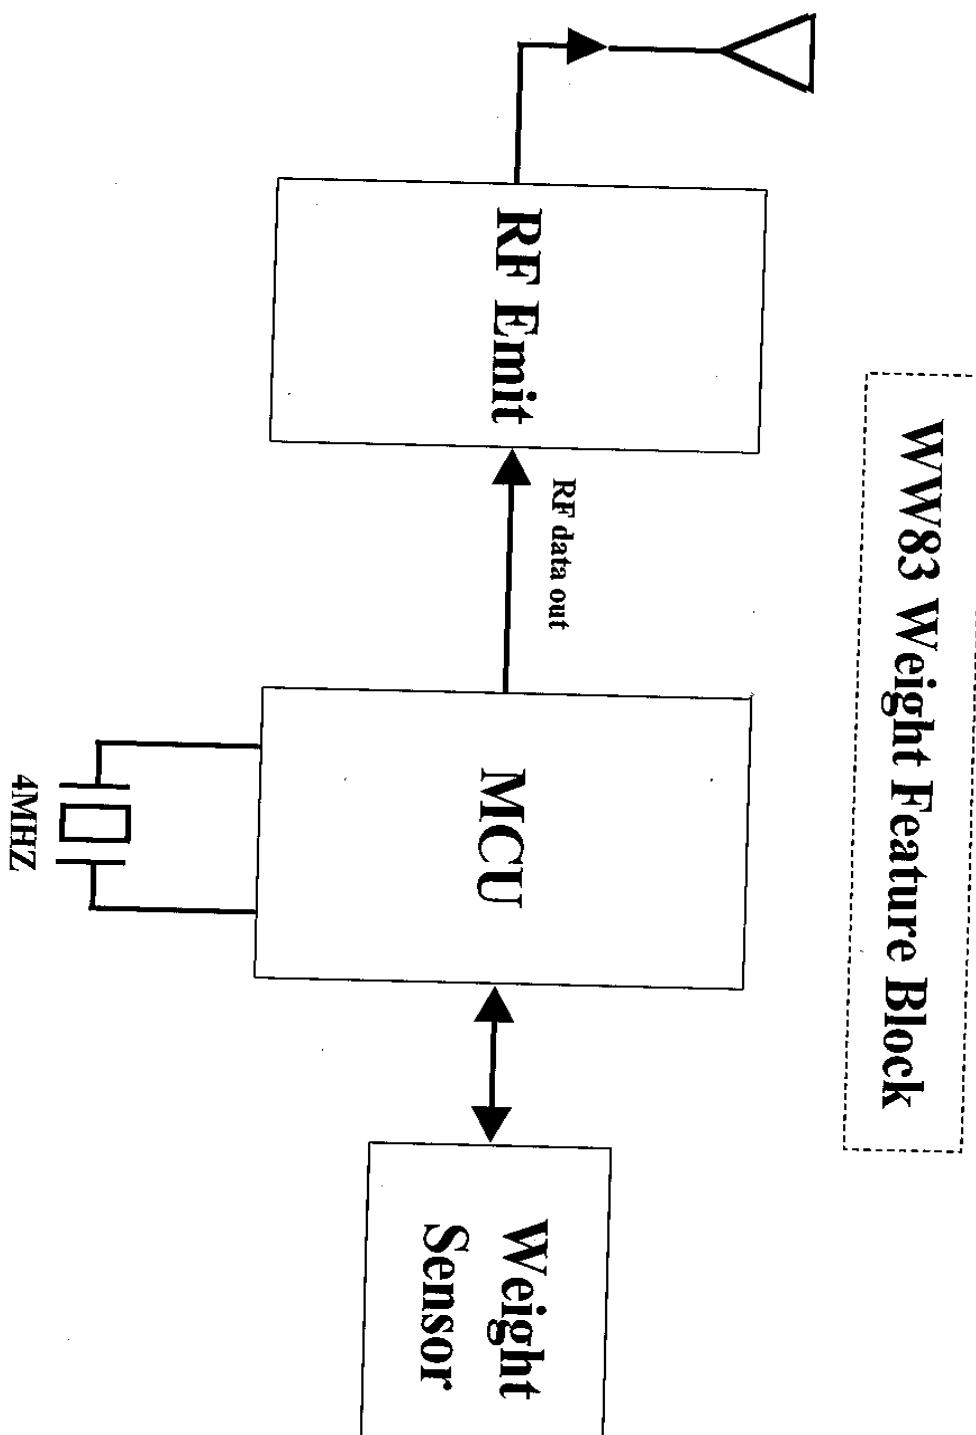


Block Diagram

**BLOCK DIAGRAM**

WW83 Scale Base Module:  
When the scale is loaded, MCU receives weight from the weight sensor and opens the RF Emitter module to transmit weight every 800 ms. The transmission tim