

SYLVANIA

MODEL NO. SKAR122BT

BLUETOOTH KARAOKE SYSTEM WITH ON SCREEN LYRICS

INSTRUCTION MANUAL



PLEASE READ BEFORE OPERATING THIS EQUIPMENT

SAFETY INSTRUCTIONS



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



 
DANGEROUS VOLTAGE:

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION:

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



DANGER:

Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

LASER SAFETY: This unit employs a laser. Only qualified service personnel should attempt to service this device due to possible eye injury.

CAUTION: USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURE HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING:

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

SURGE PROTECTORS:

It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

SAFETY INSTRUCTIONS

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

1. READ INSTRUCTIONS

All the safety and operating instructions should be read before the product is operated.

2. RETAIN INSTRUCTIONS

The safety and operating instructions should be retained for future reference.

3. HEED WARNINGS

All warnings on the product and in the operating instructions should be adhered to.

4. FOLLOW INSTRUCTIONS

All operating and use instructions should be followed.

5. CLEANING

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.

6. ATTACHMENTS

Do not use attachments not recommended by the product's manufacturer as they may cause hazards.

7. WATER AND MOISTURE

Do not use this product near water—for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.

8. ACCESSORIES

Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury and serious damage to the product. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

PORTABLE CART WARNING
(symbol provided by RETAC)



- 8A. An appliance and cart combination should be moved with care. Quick stops, excessive force and uneven surfaces may cause the appliance and cart combination to overturn.

9. VENTILATION

Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product

on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

10. POWER SOURCES

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

11. GROUNDING OR POLARIZATION

This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

12. POWER-CORD PROTECTION

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

13. LIGHTNING

To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

14. POWER LINES

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

15. OVERLOADING

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

16. OBJECT AND LIQUID ENTRY

 
Never push objects of any kind into this product through openings as they may touch dangerous

SAFETY INSTRUCTIONS

voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

17. OUTDOOR ANTENNA GROUNDING

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electric Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna discharge product, connection to grounding electrodes and requirements for grounding electrodes.

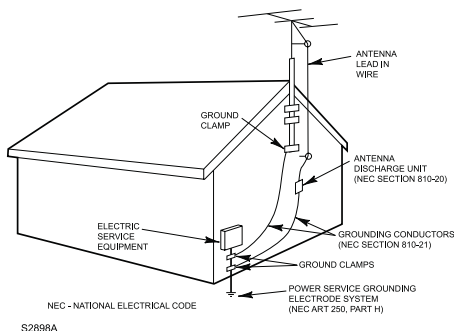

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

18. SERVICING

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

19. REPLACEMENT PARTS

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

20. SAFETY CHECK

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

21. WALL OR CEILING MOUNTING

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

22. DAMAGE REQUIRING SERVICE

Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or the cabinet has been damaged.
- When the product exhibits a distinct change in performance this indicates a need for service.

23. HEAT

The product should be situated away from heat sources such as radiators, heat registers, stoves or other products (including amplifiers) that produce heat.

24. NOTE TO CATV SYSTEM INSTALLER

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Table of Contents

Your Bluetooth Karaoke Party	5
Features	
Includes	
Setup	5
Power	
Orientation	6
Front Features & Controls	
Rear inputs & Controls	
Audio & Video Output	7
RCA Audio Output	
RCA Video Output	
CD & CD+G	8
RCD vs CD+G.	
Loading and Playing a CD	
Loading and Playing a CD+G	
Programming a Loaded CD or CD+G	
Balance	
Echo	
Bluetooth & Auxiliary input	9
Pairing a Bluetooth Device for the First Time	
Playing Audio Wirelessly	
Using the Auxiliary input	
Connecting a Microphone	9
Care And Maintenance	10
Carrying for Compact Discs	
Care of the Cabinet	
To Clean the Lens	
Trouble Shooting	11
Specifications	13

Your Bluetooth Karaoke Party Machine

 
Features

- Supports Bluetooth v2.1
- Supports profile A2DP (Advanced Audio Distribution Profile)
- Supports automatic device pairing
- Wireless range: 33 feet
- CD player: CD, CD-R/RW
- Karaoke: CD+G
- 5" B&W monitor displays CD+G graphics & lyrics
- 2 digit red LED display
- Echo control
- Microphone volume control
- Balance control
- LED pairing indicator
- Top-load disc player
- Composite video output
- 2 microphone inputs
- RCA stereo audio output
- 3.5mm audio input
- Pairing button
- On/off switch
- Play/pause button
- Skip forward/back button
- Repeat 1 or ALL play
- Programmable tracks
- Master volume control
- Build-in speaker

Includes

- Microphone
- AC/DC power adapter

Setup


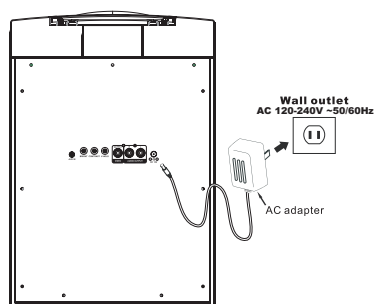


Power


Plug the small end of the power cord into the DC input on the back of the unit, and the large plug into a standard wall outlet.

Orientation

  Front Features & Controls

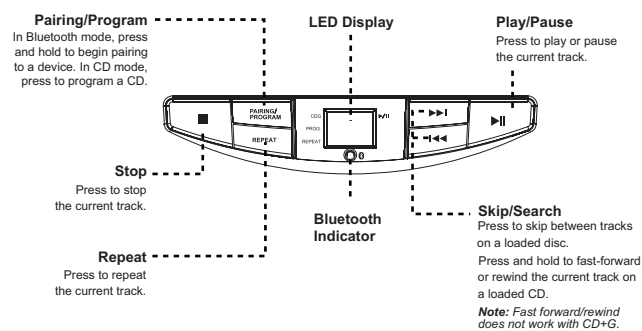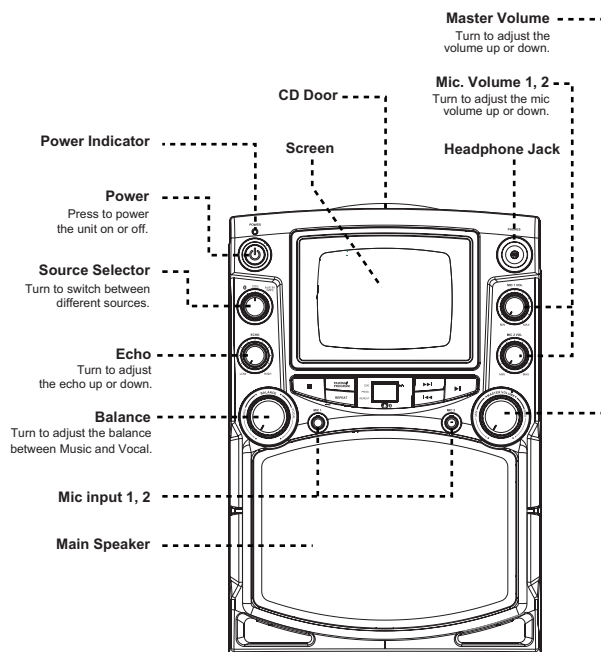

Rear input & Controls

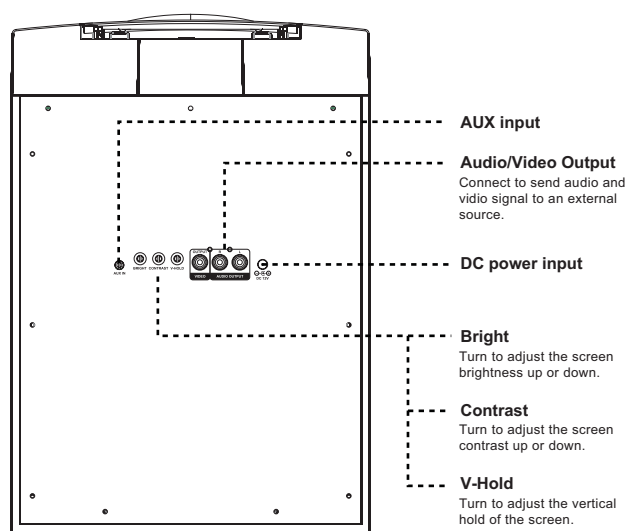 

Audio & Video Output

RCA Audio Output

Requires RCA audio cables (red/white, not included).

1. Connect RCA audio cables to the **RCA Audio Output** on the back of the karaoke machine, and to the **audio input** of an external stereo system.
2. Adjust the external stereo system to accept input from the karaoke machine.
3. Audio played through the karaoke machine will now be heard through the connected stereo system.

RCA Video Output

Require an RCA video cable (yellow, not included).

1. Connect an RCA video cable to the **RCA Video Output** on the back of the karaoke machine, and to the **video input** of an external video system.
2. Adjust the external video system to accept input from the karaoke machine.
3. Video played through the karaoke machine will now be seen through the connected external video system.

CD & CD+G

CD vs. CD+G

CD+Gs, or CD+Graphics, are CDs that are specially formatted for use with karaoke machines. In addition to the audio tracks, they contain graphics and text for lyrics that will appear on the screen while the CD is playing. Switching the unit to CD+G mode will activate the screen and display lyrics from the loaded CD+G. You must set the source to match the type of disc you wish to play. CD mode should only be used to play CDs. Like wise, CD+G mode should only be used to play CD+Gs.

Loading and Playing a CD

Note: This unit is not compatible with MP3 CDs.

1. Open the CD Door.
2. Load a CD or CD-R/RW disc into the karaoke machine, label side facing up.
3. Close the CD door.
4. Set the **Source Switch** on the front of the unit to CD mode.
5. Press the **Play/Pause** button to begin playing the loaded CD.

Loading and Playing a CD+G

1. Open the CD Door.
2. Load a CD+G disc into the karaoke machine, label side facing up.
3. Close the CD door.
4. Set the **Source Switch** on the front of the unit to CD+G mode.
5. Plug a microphone (one included) into the **Mic 1** or **Mic 2** input.
6. Press the **Play/Pause** button to begin playing the loaded CD+G.

Programming a Loaded CD or CD+G

The procedure for programming either type of disc is the same..

1. Press the **Stop** button to stop a loaded disc.
2. Press the **Program** button.
3. Press the **Skip/Search** buttons to select a track from the loaded disc.
4. Press the **Program** button to add the selected tracks to the program.
5. Repeat steps 4 and 5 to program up to 20 tracks to play in a specified order.
6. Press the **Stop** button to cancel a program.

Balance

Use the Balance Control Feature to switch between the pre-recorded singer's voice and the music, when using a Multiplex Karaoke Disc.

Echo

Use the Echo Control Feature to enhance your voice for a concert hall effect.

Bluetooth & Auxiliary Input

Pairing a Bluetooth Device for the First Time

1. Power on the unit by pressing the **Power** button.
2. Set the **Source Switch** on the front of the unit to  and press and hold the **Pairing** button.

The pairing indicator will flash blue quickly. When pairing, remain within 3 feet of the unit.
3. Using the native controls on your Bluetooth device, select the **SKAR122BT** in your Bluetooth settings to pair. If your device requests a password, enter the default password "0000".

Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.
4. When successfully paired and connected, a beep will issue from the unit and the Bluetooth Indicator will display a solid blue light.

After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or you find it is unable to connect, repeat the above steps.

Playing Audio Wirelessly

1. After pairing to a Bluetooth device, use the native controls on the connected Bluetooth Device to select a track.
2. Play, pause or skip a selected track using the native controls on the connected Bluetooth Device or the controls on the karaoke machine.
3. Audio played through the connected Bluetooth Device will now be heard through the speakers.

 
Using the Auxiliary input

- 3.5mm audio input cable not included.
1. Plug one end of a 3.5mm audio input cable into the **AUX IN** input on the rear of the unit, and plug the other end of the cable into the audio output on the MP3 Player or other source.
 2. Press the **Power** button to power the unit on.
 3. Set the **Source Switch** on the front of the unit to **AUX IN**.
 4. Audio played through the connected device will now be heard through the speaker.

Connecting a Microphone

Requires a microphone (included)



1. Plug the microphone into the **MIC 1 INPUT** or **MIC 2 INPUT**.
2. Adjust the **power** switch on the microphone to the **ON** position.
3. Use the **MICROPHONE VOLUME** dial to adjust the volume of audio amplified from the microphone.

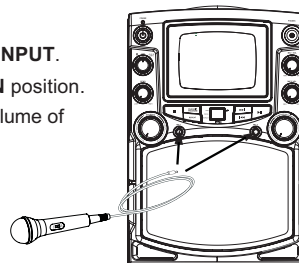

Care And Maintenance

Carrying for Compact Discs

  1. Treat the disc carefully. Handle the disc only by its edges. Never allow your fingers to come in contact with the shiny, unprinted side of the disc.
2. Do not attach adhesive tape, stickers, etc. to the disc label.
3. Clean the discs periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the disc. If necessary, use a CD cleaning kit. If a disc skips or gets stuck on a section of the disc, it is probably dirty or damaged (scratched). When cleaning the disc, wipe in straight lines from the center of the disc to the outer edge of the disc. Never wipe in circular motions.
4. This unit is designed to play discs bearing the identification logo as shown here or MP3 format Disc. Other discs may not conform to the CD standard and may not play properly.
5. Discs should be stored in their cases after each use to avoid damage.
6. Do not expose discs to direct sunlight, high humidity, high temperatures, or dust, etc. Prolonged exposure or extreme temperatures can warp the disc.
7. Do not stick or write anything on either side of the disc. Sharp writing instruments or the ink may damage the surface.

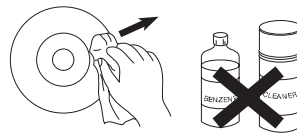

Care of the Cabinet

1. To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
2. The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
3. Mild soap and a damp cloth may be used on the front panel.

To Clean the Lens

If the lens gets dirty, your player may skip or may not play a CD.

1. Open the CD door.
2. Use a camera lens blower/brush to blow on the lens once or twice, brush the dust or particles off the lens then blow again.
3. To remove fingerprints, use a dry cotton swab to wipe from the middle to outer edge of the lens.

Trouble Shooting

PROBLEM	POSSIBLE CAUSE	REMEDY
GENERAL		
No sound in general	Volume not adjusted.	Adjust the Volume knob.
	Source mode in wrong position.	Using the Source knob (at the front panel), select the proper function as required.
	Power Adapter disconnected or loose.	Check the connection or the Power Adapter.
The unit does reset to operation of any button	Under the influence of electrostatic phenomenon, the product may malfunction and require user to disconnect.	Turn off the unit, disconnect the mains plug, and reconnect after a few seconds.
KARAOKE		
Feedback is heard when singing	Microphone is too close to the unit or MIC volume is too high.	Move Microphone away from the unit or decrease MIC volume.
Words do not appear on TV screen	Using non-CD+G disc.	Use a CD+G disc.
	Video cable connected improperly to TV.	Check connection (see page 7.).
	Source is not selected on TV.	Change source to match the location of Karaoke connection to TV(i.e VIDEO1, CHANEL1 etc.)
Microphone has no sound	A CD+G disc is playing but the CD+G indicator isn't on.	Wipe disc with cloth or use another disc.
	Microphone not turned on.	Turn on the Microphone.
	Microphone volume turned all the way down.	Turn the Microphone volume up.
	Microphone connection loose.	Insert the Microphone plug totally to the MIC jack.

COMPACT DISC PLAYS		
CD cannot be read	The disc is dirty. The disc is upside down. The CD player is in Pause Mode.	Clean or replace the disc. Turn it over so that the label is face up. Release the Pause Mode by pressing the Play/Pause button.
CD skips while playing	Disc is dirty or scratched.	Wipe disc with cloth or use another disc.
CD player will not play	Disc format not compatible.	Only reads CD or CD+G.
BLUETOOTH		
No sound when playing audio via Bluetooth	Your Bluetooth device has been paired properly. The volume control of your Bluetooth device is set at too low. The volume control of the main unit is set at too low.	Pairing your Bluetooth device according to the "Pairing a Bluetooth Device for the First Time" section. Increase the volume of your Bluetooth device. Increase the volume of the main unit to turn to your wish..
No sound in AUX mode	Volume at minimum. External device not connected properly.	Adjust the volume knob. Clear contact pins and connect again.

Specification

Power Output	5 watt RMS
Speakers	8 Ohms 4 inch.
CD Disc- Disc Diameter	120mm / 80mm
AC Power Adapter	AC input : 120V~240V/50/60Hz DC output: 12V  1.5A 
Power Consumption	18W
Bluetooth	V2.1+EDR
	Support A2DP
Dimensions (H x W x D)	360mm x 252mm x 258mm

SYLVANIA

LIMITED PRODUCT WARRANTY

"This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body."

This quality product is warranted to be free from manufacturer's defects in material and workman-ship, provided that the unit is used under the normal operating conditions intended by the manufacturer.

Should you have any problem with this product, please and it is highly recommended to visit our website at www.curtisint.com before you take any other steps as we have additional copies of instruction manuals, operating manuals and trouble shooting tips on our website which gives you the answer on most of the questions you could have in operating the unit.

TERMS OF WARRANTY

C.I. Service Dept. warrants this product to be free from defects in materials and workmanship for 90 days on parts and 90 days on labor. If you originally purchased your product more than 90 days ago, a repair fee may apply.

Nothing within this warranty shall imply that C.I. will be responsible or liable for any damage to any items placed in this product, whether due to any defect of the product, or its use, whether proper or improper.

EXCLUSIONS

Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), there are no other warranties, conditions, representations or guarantees, express or implied, made or intended by C.I. or its authorized distributors and all other warranties, conditions, representations or guarantees, including any warranties, conditions, representations or guarantees under any Sale of Goods Act or like legislation or statute is hereby expressly excluded. Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), shall not be responsible for any damages to persons or property, including the unit itself, howsoever caused or any consequential damages arising from the malfunction of the unit and by the purchase of the unit, the purchaser does hereby agree to indemnify and save harmless C.I. from any claim for damages to persons or property caused by the unit.

TO OBTAIN REPAIRS UNDER THE TERMS OF THIS WARRANTY

1. The original purchaser must present a copy of the original bill of sale and the service warranty card.
2. Any alterations, abuse, misuse, battery corrosion or accidental damage voids the warranty.
3. The warranty does not cover cabinets and accessories.
4. No warranty or insurance contained or set out shall apply when damage or repair is caused by power failure; damage in transit or when moving the unit; improper power supply; use for commercial or industrial purposes; service calls resulting in customer education, etc.
5. The defective product should be mailed to:

Canada
C.I. Service Dept.
315 Attwell Drive
Toronto, ON
M9W 5C1

U.S.A
Curtis International Ltd
c/o Liquidity Services/Liquidation.com
1399 Perry Road
Plainfield, IN
46168

For service assistance and product information, please call: 1-800-968-9853.

If mailing the product, the freight must be prepaid and a money order for \$7.00 should be included to cover the cost of insurance and the return of the product.

6. C.I. reserves the right to repair or replace the parts which have become defective.

Model No. _____ Date Purchased _____ Serial No. _____

SYLVANIA is a registered trademark of OSRAM SYLVANIS Inc. used under licence.