


## **ATTACHMENT E.**

### **- USER'S MANUAL**

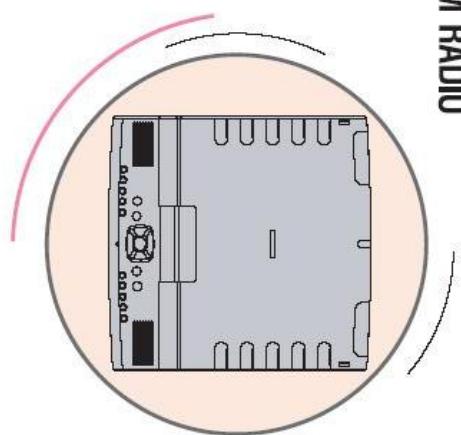

10.2" Digital Wide Screen  
with DVD, TV, FM RADIO

User's Manual

U.S.A.

U.S.FEDERAL COMMUNICATIONS COMMISSION  
RADIO FREQUENCY INTERFERENCE STATEMENT  
INFORMATION TO THE USER

NOTE : This equipment has been tested and found to comply with the limits for a  
Class B digital device pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful  
Interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if  
Not installed and used in accordance with the instructions, may cause harmful  
Interference to radio communications.

However, there is no guarantee that interference will not occur in a particular  
Installation.

If this equipment does cause harmful interference to radio or television reception,  
Which can be determined by turning the equipment off and on, the user is  
encouraged to try to correct the interference by one or more of the following  
measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet of a circuit different from that  
to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

Changes or modification not expressly approved by the party responsible for  
Compliance could void the user's authority to operate the equipment.  
Connecting of peripherals requires the use of grounded shielded signal cables.

# USER'S MANUAL

- *This user's manual can be different each software version and can be changed no pre-notice.*

# CONTENTS

|   |    |
|---|----|
| <b>Chapter 1. Safety Precautions</b>              | 4  |
| <br>  |    |
| <b>Chapter 2. Mount Method for Products</b>       |    |
| 1. Headrest Mounting                              | 6  |
| 2. Roof Mounting                                  | 7  |
| <br>  |    |
| <b>Chapter 3. Getting Started with the Device</b> |    |
| 1. Designations for each function                 | 8  |
| 2. Method of Using the Front Panel Button         | 10 |
| 3. Remote Controller                              | 11 |
| <br>  |    |
| <b>Chapter 4. Setting the Device</b>              |    |
| 1. Main Menu                                      | 12 |
| 2. Setting the Main Menu                          | 13 |
| 3. Monitor Adjustment                             | 14 |
| 4. Monitor and Volume(High/Low) Adjustment        | 15 |
| <br>  |    |
| <b>Chapter 5. TV(CATV)</b>                        |    |
| 1. Switching to TV Mode                           | 16 |
| 2. Switching Channels                             | 16 |
| 3. Seeking and Storing(Deleting) Channels         | 16 |
| 4. Viewing Memorized Channels                     | 17 |
| 5. Viewing Previous Channels                      | 17 |
| 6. Watching CATV                                  | 17 |

**Chapter 6. FM Radio**

|                                       |    |
|---------------------------------------|----|
| 1. Switching to FM Mode               | 18 |
| 2. Screen Configuration               | 18 |
| 3. Switching Frequencies              | 19 |
| 4. Frequency Retrieval                | 19 |
| 5. Automatic Frequency Retrieval      | 20 |
| 6. Memorized Frequency Retrieval      | 20 |
| 7. Random Storage                     | 21 |
| 8. Switching to Memorized Frequencies | 21 |
| 9. Switching between FM 1,2 and 3     | 21 |

**Chapter 7. DVD**

|                          |    |
|--------------------------|----|
| 1. Switching to DVD Mode | 22 |
| 2. Main Function         | 22 |
| 3. SETUP                 | 23 |
| 4. Audio CD              | 29 |
| 5. MP3 CD                | 30 |
| 6. Video CD              | 31 |
| 7. DVD                   | 32 |
| 8. Others                | 33 |

**Chapter 8. AUX**

34

**Chapter 9. Components**

35

## Safety Precautions

- ★ To ensure the safe and proper use of this product, make sure you fully understand this User Manual before using the product.

### Precautions during Use



#### ◆ Prohibition against operating this device while driving

- Avoid operating this device while driving a vehicle to prevent accidents. Park your vehicle in a safe place before operating this device.

#### ◆ Motion in shut-down mode

- Do not use this device in its ACC mode for a long time after you have shut off your vehicle's engine. Otherwise, your vehicle's battery may be discharged.

#### ◆ Power source

- This product is designed for use with 12V DC vehicles. (with the emitter grounded).

#### ◆ Repairs & retrofits

- Never repair or retrofit this product at your discretion. Our company does not accept any responsibility whatsoever for any repairs or retrofits done at the user's discretion.

#### ◆ Prohibition against watching the monitor while driving

- Please note that some countries prohibit TV or video monitors from being visible to the driver and all occupants of a vehicle. You are advised to obey traffic rules and regulations.

Our company is in no way liable for any loss, damage or injury arising from a driver's disobedience of traffic rules and regulations or from the improper operation of this device. Please follow all safety instructions while driving.

- Severe vehicle vibrations may cause device failure.
- Use this device at appropriate temperature ranges. Avoid extremely low or high temperatures.
- The device's LCD monitor, by its nature, may look slightly dark at temperatures below 0° C.
- Do not attempt to retrofit your vehicle so that you could install this system in it to avoid being subjected to danger while driving.
- Do not attempt to disassemble this device nor apply excessive impact to it.



## Chapter 1

### Precautions during Use

- Uniquely shaped discs (heart- or non-circle-shaped) are not available for playback. Such discs, if used, may lead to device failure.
- This product is designed for use only in 12-cm circular discs.
- Never attempt to forcibly insert/remove a disc into/from the player.
- Avoid driving over bumpy roads that may cause playback errors.
- Dirty discs must be wiped clean using a soft and dry cloth.

### Playable Discs

- DVD Video



single & double-sided discs  
Single- & double-layer discs  
MPEG-2 digital audio CD  
DVD-R, DVD-RW, DVD+R and DVD+RW

- MP3 & Audio CD



Linear PCB digital audio CDs  
MP3-type & audio-CD-type CD-R and CD-RW

- Video CD



MPEG-1 Digital Audio & Video

### Disc Playback Compatibility


- Some DVDs are not available for playback due to the nature of their software.
- A DVD is typically composed of several titles, each of which consists of several chapters. A single disc recorded in DVD format corresponds with a single title with several scenes (chapters). There may be some discs, however, that are configured not according to the general specifications as mentioned above, but according to the DVD producer's intentions.
- The contents of a video (or audio) CD consist of tracks. Typically, each track corresponds with a piece of music in a song. For some discs, a track consists of a single index.
- For a video CD with a PBC (Playback Control) function, the user can use menus to execute the playback feature. However, repeat or search functions may not be available.

## Mount Method for Products (Headrest & Roof)

### 1. Headrest Mounting

a) Fix ①, ②, ③ and ④, as illustrated below.

b) Fix ⑤, leaving a space for the headrest, as illustrated below.

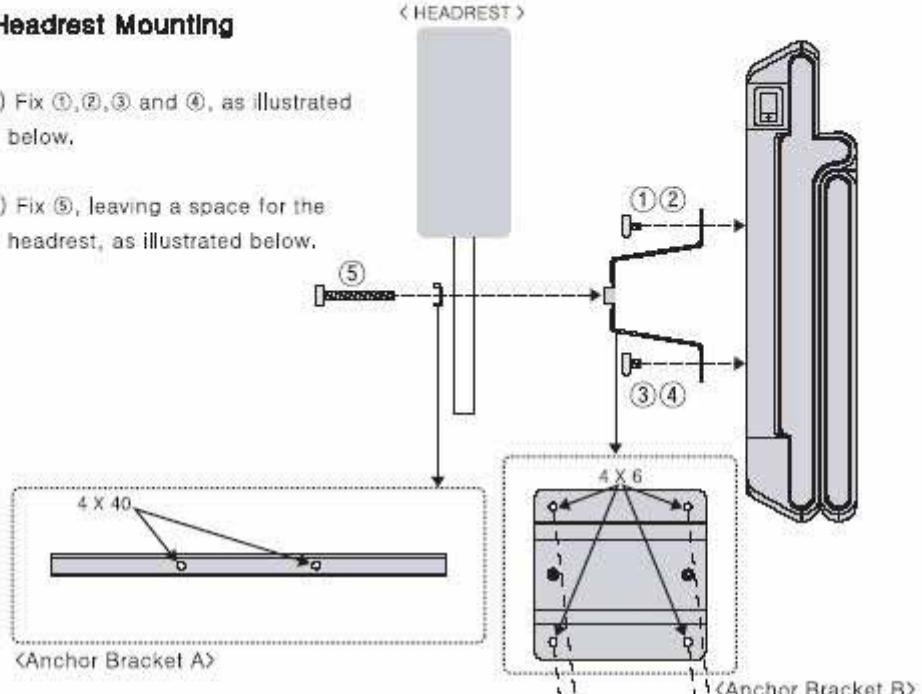


\* As shown in the figure at the right, ①, ②, ③ and ④ are screw holes for mounting the headrest and ⑥, ⑦, ⑧ and ⑨ are locks for mounting the roof.



Using the filter box and the cigar jack, connect the power supply to this product before using the product.



Be careful not to be injured by Anchor Bracket A after the headrest is mounted.

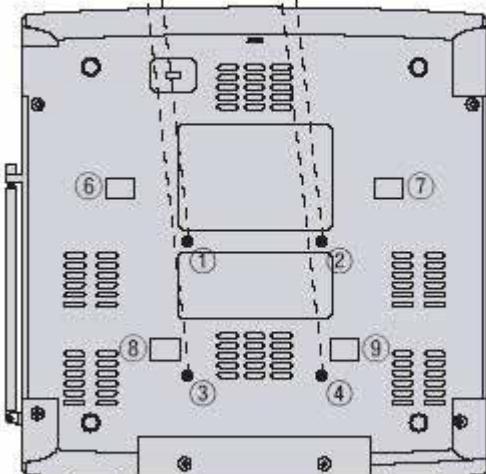


## Chapter 2

### 2. Roof Mounting



Prior to mounting the roof, check to see if the direction of Anchor 'Bracket C' is properly set. Mounting the roof may not be so simple.

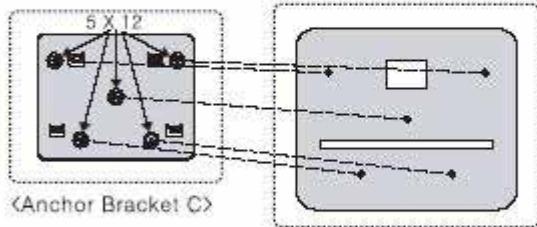




a) Remove the vehicle roof, as illustrated in ①.

b) Place Anchor Bracket C and Anchor Bracket D towards the inside of the vehicle and the roof surface, respectively.

To ensure that they are securely fixed, make a hole in the roof, as shown in ②.


c) As illustrated in ③, restore the vehicle roof to its original shape, from which it will not be changed.

d) As illustrated in ④, have this product fixed.  
(Ensure that ⑥, ⑦, ⑧ and ⑨, as illustrated at the bottom of page 6, and the protrusion of Anchor Bracket C are combined.)

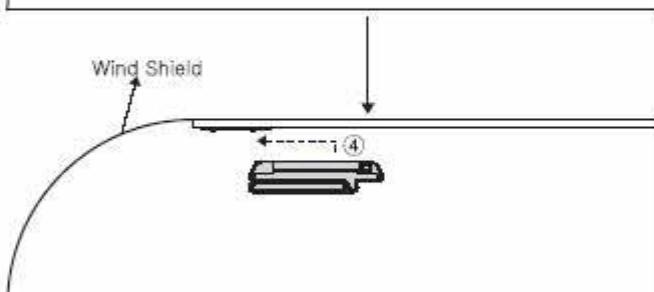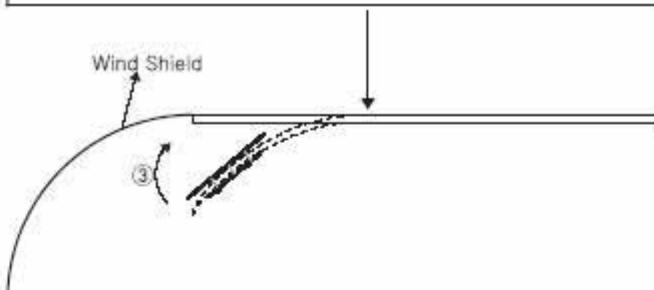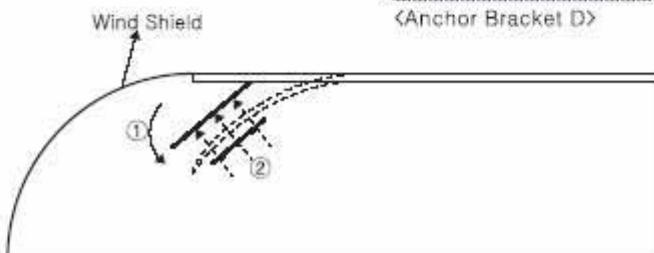

## Getting Started with the Device


### 1. Designations for each function

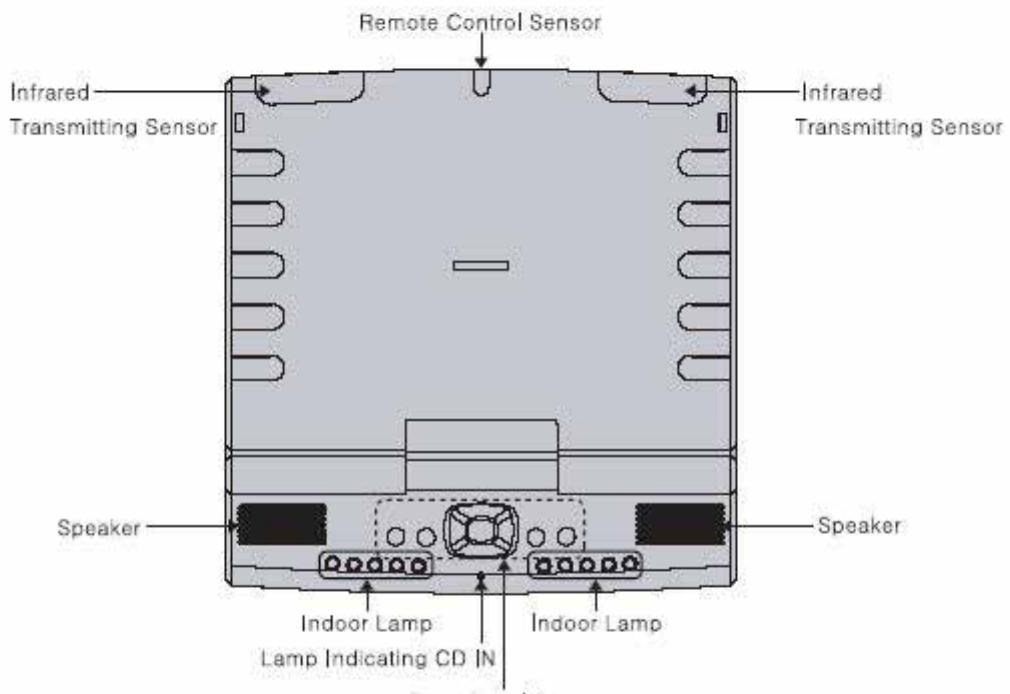


**<Device viewed when the monitor is off>**

\* Because this product is equipped with built-in infrared transmitting sensors, you can enjoy digital audio wirelessly using an infrared receiver (sold separately).

## Chapter 3

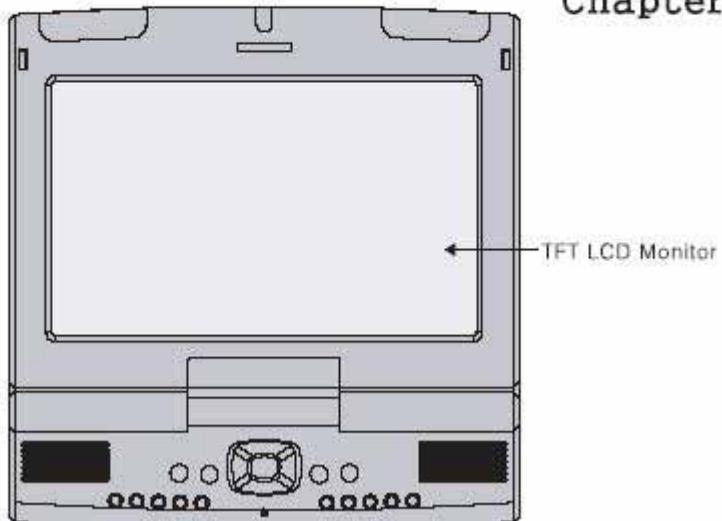


Do not rotate TFT monitor forcibly. This unit is available to be swiveled from 270(CW) to 30(CCW).

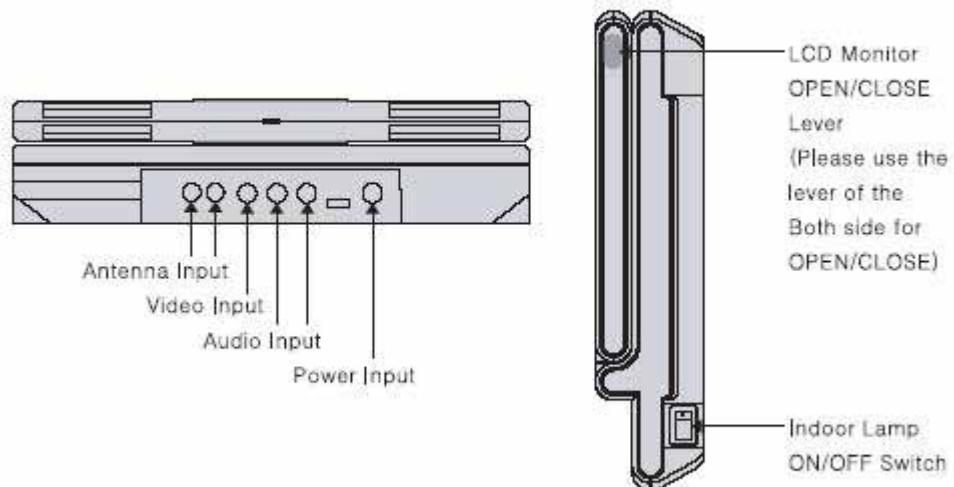


## Getting Started with the Device

### 2. Method of Using the Front Panel Button

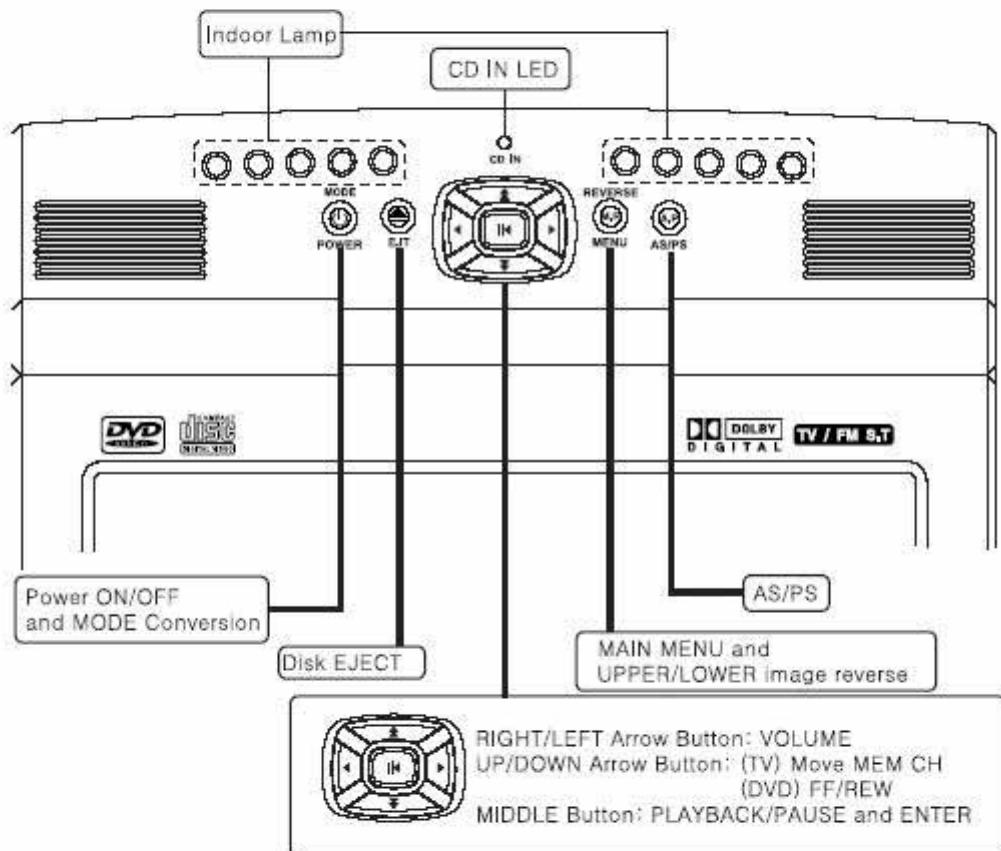

## Chapter 3

### 3. Remote Controller


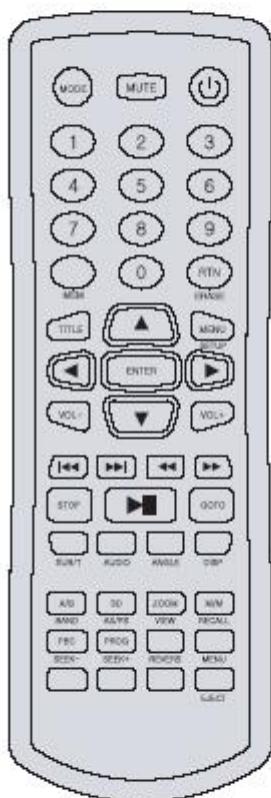


| KEY | TV/FM                                | DVD                | KEY | TV/FM                        | DVD                               |
|-----|--------------------------------------|--------------------|-----|------------------------------|-----------------------------------|
|     | SHORT : POWER ON<br>LONG : POWER OFF |                    |     |                              | MM : MEM MOVE<br>LR : MANUAL MOVE |
|     | MODE CHANGE                          |                    |     |                              | FF/REW                            |
|     | MUTE                                 |                    |     |                              | TRACK UP / TRACK ON               |
|     | TV : NO 1<br>FM : 1 MEM              |                    |     |                              | PLAY /PAUSE                       |
|     | TV : NO 2<br>FM : 2 MEM              |                    |     |                              | STOP                              |
|     | TV : NO 3<br>FM : 3 MEM              |                    |     |                              | GOTO                              |
|     | TV : NO 4<br>FM : 4 MEM              |                    |     |                              | DISPLAY                           |
|     | TV : NO 5<br>FM : 5 MEM              |                    |     |                              | ANGLE CHANGE                      |
|     | TV : NO 6<br>FM : 6 MEM              |                    |     |                              | AUDIO CHANGE                      |
|     | TV : NO 7                            |                    |     |                              | SUB TITLE CHANGE                  |
|     | TV : NO 8                            |                    |     | TV : PREVIOUS CHANNEL        | PLAY METHOD CHANGE                |
|     | TV : NO 9                            |                    |     | TV : CHANNEL LIST            | ZOOM                              |
|     | TV : NO 0                            |                    |     | AS/PS                        | 3D                                |
|     | TV : ERASE                           |                    |     | TV : TV/CATV<br>FM : FM1,2,3 | BETWEEN TWO POINTS REPEAT         |
|     | TV : MEM                             |                    |     | SEEK -                       | PBC ON/OFF                        |
|     |                                      | ROOT Menu or Setup |     | SEEK +                       | PROGRAM PLAY                      |
|     |                                      | TITLE Menu         |     |                              | SCREEN REVERSE                    |
|     | VOLUME UP/DOWN                       |                    |     |                              | MAIN MENU                         |
|     |                                      | ENTER              |     |                              | DISC EJECT                        |

## Setting the Device


### 1. Main Menu

- Push the button  on the remote control. "Setting (MENU OPTIONS)" will appear on the monitor.
-   Move the cursor up/down.
-   Adjust the cursor position.
-  Select a menu on the cursor key.

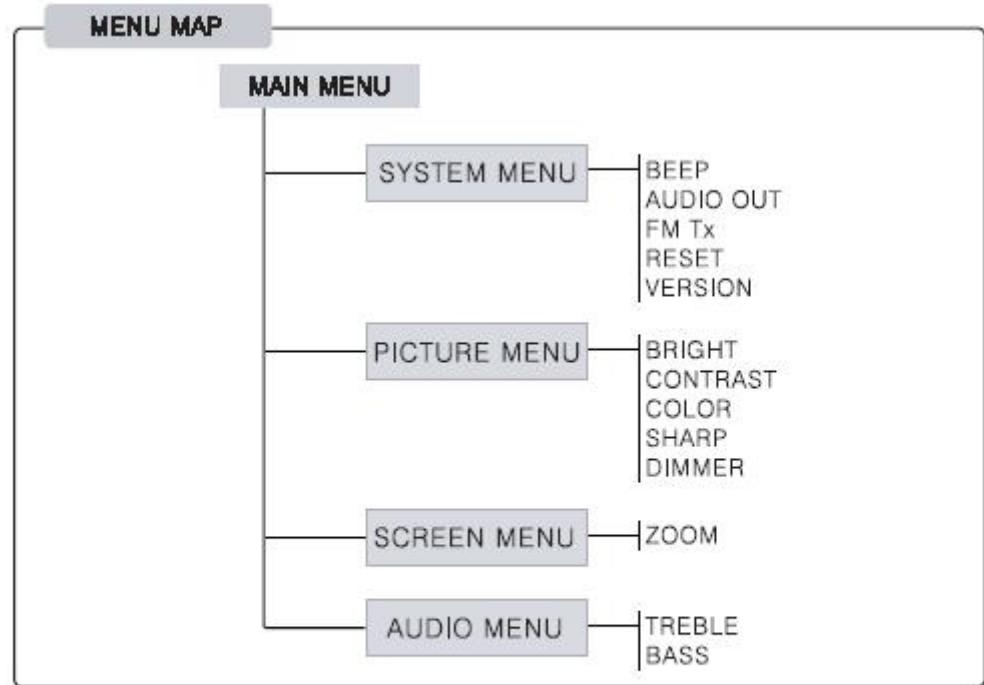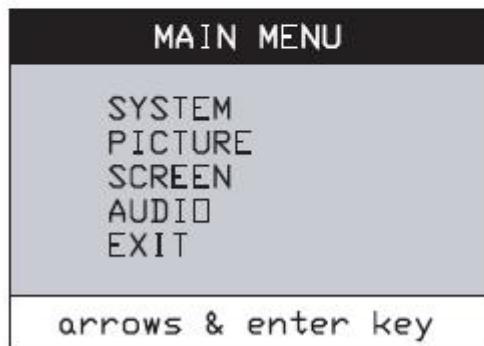

## 2. Setting the General Menu


## Chapter 4

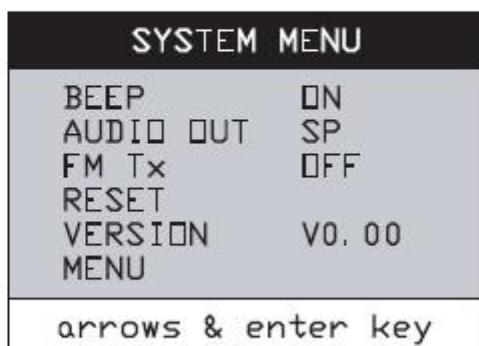

- Move to SYSTEM from MAIN MENU using the button (see page 10).  
If you push the button , "SYSTEM MENU" will appear on the screen.
- BEEP: Using the button , move the cursor to BEEP. Pushing the button allows you to set the menu options (On, Off).  
☞ This function lets you turn the buzzer on/off when operating this device.
- AUDIO OUT: This function allows you to move the cursor to AUDIO OUT so that you can set the menu options (SP, IR, SP+IR).  
☞ This function allows you to select a medium for the audio output.
- FM Tx: This function allows you to move the cursor to FM Tx so that you can set the menu options (Off, 88.1MHz, 91.2MHz).  
☞ This function lets you listen to what's playing on your audio player in the vehicle.
- RESET: This function allows you to move the cursor to RESET so that you can set the menu options by pressing the button lengthily.  
☞ This function allows you to initialize the product.

## Setting the Device


### 3. Monitor Adjustment

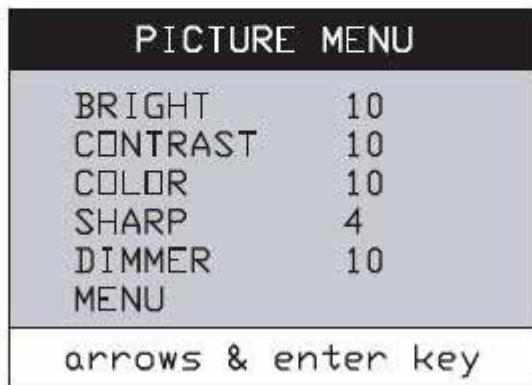


- Move to PICTURE from the MAIN MENU screen using the button (see page 10). If you push the button , "PICTURE MENU" will appear on the screen.
- BRIGHT: This function allows you to move the cursor to BRIGHT so that you can adjust the screen by pressing the button .(0~20)  
☞ This function lets you adjust the screen's brightness.
- CONTRAST: This function allows you to move the cursor to CONTRAST so that you can adjust the screen's contrast by pressing the button .(0~20)  
☞ This function lets you adjust the screen's contrast.
- COLOR: This function allows you to move the cursor to COLOR so that you can adjust the screen's color by pressing the button .(0~20)  
☞ This function lets you adjust the screen's color settings.
- SHARP: This function allows you to move the cursor to SHARP so that you can adjust the sharpness of the screen's color by pressing the button .(0~7)  
☞ This function lets you adjust the sharpness of the screen's color.
- DIMMER: This function allows you to move the cursor to DIMMER so that you can dim the screen by pressing the button .(0,20)  
☞ This function lets you adjust the brightness of the screen's color.

#### 4. Monitor and Volume (High/Low) Adjustment

#### Chapter 4

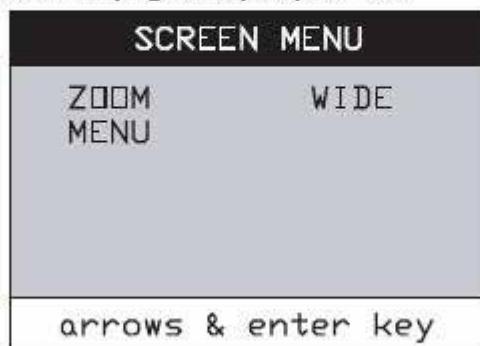

- Move to SCREEN from the MAIN MENU screen using the button (see page 10).  
If you push the button , "SCREEN MENU" will appear on the screen.
- ZOOM: This function allows you to move the cursor to ZOOM so that you can adjust the size of the screen by pressing the button (WIDE, NORMAL, FULL, ZOOM).
- ☞ This function lets you set the screen size.

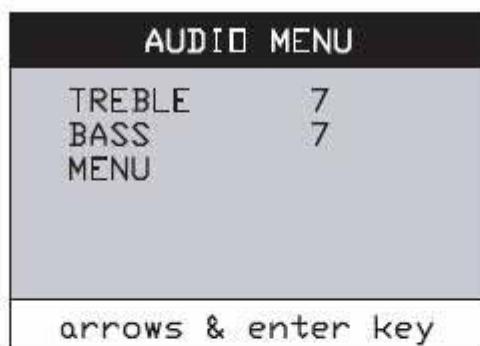

- Move to AUDIO from the MAIN MENU screen using the button (see page 10).  
If you push the button , "AUDIO MENU" will appear on the screen.
- TREBLE: This function allows you to move the cursor to TREBLE so that you can adjust the speaker's volume by pressing the button . (-7 ~ +7)  
☞ This function lets you adjust the speaker's volume.
- BASS: This function allows you to move the cursor to BASS so that you can adjust the speaker's volume by pressing the button . (-7 ~ +7)  
☞ This function lets you adjust the speaker's volume.

## TV(CATV)

TV BAND  
(TV, CATV) CH

### 1. Switching to TV Mode

- Press the button  on the remote control once or several times until TV (CATV) is displayed on the upper left side of the screen.

TV  
CATV

### 2. Switching Channels

- Pressing a numbered button on the remote control lets you tune the TV to the desired channel.
- Pressing the button   on the remote control allows you to tune the TV to one channel.
- If channels are stored, pressing the button   on the remote control lets you use the stored channels.

### 3. Seeking and Storing (Deleting) Channels

- SEEK (searching channels): By pressing the button   on the remote control, it allows you to search channels that are currently broadcasting.
  - : Searching while increasing channel numbers
  - : Searching while decreasing channel numbers
- Random storage: To store the channel being watched, press the button  on the remote control lengthily (for more than three seconds).
- Stored channel deletion: To delete the channel being watched, press the button  on the remote control lengthily (for more than three seconds).
- PS: If this button  on the remote control is pressed briefly, the stored channels are displayed one by one every five seconds.
- AS: If this button  on the remote control is pressed lengthily (for more than three seconds), automatic search is started, beginning with the current channel. Channels searched are memorized. (Memorized channels are displayed in yellow, whereas unmemorized channels are displayed in violet).

AUTO SCAN page1

10 24 33

Found channels : 3

\* To stop or cancel AS/PS, press the button  on the remote control.

---

## Chapter 5

### 4. Viewing Memorized Channels

- If  on the remote control is pressed, memorized channels are displayed on the screen.





### 5. Viewing Previous Channels

- If  on the remote control is pressed, previous channels are displayed on the screen.

### 6. Watching CATV

- Pressing the TV mode button  on the remote control lengthily (for more than three seconds) allows you to switch to CATV.
- There is no difference in function between TVs and CATVs. On the way the CATV is used, please refer to page 16.

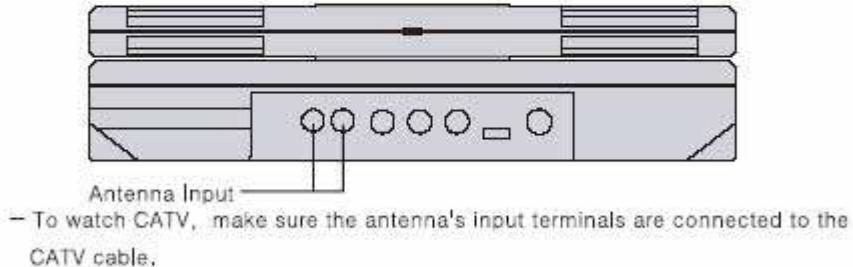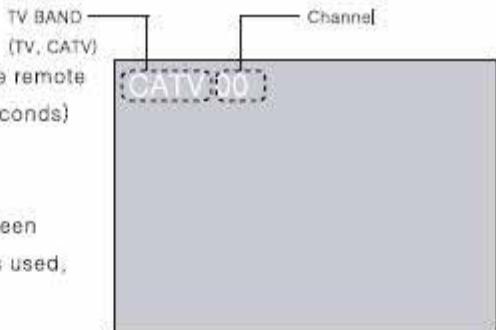


## FM Radio

### 1. Switching to FM Mode


- Press the button  on the remote control once or several times until RADIO is displayed on the upper left side of the screen.

RADIO

### 2. Screen Configuration

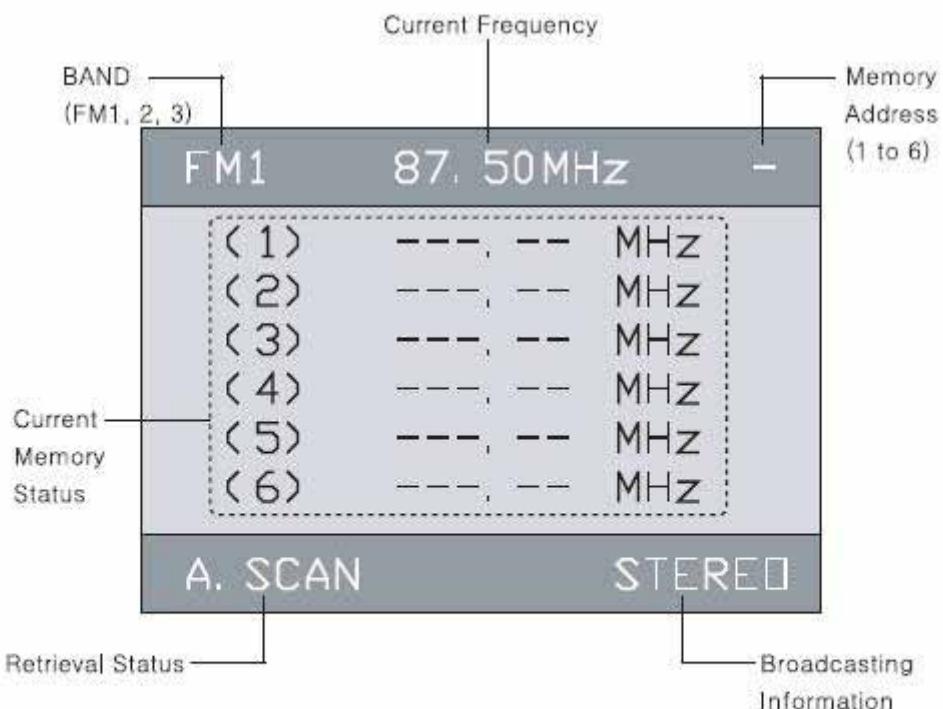

## Chapter 6

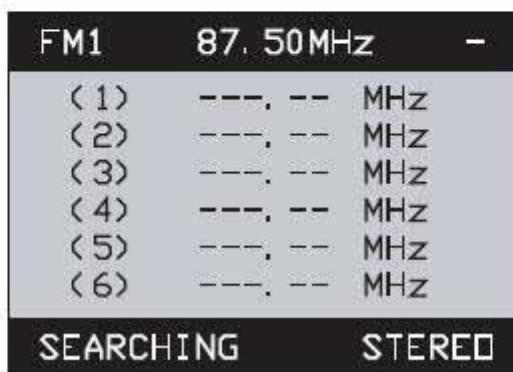

### 3. Switching Frequencies

- Pressing the button on the remote control allows you to switch frequencies for each STEP.
- If channels are memorized, pressing the button on the remote control lets you use the memorized channels.  
[Up to 18 memorized channels for every six channel (FM 1, 2, 3) are available.]

### 4. Frequency Retrieval

- SEEK (frequency retrieval): By pressing the button on the remote control, you can search channels that are currently broadcasting.  
: Searching while increasing frequencies  
: Searching while decreasing frequencies

When frequency retrieval starts, the statement "SEARCHING" will appear, as shown in the figure above. The statement will disappear when the frequency retrieval ends.

## FM Radio

## 5. Automatic Frequency Retrieval

- AS: If this button  on the remote control is pressed lengthily (for more than three seconds), automatic search is started, beginning with the current channel. Channels searched are memorized. Memorized channels are displayed as shown in the figure at the right. (As soon as frequency search begins the statement "A,SCAN" will appear on the frequency retrieval ends.)

- If more than 6 frequencies are being broadcasted during automatic search, up to 18 frequencies are continuously memorized through FM-2's/-3's memory space.

## 6. Memorized Frequency Retrieval

- PS: If this button  on the remote control is pressed briefly, memorized channels are heard one by one every five second. (As soon as memorized frequency search begins, the statement "P.SCAN" will appear on the screen. The statement will disappear when the retrieval ends.)

|     |           |     |
|-----|-----------|-----|
| FM1 | 87. 50MHz | 1   |
| (1) | 87. 50    | MHz |
| (2) | ---, --   | MHz |
| (3) | ---, --   | MHz |
| (4) | ---, --   | MHz |
| (5) | ---, --   | MHz |
| (6) | ---, --   | MHz |

| FM1 | 87.50MHz   | 1   |
|-----|------------|-----|
| (1) | 87.50 MHz  |     |
| (2) | 91.50 MHz  |     |
| (3) | 101.50 MHz |     |
| (4) | ---        | MHz |
| (5) | ---        | MHz |
| (6) | ---        | MHz |

P. SCAN STEREO

\* To stop or cancel AS/PS, press the button  on the remote control.

## Chapter 6

### 7. Random Storage

- To store the frequency to which you are listening, press the desired button  on the remote control lengthily. The frequency is saved as a pressed number.

| FM1 | 87. 50MHz | 4   |
|-----|-----------|-----|
| (1) | 87. 50    | MHz |
| (2) | 91. 50    | MHz |
| (3) | 97. 50    | MHz |
| (4) | 101. 50   | MHz |
| (5) | 87. 50    | MHz |
| (6) | ---, --   | MHz |

STEREO

### 8. Switching to Memorized Frequencies

- Pressing the buttons from  to  on the remote control allows you to switch to memorized frequencies. (If there is no memorized frequency, the player will not operate.)
- If you press the  remote control while listening to the player, the memorized frequencies are switched by one step.


### 9. Switching between FM 1, 2 and 3

- If  this button is pressed, the radio channel is switched in the order of FM1, FM2, FM3 and FM1.

## DVD

### 1. Switching to DVD Mode

- Press the DVD button  on the device's remote control once or several times until "DVD" is displayed on the upper left side of the product's screen.

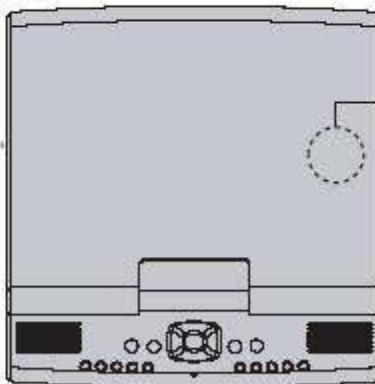

#### \* When insert disc...



### 2. Main Functions

#### — TRACK(CHAPTER) UP/DOWN

Pressing this button  on the device's remote control when playing a DVD on the device lets you track the DVD (i.e., search the DVD's chapters).

#### — FAST FORWARD/REWIND

Pressing this button  on the device's remote control when playing a DVD on the device lets you FAST FORWARD/REWIND the DVD. Pressing this button several times lets you FAST FORWARD/REWIND the DVD faster (X2, X4, X8, X16 and X32).

#### — PLAY/PAUSE

Pressing this button  lets you play back a disc on the device or pause its playback.

#### — STOP

Pressing this button  on the device's remote control when playing a disc on the device lets you stop the playback.

#### — DISP

Pressing this button  on the device's remote control when playing a disc on the device displays information on what is being played back on the screen.

#### — A/B(Repeat Section)

To repeat a specified section, set the section's starting/ending points with this button  on the device's remote control when playing a disc on the device.

#### — 3D

To change the device's stereo sound, press this button  on the device's remote control when playing a disc on the device.

#### — M/M

To change the playback mode (such as to repeated playback), press this button  on the device's remote control when playing a disc on the device.

#### — EJECT

To remove a disc from the player, press this button  on the device's remote control when playing a disc on the device.

\* The following main functions are available during the playback of all discs that this product supports.


---

## Chapter 7

### 3. SETUP

This function allows you to set the overall functions when using the DVD mode.

- Pressing this button  lengthily (for more than three seconds) displays SETUP MENU on the screen.

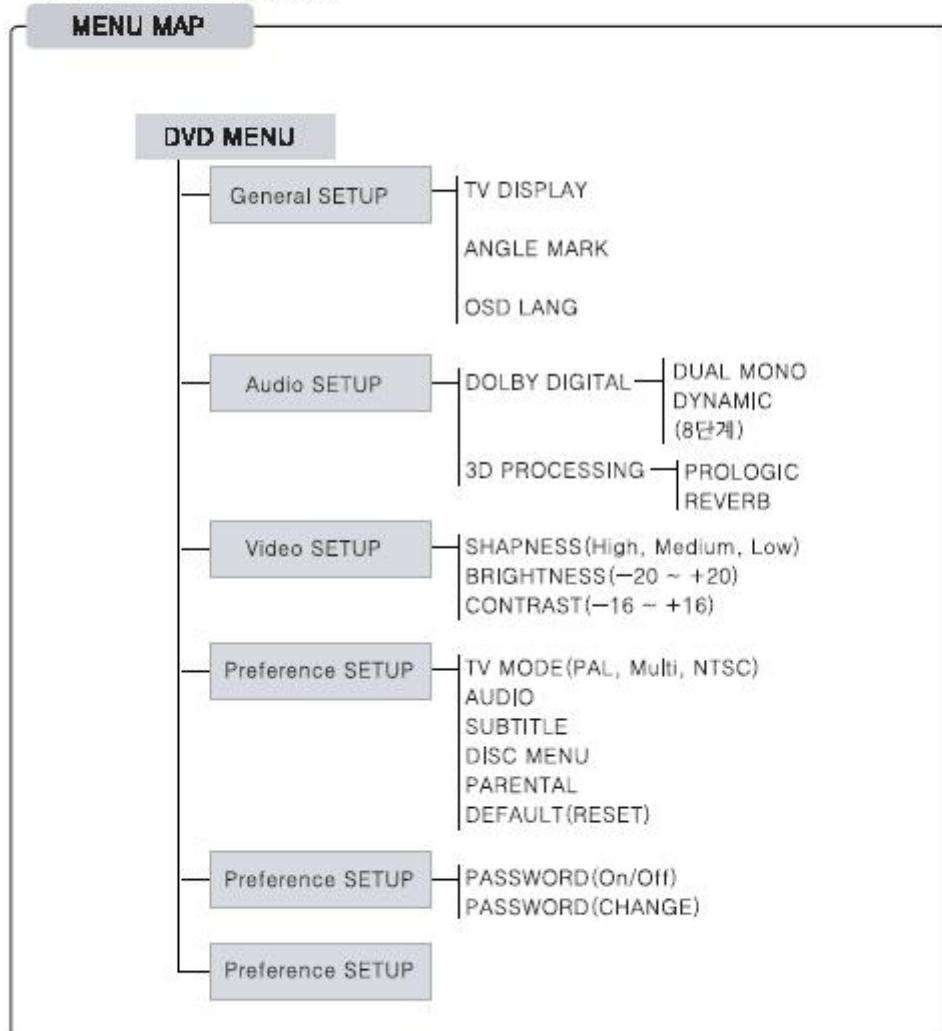

## DVD

### 3-1 GENERAL SETUP PAGE

- In SETUP MENU, this button  is used to move the cursor.
- In SETUP MENU, this button  is used to choose individual functions.



#### Description of individual menus in GENERAL SETUP

- **TV DISPLAY: PAN & SCAN, LETTER BOX, WIDE**
  - a. **PAN & SCAN:** This menu is selected to watch TV (or video) on an existing TV set. In imaging media formatted in PAN & SCAN to a 16:9 aspect ratio, only the center of a scene is played back.
  - b. **LETTER BOX:** In imaging media formatted in non-PAN & SCAN, a scene is played back such that a letter fits in a letter box. Black bands appear on the upper and lower sides of the screen.
  - c. **WIDE:** This menu is selected to watch TV (or video) on a wide-screen set. Playback can be performed on a full screen.  
(For wide-screen TVs, set the menu to the Full-Screen mode.)
- **ANGLE MARK (On/Off):** This menu is selected to indicate ANGLE when using the ANGLE function in a disc supporting the ANGLE function.
- **OSD LANG (English, Chinese):** This menu is selected to set a language for characters displayed on the screen during the operation of a DVD's features.

## Chapter 7

### 3-2 AUDIO SETUP PAGE

– In SETUP MENU  this button

is used to move the cursor.

– In SETUP MENU  this button is used to choose individual functions.

\* Description of individual menus in AUDIO SETUP

#### ➤ Dolby Digital Setup


– DUAL MONO: This menu is selected to connect the device to a mono audio device or a TV set.

– DYNAMIC: This menu is selected when voices are seldom heard from a stereo system or a TV set. Press  this button and set the directional button to

 this button,

#### ➤ 3D Processing

– REVERB MODE: This menu allows you to enjoy a variety of realistic sound effects;

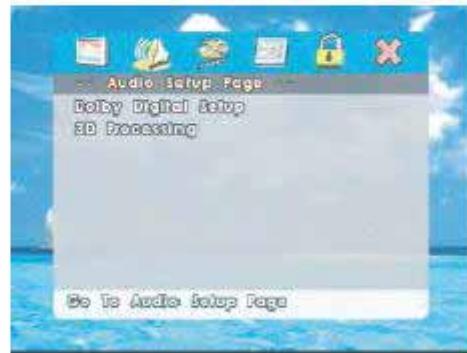

## Chapter 7

### 3-2 AUDIO SETUP PAGE

– In SETUP MENU  this button

is used to move the cursor.

– In SETUP MENU  this button is used to choose individual functions.

\* Description of individual menus in AUDIO SETUP

#### ➤ Dolby Digital Setup


– DUAL MONO: This menu is selected to connect the device to a mono audio device or a TV set.

– DYNAMIC: This menu is selected when voices are seldom heard from a stereo system or a TV set. Press  this button and set the directional button to

 this button,


#### ➤ 3D Processing

– REVERB MODE: This menu allows you to enjoy a variety of realistic sound effects;

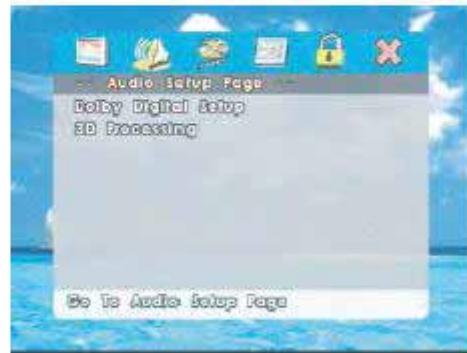

## DVD
 
### 3-3 VIDEO SETUP PAGE

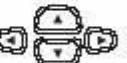- In SETUP MENU  this button is used to move the cursor.
- In SETUP MENU  this button is used to choose individual functions.



#### \* Description of individual menus in VIDEO SETUP

##### > Quality

- SHARPNESS: This menu allows you to adjust the screen's sharpness.
- BRIGHTNESS: This menu allows you to adjust the screen's brightness.
- CONTRAST: This menu allows you to adjust the screen's contrast.



## Chapter 7

### 3-4 PREFERENCE SETUP PAGE

- In SETUP MENU, this button is used to move the cursor.
- In SETUP MENU this button is used to choose individual functions.



#### \* Description of individual menus in PREFERENCE SETUP

- TV TYPE: This menu is used to select between NTSC and PAL video signal types. To ensure automatic conversion, select MULTI. (Due to the time that this device recognizes, your screen may flicker for some time while using MULTI.)
- AUDIO: This menu allows you to set a language for AUDIO during DVD playback. This menu is available only within the scope of the support provided by the disc being played back.
- SUBTITLE: This menu allows you to set a language for SUBTITLE during DVD playback. This menu is available only within the scope of the support provided by the disc being played back.
- DISC MENU: This menu allows you to set a language for the menu listed on the DVD.
- PARENTAL: This function enables you to limit access to graded discs. For discs for use in the player, one level out of eight levels can be set. However, all levels can be set for discs for adults.
- DEFAULT: This function enables you to initialize all DVD functions.

## DVD

### 3-5 PASSWORD SETUP PAGE

- In SETUP MENU    this button is used to move the cursor.
- In SETUP MENU  this button is used to choose individual functions.



- \* Description of individual menus in PASSWORD SETUP
- PASSWORD MODE: This menu allows you turn the password function ON/OFF.
- PASSWORD: This menu allows you to change your password.



- Take care not to forget your password.
- You cannot set a new password until you enter your existing password.
- CAUTION** – At the time of product purchase, the default password is set to "136900".

## chapter 7

### 4. Audio CD



#### — 3D (stereo sound) function

Pressing **[=]** this button on the device's remote control when playing a disc on the device lets you change the device's stereo sound as follows: (Audio CDs, video CDs and MP3 CDs share the same 3D function.)

CONCERT → LIVING ROOM → HALL → BATHROOM → CAVE → ARENA → CHURCH → OFF

#### — M/M (playback mode) function

Pressing **[=]** this button on the device's remote control when playing a disc on the device lets you change the device's playback mode as follows

TRACK REPEAT → ALL REPEAT → SHUFFLE

— If a button is pressed that is not available in the audio CD being played, the sign marked with "Ø" is displayed on the screen

## DVD

### 5. MP3 CD



#### — File list and folder viewing

Pressing this button when playing a disc on the device after setting the disc to 'Folder Viewing' lets you convert the device's setting to "File List". To view the folder-type playback information one more time, press this button on the remote control one more time. A disc can recognize up to 300 folders of up to 650 files each.

#### — Playback using a music list

Pressing this button on the device's remote control while moving the yellow cursor to the desired button lets you play a piece of selected music. (The music currently being played is displayed by the sky blue cursor.)

#### — 3D (stereo sound) function

With regard to 3D functions, MP3 CDs are the same as audio CDs. (See p. 29.)

#### — M/M (playback mode) function

Pressing this button on the device's remote control when playing a disc on the device lets you change the device's playback mode as follows

RANDOM → SINGLE → REPEAT ONE → REPEAT FOLDER → FOLDER → SHUFFLE

— If a button is pressed that is not available in an MP3 CD being played, the sign marked with "Ø" is displayed on the screen.

## Chapter 7

### 6. Video CD



#### — PBC (playback control) function

Press  this button to turn the PBC function ON/OFF.

(However, this menu is available only within the scope of the support provided by the disc being played back.)

#### — 3D (stereo sound) function

With regard to 3D functions, video CDs are the same as audio CDs. (See p. 29.)

#### — ZOOM (in, out) function

Pressing  this button on the device's remote control when playing a disc on the device lets you zoom the display in or out.

(2X → 3X → 4X → 1/2 → 1/3 → 1/4 → NORMAL)

— If a button is pressed that is not available in a video CD being played, the sign marked with "Ø" is displayed on the screen.

## DVD

### 7. DVD



#### — Changing Angles

Pressing  the ANGLE button on the device's remote control when playing a disc on the device lets you change the DVD's angle. (However, the angle is changed only within the scope of the support provided by the disc being played back.)

#### — Changing Subtitles

Pressing  the SUBTITLE button on the device's remote control when playing a disc on the device lets you change the DVD's subtitle. (However, the subtitle is changed only within the scope of the support provided by the disc being played back.)

#### — Changing Audios

Pressing  the AUDIO button on the device's remote control when playing a disc on the device lets you change the device's audio setting. (However, the audio setting is changed only within the scope of the support provided by the disc being played back.)

#### — 3D (stereo sound) function

Pressing  the 3D button on the device's remote control when playing a disc on the device lets you change the device's stereo sound as follows

ROCK → POP → LIVE → DANCE → TECHNO → CLASSIC → SOFT → OFF

#### — M/M (playback mode) function

Pressing  this button on the device's remote control when playing a disc on the device lets you change the device's stereo sound as follows

CHAPTER REPEAT → TITLE REPEAT → SHUFFLE

— If a button is pressed to perform a function that is not available in a DVD being played, the sign marked with 'Ø' is displayed on the screen.

### 8. Others




— How to use the GO TO function

The GO TO function enables the user to operate the device smoothly during playback.

Pressing  this button on the remote control during playback displays the GO TO function on the screen. You can select a menu on the GO TO function using  these button on the remote control.

— There is a ROOT MENU function in DVDs. If a remote control is in place, use  its button. To play back a disc with the front panel button instead of a remote control, press the AS/PS button on the front of the product lengthily.

## AUX

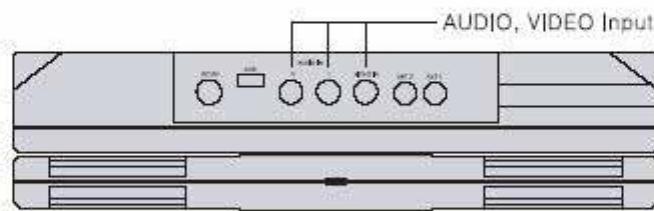

—Please Insert AUDIO,VIDEO OUTPUT to AUDIO&VIDEO INPUT,

— You may change Mode to AUX by button.

— Input Signal from output is used.

# Components

■ Please check the following components list before using the unit.



These above components could be changed for improvement or modification without pre-notice.

MEMO