


View Radiated Emission Configuration – Horizontal Orientation

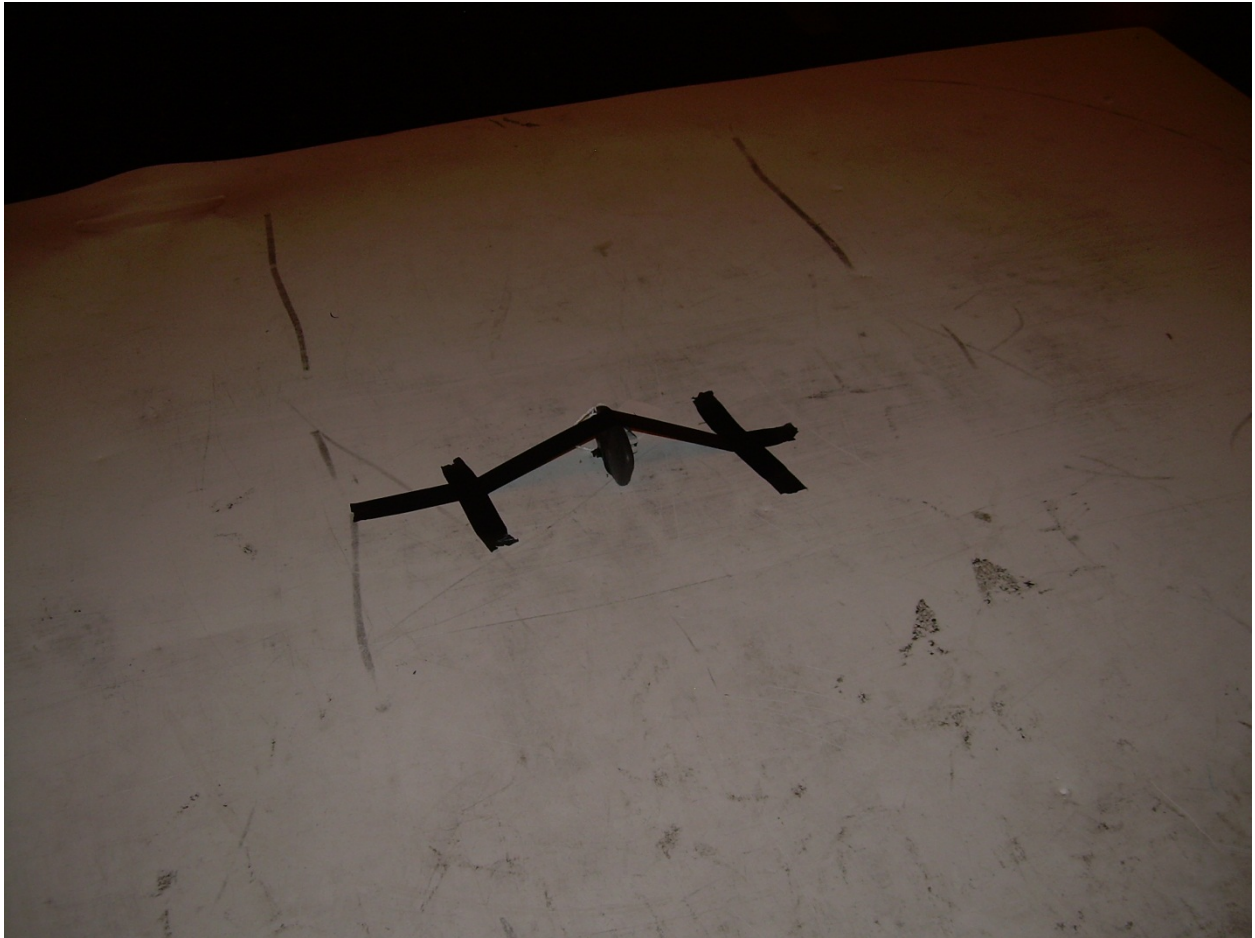

View Radiated Emission Configuration – On Edge Orientation



View Radiated Emission Configuration – Vertical Orientation

