

Working Principle of Remote Controller R10

Put the batteries in, press ON/OFF button, code IC2262 is power up and working, sending code address signal, enlarged and transmit by carrier wave through antenna.