

JP-14768 Clock Walkie Talkie Instruction Manual

TO CHANGE THE BATTERY FOR LCD WATCH AND WALKIE TALKIE:

- 1.REMOVE THE SCREW ON THE BIG BATTERY DOOR WITH A SCREW DRIVER.(SEE FIG.2)
- 2.OPEN THE BIG BATTERY DOOR AND THEN OPEN THE SMALL BATTERY DOOR WITH A SCREW DRIVER. (SEE FIG.3)
- 3.BATTERY FOR LCD CLOCK: INSERT A FRESH NEW ALKALINE BATTERY (1.5V AG-3 BUTTON CELL BATTERY)WITH THE POSITION (+) SIDE UP INTO THE BUTTON CELL BATTERY COMPARTMENT.(SEE FIG. 3)
- 4.BATTERY FOR WALKIE-TALKIE: SNAP A 9V BATTERY INTO THE BATTERY COMPARTMENT ACCORDING TO CORRECT POLARITY.(SEE FIG. 2).
- 5.REPLACE THE BATTERY DOORS AND THE SCREW ON POSITION.

READING THE WATCH DISPLAY TIME:

NORMALLY DISPLAY SHOW THE NORMAL TIME.

TO READ THE MONTH AND DATE, PRESS THE 'SET' BUTTON ONE TIME. AFTER 2 SECOND, DISPLAY GO BACK TO NORMAL TIME.

TO READ THE SECOND, PRESS THE 'SET' BUTTON 2 TIMES, GO BACK TO NORMAL TIME, PRESS "SET" BUTTON ONE MORE TIME .

BATTERY POWER OF LCD WATCH:

TO MOVE THE LCD WATCH STABLE OPERATION, WE STRONGLY RECOMMEND THE EXCLUSIVE USE OF ALKALINE BATTERY.(OPERATED BY ONE PC. OF 1.5V AG-3 BUTTON CELL BATTERY)

TIME AND DATE SETTING:

WHEN DISPLAY SHOW NORMAL TIME.

MONTH SETTING

- 1.PRESS 'MODE' BUTTON 1 TIME,DISPLAY SHOW MONTH AND DATE.
- 2.PRESS'MODE' BUTTON 2 TIMES TO ENTER MONTH MODE, THEN DEPRESS 'SET' BUTTON TO SET THE MONTH.

DATE SETTING:

- 3.PRESS 'MODE' BUTTON 3 TIMES TO ENTER DATE MODE, THEN DEPRESS 'SET' BUTTON TO SET THE DATE.

HOUR SETTING:

- 4.PRESS 'MODE' BUTTON 4 TIMES TO ENTER HOUR MODE, THEN DEPRESS 'SET' BUTTON TO SET HOUR.(A' MEANS AM,'P' MEANS PM)

MINUTE SETTING:

- 5.PRESS 'MODE' BUTTON 5 TIMES TO ENTER MINUTE MODE, THEN DEPRESS 'SET' BUTTON TO SET MINUTE.

AFTER FINISH SETTING, PRESS'MODE' BUTTON ONE MORE TIME GO BACK TO NORMAL TIME. AND THEN PRESS 'SET' BUTTON AGAIN TO RUN THE CLOCK.

WALKIE TALKIE OPERATION

- 1.PUSH THE 'ON/OFF' SWITCH TO 'ON' POSITION.
- 2.MOVE THE MIC CLOSE TO YOUR MOUTH,AND PRESS THE 'PUSH TO TALK' BUTTON TO TRANSMIT YOUR VOICE. PRESS THE ' MORSE CODE BUTTON' AT THE SAME TIME TO TRANSMIT MORSE CODES.
- 3.RELEASE THE 'PUSH TO TALK' BUTTON FOR RECEIVING VOICE OR MORSE CODES FROM THE SPEAKER.
- 4.TURN 'ON/OFF' SWITCH TO 'OFF' POSITION AFTER USED.

"Modifications not authorized by the manufacturer may void users authority to operate this device"

Note:

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions:

- (1)This device may not cause harmful interference, and(2)This device must accept any interference received, including interference that may cause undesired operation.

WARNING:

- 1.SUGGEST TO CHANGE THE BATTERY BY ADULT.

- 2.SMALL PARTS NOT FOR CHILDREN UNDER 3 YEARS AGE.

- 3.DO NOT TOUCH OR MODIFY THE INTERNAL COMPONENTS OTHER THAN REPLACE THE BATTERY.

- 4.DO NOT MIX OLD AND NEW BATTERIES.

- 5.DO NOT MIX ALKALINE, STANDARD(CARBON ZINC), OR RECHARGEABLE (NICKLE-CADMIUM) BATTERIES.

