

RECEIVED 07 JAN 2005

JP-67668 WALKIE TALKIE INSTRUCTION MANUAL

TO CHANGE THE BATTERY FOR WALKIE TALKIE:

1. OPEN THE BATTERY DOOR BY PUSH IT IN THE ARROW DIRECTION.(SEE FIG.2)
2. BATTERY FOR WALKIE-TALKIE: SNAP A 9V BATTERY INTO THE BATTERY COMPARTMENT ACCORDING TO CORRECT POLARITY.(SEE FIG. 2).
3. CLOSE THE BATTERY DOOR.

WALKIE TALKIE OPERATION

1. PUSH THE 'ON/OFF' SWITCH TO 'ON' POSITION.
2. MOVE THE MIC CLOSE TO YOUR MOUTH AND PRESS THE 'PUSH TO TALK' BUTTON TO TRANSMIT YOUR VOICE. PRESS THE 'MORSE CODE BUTTON' AT THE SAME TIME TO TRANSMIT MORSE CODES.
4. RELEASE THE 'PUSH TO TALK' BUTTON FOR RECEIVING VOICE OR MORSE CODES FROM THE SPEAKER.
5. BEST TRANSMISSION AND RECEPTION ARE OBTAINED WHEN THE ANTENNA IS HELD IN A VERTICAL POSITION.
6. TURN 'ON/OFF' SWITCH TO 'OFF' POSITION AFTER USED.

"Modifications not authorized by the manufacture may void users authority to operate this device"

Note:

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING:

1. SUGGEST TO CHANGE THE BATTERY BY ADULT.
2. SMALL PARTS NOT FOR CHILDREN UNDER 3 YEARS AGE.
3. DO NOT TOUCH OR MODIFY THE INTERNAL COMPONENTS OTHER THAN REPLACE THE BATTERY.
4. DO NOT MIX OLD AND NEW BATTERIES.
5. DO NOT MIX ALKALINE, STANDARD(CARBON ZINC), OR RECHARGEABLE (NICKLE-CADMIUM) BATTERIES.

JP-67668 WALKIE TALKIE INSTRUCTION MANUAL

TO CHANGE THE BATTERY FOR WALKIE TALKIE:

1. OPEN THE BATTERY DOOR BY PUSH IT IN THE ARROW DIRECTION.(SEE FIG.2)
2. BATTERY FOR WALKIE-TALKIE: SNAP A 9V BATTERY INTO THE BATTERY COMPARTMENT ACCORDING TO CORRECT POLARITY.(SEE FIG. 2).
3. CLOSE THE BATTERY DOOR.

WALKIE TALKIE OPERATION

1. PUSH THE 'ON/OFF' SWITCH TO 'ON' POSITION.
2. MOVE THE MIC CLOSE TO YOUR MOUTH AND PRESS THE 'PUSH TO TALK' BUTTON TO TRANSMIT YOUR VOICE. PRESS THE 'MORSE CODE BUTTON' AT THE SAME TIME TO TRANSMIT MORSE CODES.
4. RELEASE THE 'PUSH TO TALK' BUTTON FOR RECEIVING VOICE OR MORSE CODES FROM THE SPEAKER.
5. BEST TRANSMISSION AND RECEPTION ARE OBTAINED WHEN THE ANTENNA IS HELD IN A VERTICAL POSITION.
6. TURN 'ON/OFF' SWITCH TO 'OFF' POSITION AFTER USED.

"Modifications not authorized by the manufacture may void users authority to operate this device"

Note:

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING:

1. SUGGEST TO CHANGE THE BATTERY BY ADULT.
2. SMALL PARTS NOT FOR CHILDREN UNDER 3 YEARS AGE.
3. DO NOT TOUCH OR MODIFY THE INTERNAL COMPONENTS OTHER THAN REPLACE THE BATTERY.
4. DO NOT MIX OLD AND NEW BATTERIES.
5. DO NOT MIX ALKALINE, STANDARD(CARBON ZINC), OR RECHARGEABLE (NICKLE-CADMIUM) BATTERIES.

