




Appendix II

Internal Photographs


Open View of EUT




Internal View of EUT-1

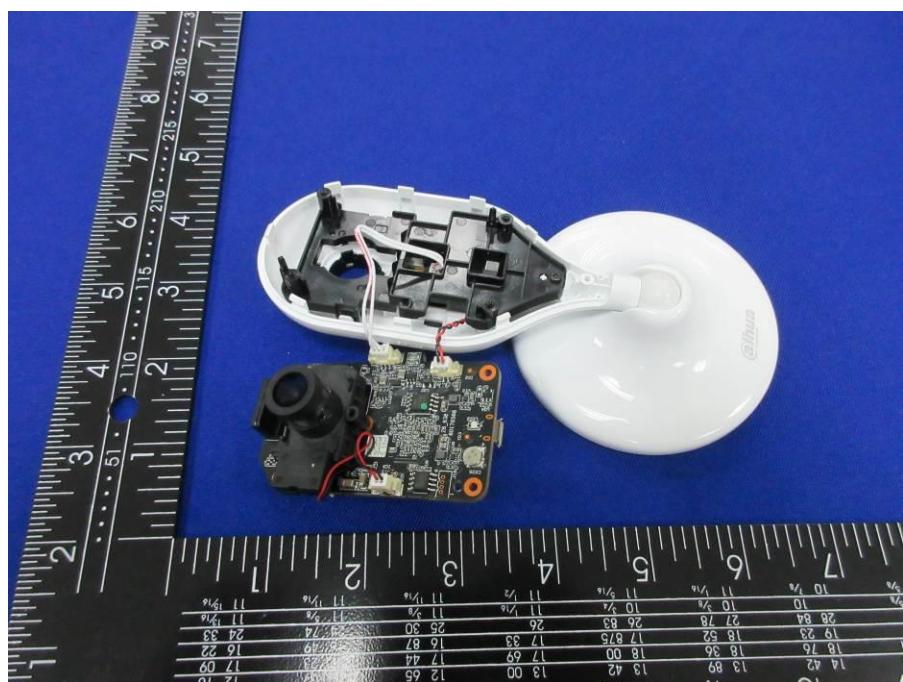


Internal View of EUT-2

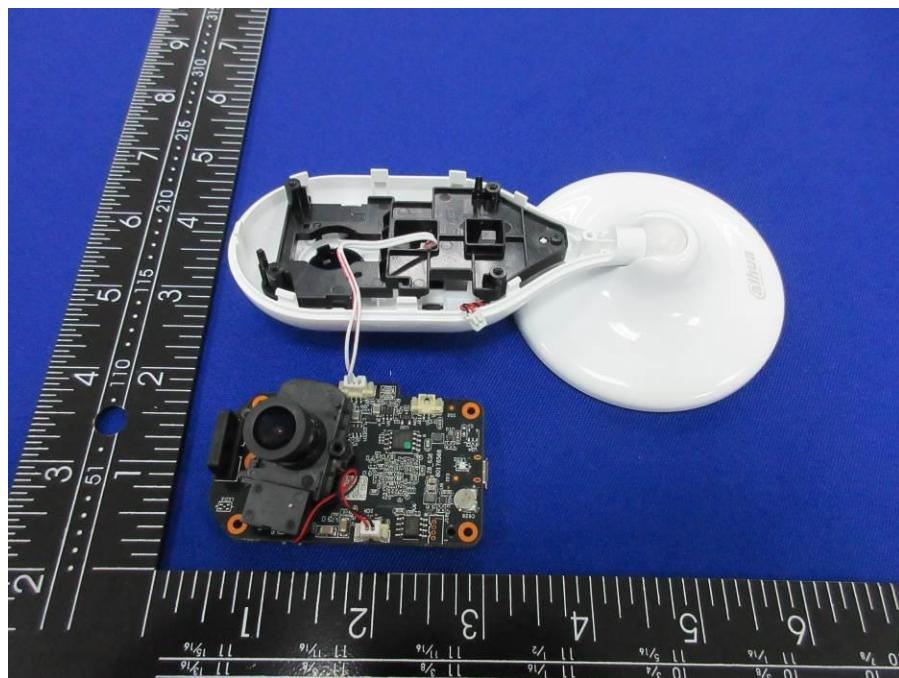


Internal View of EUT-3

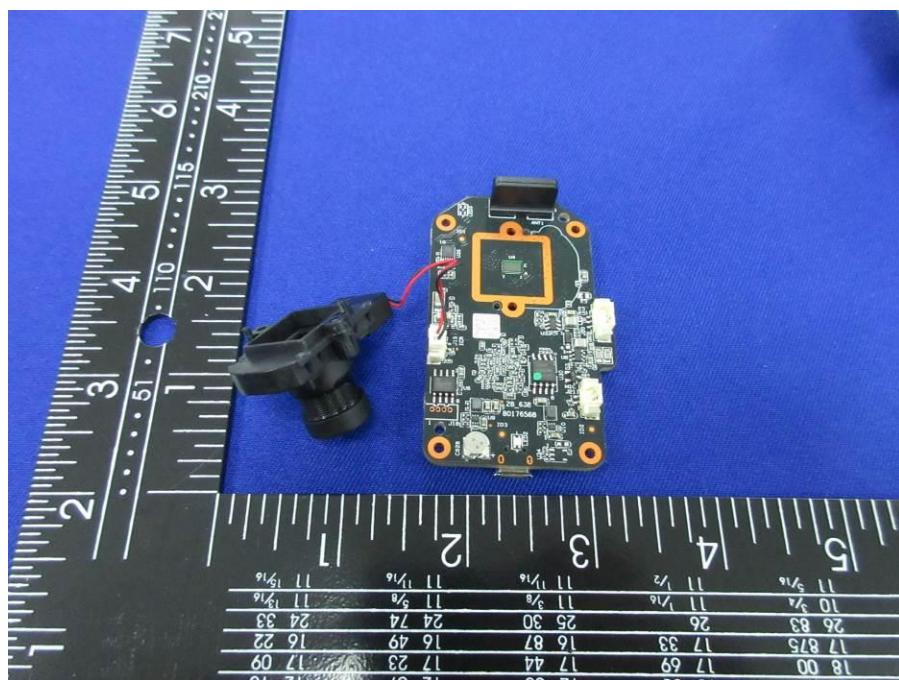


Internal View of EUT-4

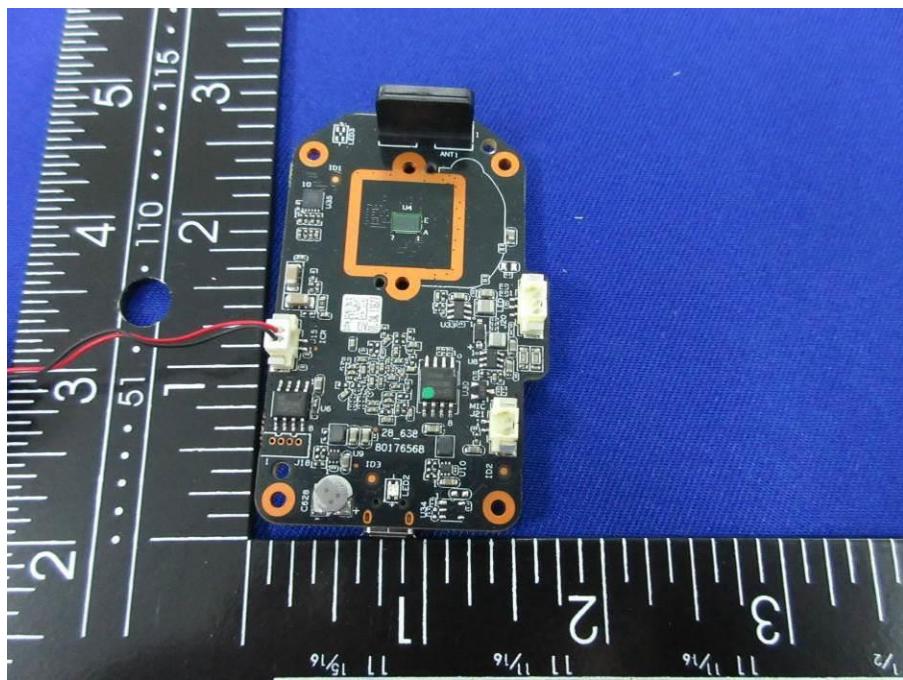


Internal View of EUT-5

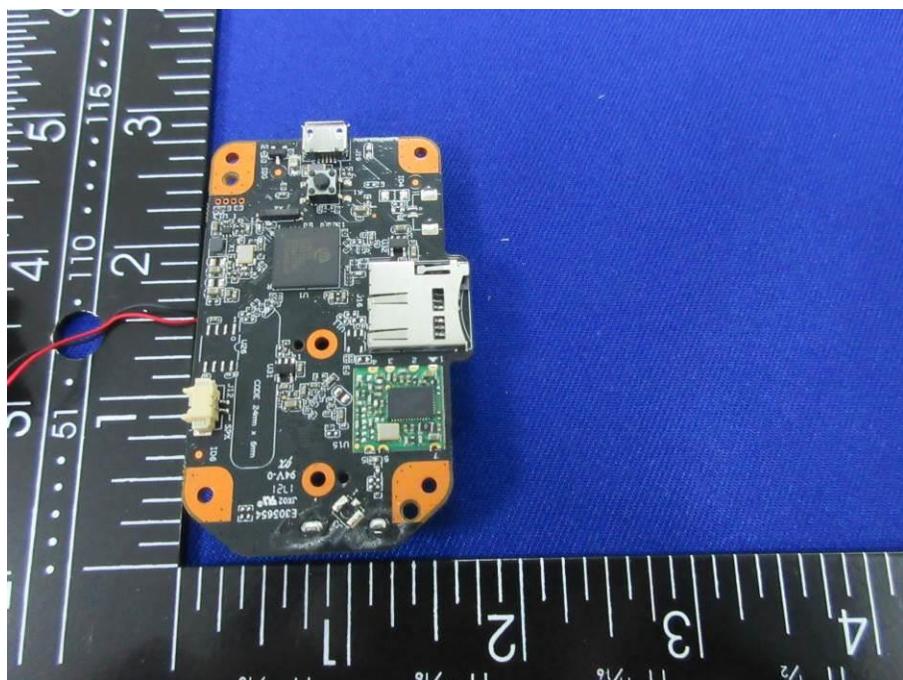


Internal View of EUT-6

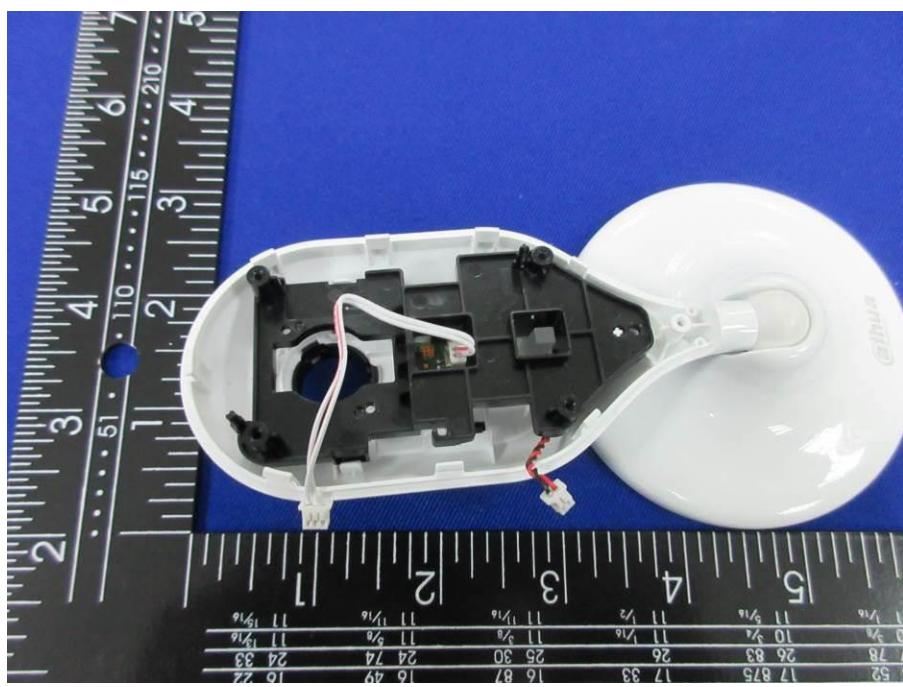


Internal View of EUT-7

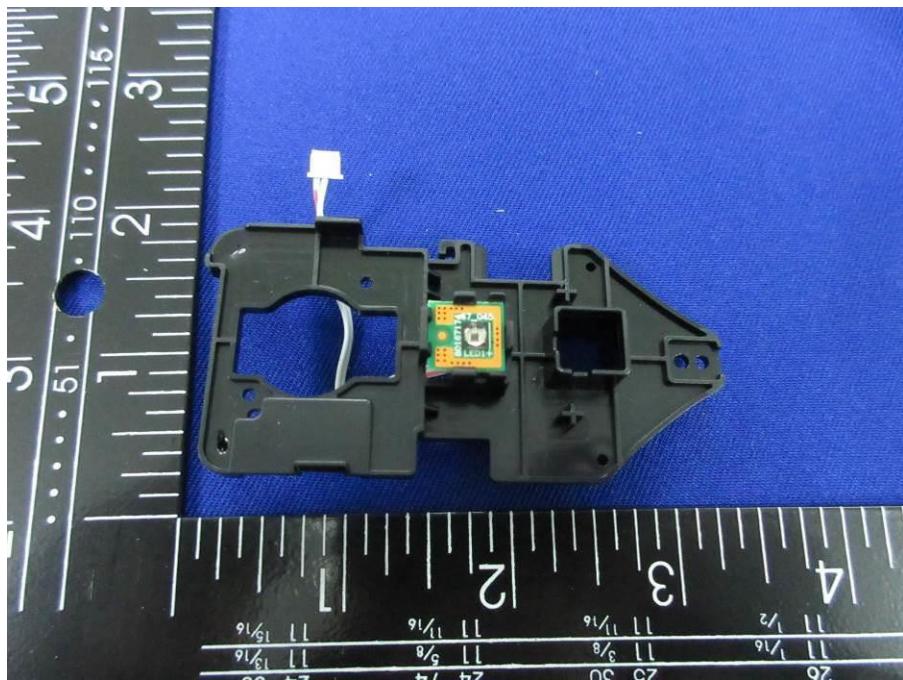


Internal View of EUT-8

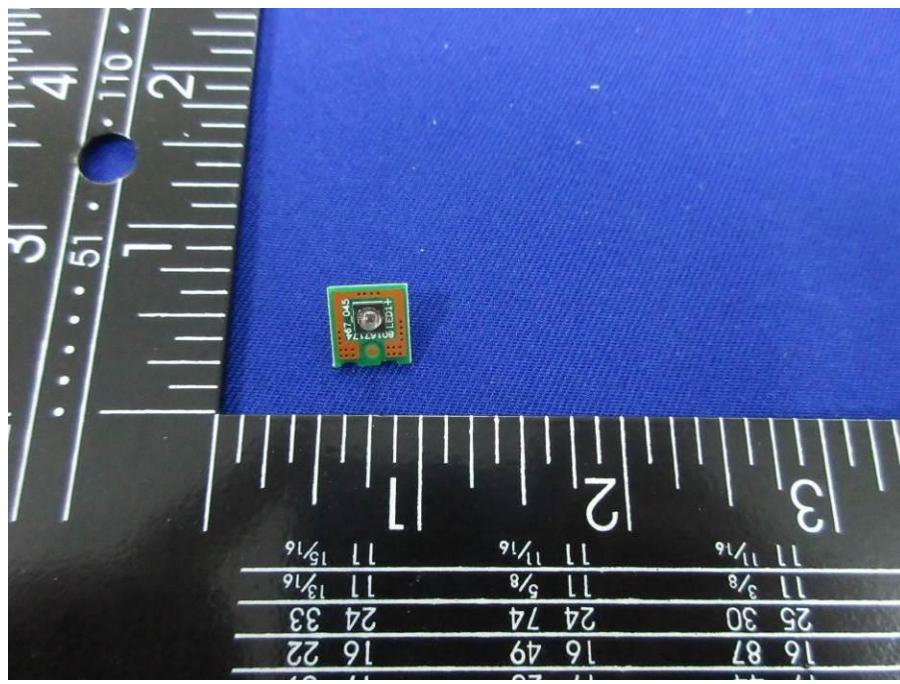


Internal View of EUT-9(For adapter:NBS05B050100VUU)

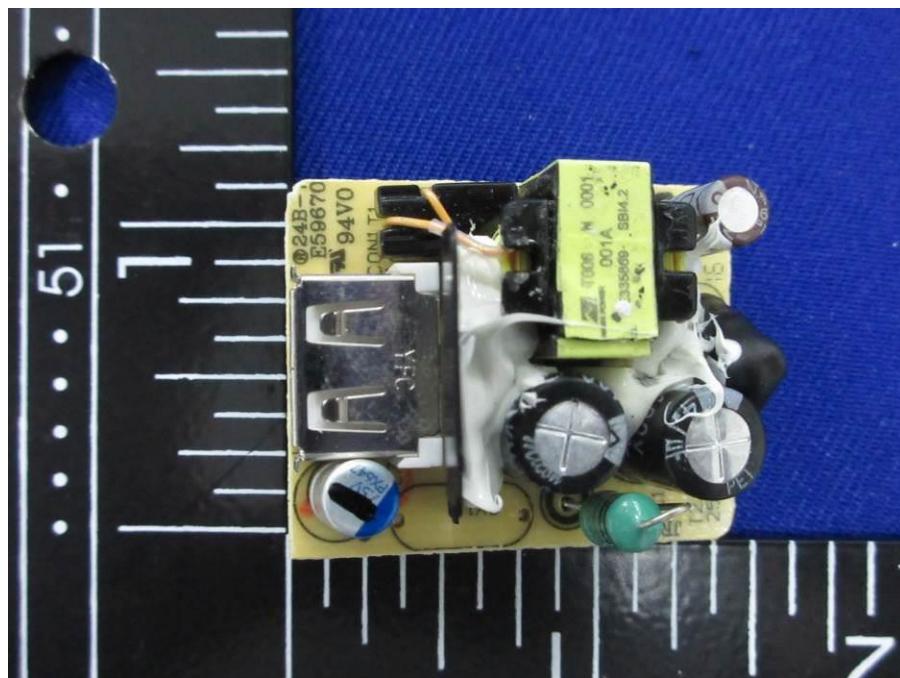


Internal View of EUT-10(For adapter:NBS05B050100VUU)

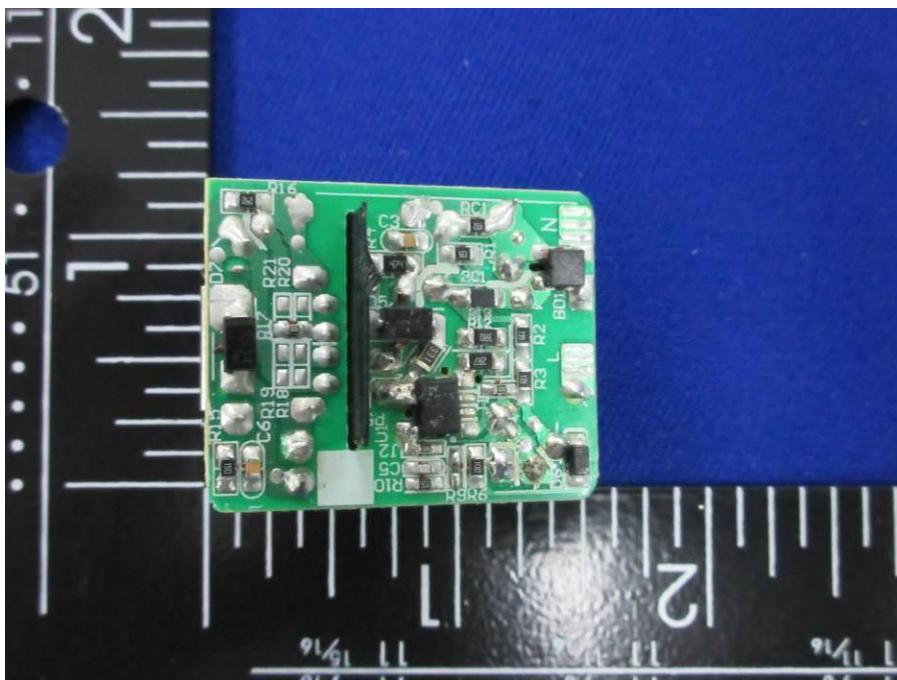

Internal View of EUT-11(For adapter: ED1-050100UA)

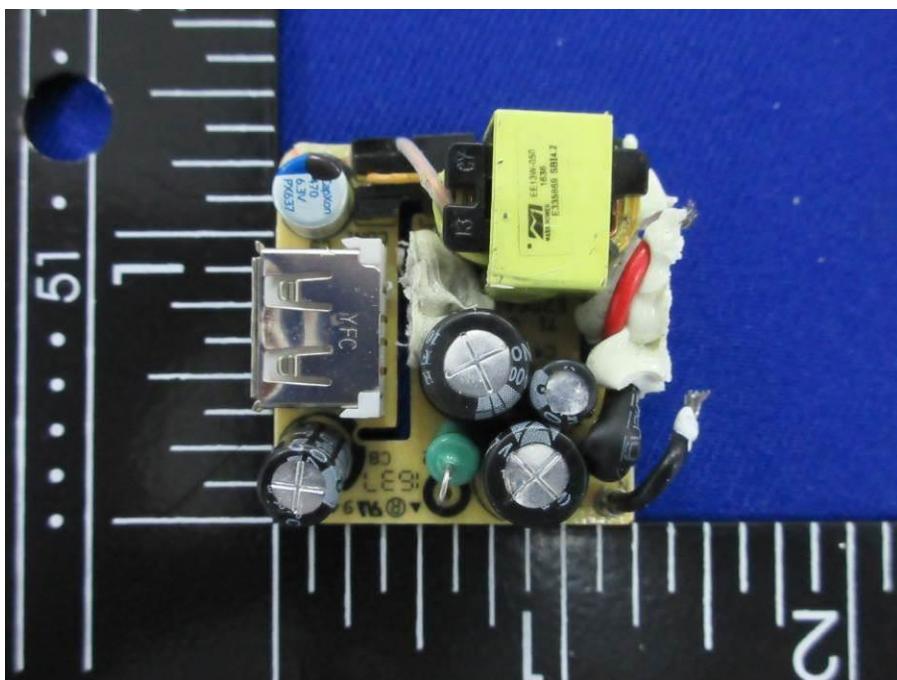

Internal View of EUT-12(For adapter: ED1-050100UA)

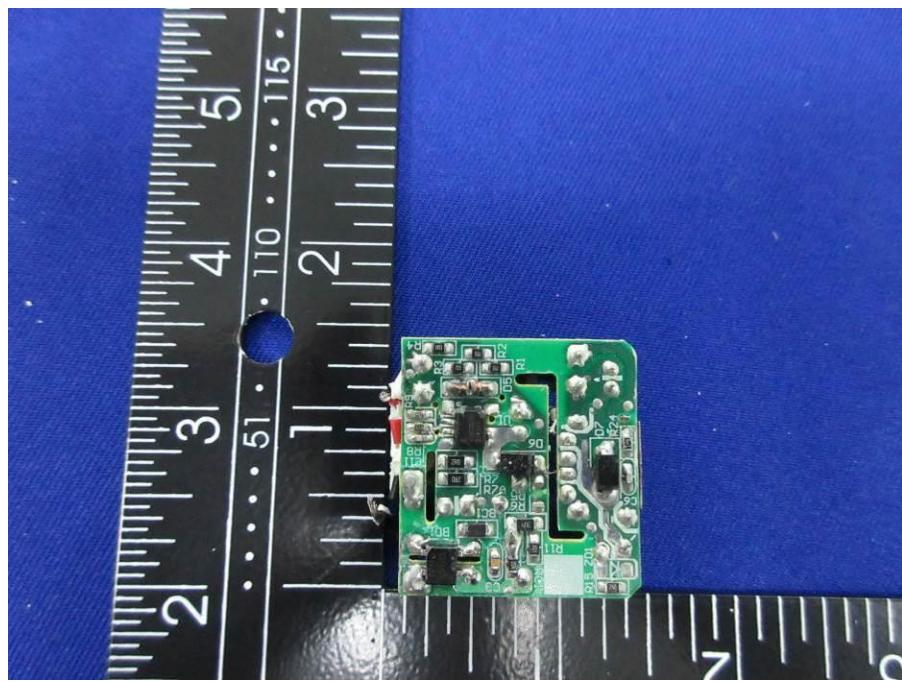

Internal View Antenna location

