 


BUCK™


THE ANIMATED TROPHY

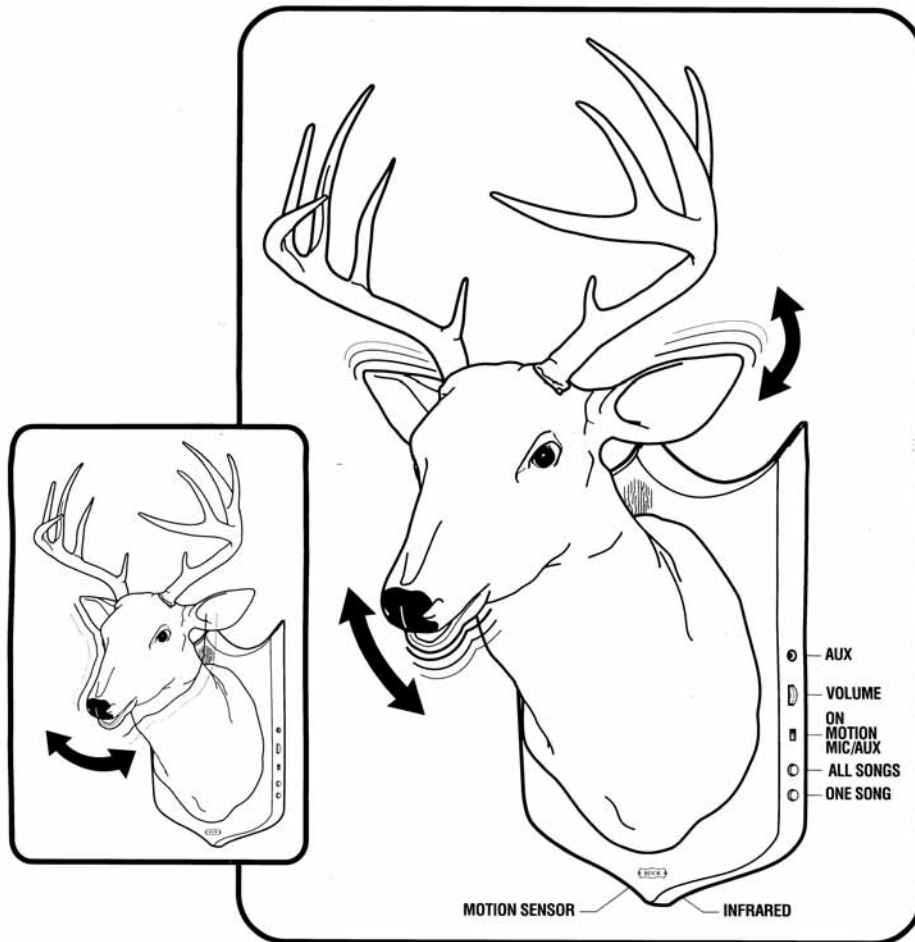

Congratulations! You're the proud owner of your very own Buck, the Animated Trophy™ from Gemmy! Below, we hope you'll find the answers to any and all questions you might have about Buck, and how to get maximum enjoyment from him for years to come!

CONTENTS:




- 1 Buck, the Animated Trophy™ (A)
- 2 Buck, the Animated Trophy™ Removable Head Antlers (B)
- 1 Remote Control (C)
- 1 Microphone (D)
- 1 Horizontal Wall Bracket (E)
- 8 Wall Screws (F)
- 8 Wall Anchors (G)
- 1 AC Adapter
Input AC 120V, 60Hz /
Output DC 9V 3A(H)
- 1 Auxiliary Patch Cord (I)
- 2 AAA Batteries - Remote control (J)
- 1 9V Battery - MIC (K)

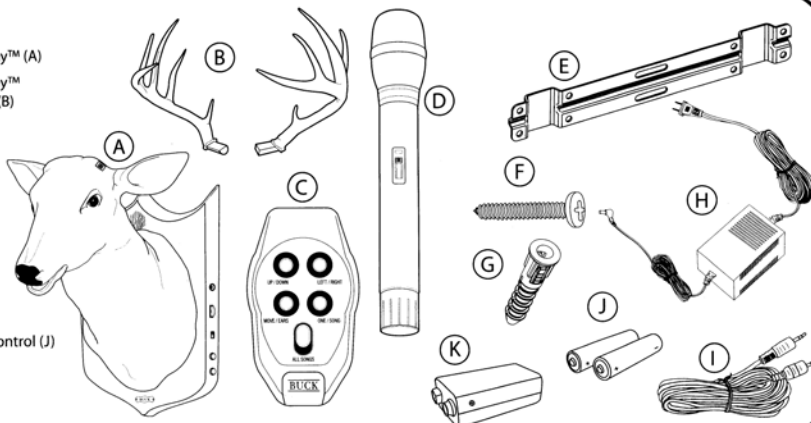

AN OVERSIZED ITEM

SET-UP NOTE: Buck, the Animated Trophy™ is heavy and may require two people to install. Please do not lift more than you can handle.

Visit www.gemmy.com for help with Buck, the Animated Trophy™ set-up or take-down!

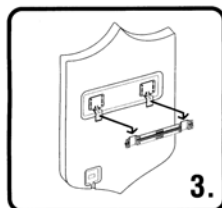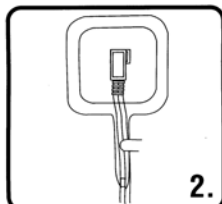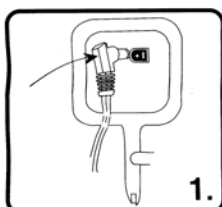

SETTING UP Buck, the Animated Trophy™:

1. Open box along the dotted line.
2. Slide the Buck, the Animated Trophy™ (A) and the removable head antlers (B) out of the box. Locate the other components listed above.

NOTE: Do not discard box as it should be used for storage.

3. Choose a wall location for Buck, the Animated Trophy™ that has at least a three-foot overhead clearance and access to a standard outlet. It is recommended that the wall area selected be directly in front of support studs within the wall. You may purchase a "stud finder" at your local hardware store to assist you in locating the studs behind the wall.

NOTE: Studs in most homes are approximately 16 inches apart. It is recommended that, at the very least, the center hole in the wall bracket be positioned directly in front of a support stud within the wall to help support Buck's weight and movement.

4. Locate the horizontal wall bracket (E) in the packaging and using the holes located along the bracket as a guide, drill pilot holes using a drill.
5. After the pilot holes have been drilled, insert a wall anchor (G) into each pilot hole.
6. Line up holes within the horizontal wall bracket with the wall anchors, and install screws (F) to attach bracket to wall.
7. Locate AC Adapter(H) and unwind cord.
8. Plug the adapter into the adapter jack, located at the base of Buck's mounting plaque. (see illustration 1)
9. Plug the other end of the adapter into a standard wall outlet.(see illustration 2)
10. Slide the two prongs located on the back of Buck's mounting plaque into the slots provided in the wall bracket. Now you can hang Buck, the Animated Trophy™ on the wall, and remove him with ease.(see illustration 3)

WARNING: DO NOT leave Buck, the Animated Trophy™ on and unattended overnight or for long periods of time. Standard safety precautions should be taken as with any electrical device.



11. If plugged into an outlet with a power switch, make sure the outlet's power switch is in the "On" position.
12. Locate Buck's two removable antlers (B) and fit them into the provided holes on Buck's head.


TAKE-DOWN

1. Unplug the adapter from outlet and from Buck's adapter jack.
2. Remove Buck's antlers from the head.
3. Carefully lift (use two people if necessary) Buck, the Animated Trophy™ upward from the wall bracket.
4. Place Buck, the Animated Trophy™, along with all of his accessories into original box and close for storage.

NOTE: Store Buck, the Animated Trophy™ in its original packaging and in a dry, cool area. Exposure to the elements can damage the product. As with all electrical devices, exposure to water is a safety hazard.


MAINTENANCE AND STORAGE

****PLEASE RETAIN THIS BOX AND PACKING MATERIALS FOR STORAGE OF YOUR BUCK, THE ANIMATED TROPHY™ VISIT WWW.GEMMY.COM FOR A COMPLETE LIST OF FAQs OR TO ASK YOUR OWN QUESTION!**

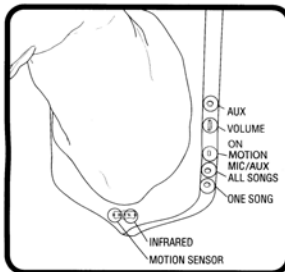

FAQs about Buck, the Animated Trophy™:

1. *I've just installed Buck on my wall, but when I turn him on or press the buttons, nothing happens. What's wrong?*
First, check to make sure that Buck's switch is turned to the "ON" position. Next, ensure the adapter is securely inserted into both the adapter jack and to the wall outlet. Next, make certain the outlet has power. If plugged into an outlet with a power switch, make sure the outlet's power switch is in the "on" position. Check and see that the AC adapter is securely connected to the plaque. If Buck still does not work, unplug the adapter from the outlet, reconnect it, and check to see if Buck will then operate. Please check batteries in remote and microphone. If the problem is still not resolved, visit our website for more problem solving tips or to contact a customer service representative.
2. *Will the remote or push buttons work with the switch in the "MIC" position?*
No. Buck is programmed to respond to the buttons when the switch is in the "ON" or "MOTION" position. His buttons will not function when the switch is in the "MIC" position.
3. *Why are there two push buttons on Buck's mounting plaque?*
Buck is ready to sing all of his songs for you all at once, or just one song at a time. Each of the two buttons control these functions. Select the function you want to hear, and press the appropriate button.
4. *What is the AUX hole on the side of the mounting plaque?*
This port is used to hook up an external sound system (such as a stereo unit) to Buck, the Animated Trophy™. When you plug the included patch cord into the AUX port, Buck will dance and sing any song you want to play from an attached radio, cassette, or CD player. Please make sure switch is in the "MIC/AUX".
5. *How should I clean my Animated Deer Trophy™?*
You can clean it by using a feather duster.

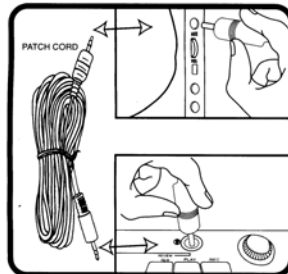

If you've enjoyed Buck, the Animated Trophy™, visit www.gemmy.com to discover all the fun and festive products that Gemmy has created! We've been making Airblown™ inflatables for years – fan blown lawn decor has been a huge hit. We introduce fun new designs for Christmas each year (as well as Halloween, Valentine's Day, Easter, and special occasions). You'll find everything from classic Santas and Snowmen to licensed designs!



©2004 Gemmy Industries Corp.
Coppell, TX 75019 U.S.A.

WARNING: Handling the coated electrical wires of this product exposes you to lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. **Wash hands after use.**

Taixing microphone using instruction

一. Operation of handhold microphone

1. Turn the microphone to “OFF” position, screw handhold microphone battery cover in counter-o’clock direction. Insert 9V battery, screw back the cover.
2. Turning the microphone to “ON” position, now the receiver “RF LED” indicating light on means the wireless microphone starting to work.. Turn the microphone to “OFF” position if don’t use.
3. If the indicating light of microphone darken evidently, that means the battery is less power, please change the new battery.

二. Remark:

1. Please avoid to place the receiver board under sunshine directly ,dusty place or moisture place and try to keep far away from the magnetic field.
2. Please avoid to place the receiver to dead corner in order to keep the good single.
3. Please take out the battery when the microphone not use for a long time so that it won’t worsen the microphone by the poor battery.
4. Please don’t throw the microphone so as to avoid the serious damage.