



**COMPUCALLER II
INSTRUCTION MANUAL**

Congratulations, you have purchased the most technically advanced electronic wildlife calling system in the world! The sound quality, volume, remote control capabilities and size put COMPUCALLER II in a league of it's own. While COMPUCALLER II IS NOT AN ANVIL, it is more than rugged enough to handle temperatures from below zero to over 100 degrees and the standard abuse of day to day calling. I guarantee that any hunter will call more predators with the COMPUCALLER II than any other method presently known.

Inside the box you will find:


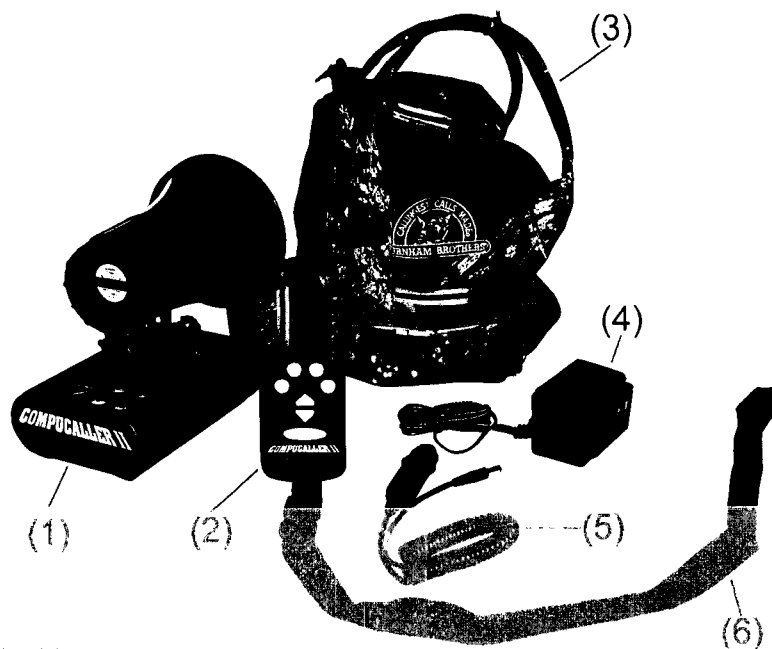


Fig. 1-1

- (1) Compucaller II base unit
- (2) Hand-held remote control
- (3) Camouflage carrying bag
- (4) 110v AC wall charger
- (5) 12v DC cigarette lighter charger
- (6) Remote lanyard

Before your first use, you need to charge the base unit. To do this, plug your wall charger in the wall and plug the other end in the jack marked "CHARGER". Your indicator light will turn red to indicate the unit is charging. Let the unit charge for 12 hours for the initial charge. After the initial charge, the normal recharge time is 6 hours. NOTE: The cigarette lighter charger should only be used for short periods (30 mins-2 hrs) of time. It will not recharge a "dead" battery.

Operation

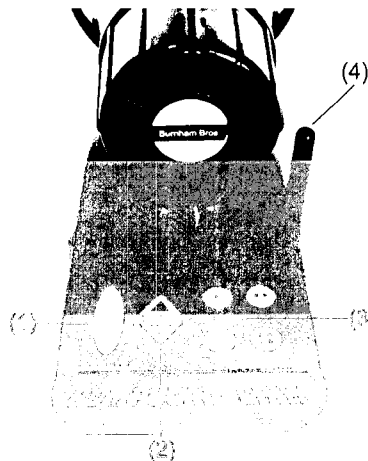

- (1) Start / Stop button
- (2) Volume up / down buttons
- (3) Sound select buttons
- (4) Stationary antenna

To operate the caller, slide the power switch to the "on" position. Allow the caller to initialize for about 2 seconds before pressing any buttons. The green light will come on indicating the power is on. From the panel on the base unit, press the start / stop button "●" to start the caller. Sound should be coming from the speaker. Pressing the "●" button again pauses the caller. To change sounds, press one of the sound select buttons "●" "●" "●" "●". The pre-installed sounds are:

- (1) Baby Cottontail
- (2) Grown Cottontail
- (3) Grown Jackrabbit
- (4) Yellowhammer Woodpecker

To increase the volume, press the volume up button "▲". Each press on the button increases the volume by one step. There are 16 total volume steps. To decrease the volume, press the volume down button "▼". Note: when you stop the caller, the volume defaults to step 1. This reduces the chance of accidentally spooking an animal.

The buttons on the remote function identically to the buttons on the base unit. Under normal conditions, the remote can be used without the antenna extended. For long-range operation pull the antenna on the remote to the fully extended position (See figure 2-2).

Fig. 2-2



Changing Sound Chips

Any of the four sounds in your Compucaller II can be replaced with any of the many sounds from Burnham Brothers. Replacement is easy if you follow these instructions.

First, make sure the main power switch is off. Slide the access door open on the bottom of the unit. Note: the chip sockets are numbered 1-4 from the front (front of speaker horn). Slide the chip puller in the opening around the ends of the chip you wish to remove (see fig 1-1).

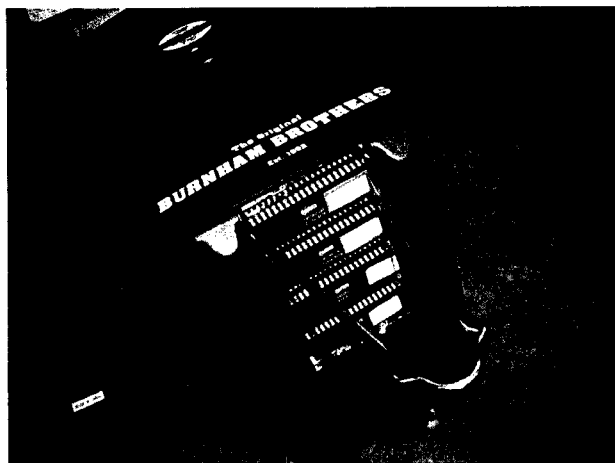


Figure 1-1

Note the orientation of the chip. Each chip has a notch on the end (left end in fig.1-1) that lines up with a notch on the socket. **NOTE: If chips are plugged in backwards, they will be damaged, and void the warranty on your unit and sound chips.** Next, grab the sides of the chip puller and while keeping gentle pressure on the sides of the tool, pull the chip straight out of the socket (fig. 1-2).



Figure 1- 2

Before inserting your new chip, make sure none of the pins are bent. If any pins are bent, use tweezers to gently bend them back straight. Again, make sure the notches in the chips line up with the notches in the socket. **NOTE: If chips are plugged in backwards, they will be damaged, and void the warranty on your unit and sound chips.** Using your hands, line up one side of the chip with the socket. Don't push the one end in completely yet. Gently push on the opposite side of the chip until that end lines up with the socket (Figure 1-3). Once lined up, push down on the chip until it is fully inserted.

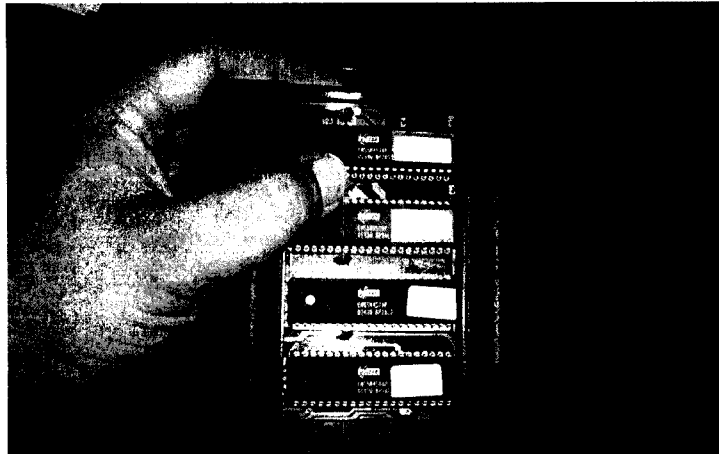


Figure 1- 3

Repeat the process for any other sounds you wish to replace.

Troubleshooting

"Start / Stop" button does not start caller	Check power switch	Turn power switch on (green light)
	Speaker not making contact	Check speaker jack
	Battery dead – (dim or no green light)	Recharge battery
Remote does not function or range is short	Remote battery is loose, weak or dead	Check battery holder. Install new battery

Should remote battery need replacement, the battery number is A23 available from Burnham Brothers and other stores.

Burnham Brothers
P.O. Box 427
Menard, TX 76859
325-396-4572

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Burnham Brothers
P.O. Box 427
Menard, TX 76859
325-396-4572

Product Name: Compucaller
Model Number: 2