



User Manual

- P503



Wave Development Group Ltd.-Hong Kong
www.wavedg.com sales@wavedg.com
Tel:(86)755 66822816

© 2013. All rights are reserved. No part of this document may be reproduced without permission. All trademarks and brand names mentioned in this publication are property of their respective owners. While all efforts have been made to ensure the accuracy of all contents in this manual, we assume no liability for errors or omissions or statements of any kind in this manual, whether such errors or omissions or statements resulting from negligence, accidents, or any other cause. The contents of this manual are subject to change without notice.

Protect our environment! We strive to produce products in compliance with global environmental standards. Please consult your local authorities for proper disposal.

Note: User's Manual is Just to quide the user about the functionality of the phone. This does not seem any certificate of technology. Some functions may very due to modifications and up gradations of software or due to print mistake.

SAFETY PRECAUTIONS

Before using your phone, please read the following important information to eliminate or reduce any possibility of causing damage and personal injury

	Do not use wireless phones while driving.
	Switch off wireless devices in aircraft. The signal may cause interference. Using them on aircraft is illegal.
	Do not use mobile phones where blasting is in progress. Follow regulations and rules strictly.
	Do not use mobile phones at a refueling point. Don't use near fuel or chemicals
	Follow regulations or rules in hospital and health care facilities. Switch phone off near medical equipment.
	All wireless devices may get interference that could affect performance.
	Only qualified service personnel can install or repair this device.
	Use only approved accessories and batteries.
	Use only in normal conditions. Do not expose your phone to extreme high temperatures above +60° (+140°F) . Do not use anything static to clean your phone.
	Ensure the phone is turned on and in service. Enter the emergency number, then press Pick Up key. Give your location. Do not end the call until told to do so.

Improper use will invalidate the warranty! These safety instructions also apply to original accessories.

- a) Use a wireless hands-free system (headphone, headset) with a low power Blue tooth emitter.
- b) Make sure the cell phone has a low SAR.
- c) Keep your calls short or send a text message (SMS) instead. This advice applies especially to children, adolescents and pregnant women.
- d) Use cell-phone when the signal quality is good.
- e) People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.

Table of Contents

1.1 OVERVIEW.....	7
1.2 SAFETY GUIDE	7
1.3 SAFETY WARNINGS AND NOTICES.....	8
<i>1.3.1 General attention.....</i>	<i>8</i>
<i>1.3.2 Notices when using your phone</i>	<i>8</i>
<i>1.3.3 Notices when using the battery</i>	<i>10</i>
<i>1.3.4 Notices when using the Epen.</i>	<i>11</i>
<i>1.3.5 Charging your phone.....</i>	<i>12</i>
<i>1.3.6 Notices when using your charger.....</i>	<i>13</i>
<i>1.3.7 Cleaning and maintenance</i>	<i>14</i>
2. GETTING STARTED	15
2.1 COMPONENT NAME AND EXPLANATION	15
<i>2.1.1 Technical parameters.....</i>	<i>15</i>
<i>2.1.2 Icons</i>	<i>15</i>
2.2 KEY EXPLANATIONS.....	16
2.3 USING THE TOUCH SCREEN.....	17

2.4 CONNECTING TO THE NETWORK	18
2.4.1 <i>Inserting and removing the SIM card.....</i>	18
2.4.2 <i>Turning your phone on and off</i>	18
2.4.3 <i>Unlocking the SIM card.....</i>	19
2.4.4 <i>Unlocking your phone</i>	19
2.4.5 <i>Connecting to the network.....</i>	19
2.4.6 <i>Making a call.....</i>	20
2.4.7 <i>Making a domestic call.....</i>	20
2.4.8 <i>Making an international call</i>	20
2.4.9 <i>Making a call from the list.....</i>	21
2.4.10 <i>Making an emergency call...</i>	21
2.4.11 <i>Call menu.....</i>	21
3. FUNCTIONAL MENU	23
3.1 FILE MANAGEMENT	23
3.2 SENDING AN EMAIL	24
3.3 DIALING	25
3.5 CALCULATOR	27
3.6 BROWSER	28

3.7 VOICE RECORDER	28
3.8 CALENDAR.....	29
3.9 SETTINGS.....	30
3.10 RADIO	32
3.11 SEARCH	33
3.12 CONTACTS	33
3.13 GALLERY	34
3.14 CAMERA.....	35
3.15 MESSAGING	35
3.17 NOTIFICATION MENU	37
3.18 DOWNLOAD CONTENT	37
3.19 MUSIC	37
3.20 CALL RECORDS.....	38
3.21 WIDGET.....	39
3.22 SELECTING WALLPAPER SOURCE	39
3.23 PHOTO EDIT	40
3.24 MEMO.....	41
3.25 DOODLE	42
3.26 ALL BACKUP	43
6. FAQS AND SOLUTIONS.....	45

1. The Basics

1.1 Overview

Thank you for choosing WAVE. After reading this guide you will be able to fully master the use of your phone and appreciate all its functions and ease of use.

Not only does the smartphone provide you with basic call functions such as call Register, but also with many practical functions and services, to improve the time you spend working and playing.

The color screen mobile phone complies with the GSM/GPRS technology and has been approved by certification authorities both domestically and abroad.

The availability of some services and features described in this manual depends on the network and your subscription. Therefore, some menu items may not be available in your phone. The shortcuts to menus and features may also vary from phone to phone.

Our company reserves the right to revise this manual content without prior notice.

1.2 Safety guide

- If your mobile phone is lost or stolen, please contact the telecommunications authorities or a sales agent immediately to have a hold on the phone and the SIM card. This will prevent economic loss caused by unauthorized calls made from your mobile phone.
- When you contact the telecommunications authorities or a sales agent, they will need to know the IMEI number of our mobile phone (remove battery to expose number located on the label on back of phone). Please copy this number and keep in a safe place for future use.
- In order to avoid the misuse of your mobile phone please take the following preventative measures:
 - Set the PIN number of your mobile phone's SIM card and change this number immediately if it

becomes known to a third party.

- Please keep the phone out of sight when leaving it in a vehicle. It is best to carry the phone with you, or lock it in the trunk.
- Set call barring.

1.3 Safety warnings and notices

Before using your mobile phone, read and understand the following notices carefully to ensure you will use it safely and properly.

1.3.1 General attention

- Only the battery and battery charger specified by our company should be used in your phone. Other products might result in battery leakage, overheating, fire or explosion.
- To avoid your phone malfunctioning, or catching fire, please do not violently impact, jolt or throw your phone.
- Please do not place the battery, mobile phone, or charger in a microwave oven or high-pressure equipment. Otherwise it could lead to unexpected accidents such as damage to the circuitry or fire hazard.
- Please do not use your phone near flammable or explosive gases, otherwise it could cause malfunction of your phone or fire hazard.
- Please do not subject your phone to high temperatures, high humidity or dusty places; otherwise this may lead to the malfunction of your phone.
- Keep your phone out of the reach of small children. Your phone is not a toy. Children could hurt themselves.
- To avoid your phone falling and malfunctioning or being damaged, please do not place it on uneven or unstable surfaces.

1.3.2 Notices when using your phone

- Turn off your mobile phone where the phone is not

allowed, such as, on the airplane or in hospitals. Using the mobile phone in those places may impact the normal operation of electronic devices and medical instruments. Follow relevant regulations when using your mobile phone in those places. Your mobile phone has the auto turn-on feature. Check your alarm clock settings to confirm that your mobile phone will not be turned on automatically during flight.

- Please do not use your mobile phone near the weak signal or high precision electronic devices. RF interference might cause malfunctioning of such electronic devices and other problems. Special tips must be paid near the following equipment: hearing aids, pace makers and other medical electronic devices, fire detectors, automatic doors and other automatic control installations. To find out the effect of mobile phones on a pacemaker or other pieces of electronic medical equipment please contact the manufacturers or local sales agents of the equipment.
- Please do not subject the LCD to impact or use the screen to strike things, as this will damage the LCD board and cause leakage of the liquid crystal. There is a risk of blindness if the liquid crystal substance gets into the eyes. If this occurs rinse eyes immediately with clear water (under no circumstances rub your eyes) and go immediately to a hospital for treatment.
- Do not disassemble or modify your mobile phone, as it will lead to damage to the phone such as battery leakage or circuitry failure.
- Under very rare circumstances using the mobile phone in certain model cars may negatively affect the internal electronic equipment. In order to assure your safety under such circumstances please do not use the mobile phone.

- Please do not use needles, pen tips, or other sharp objects on the keypad as this may damage the mobile phone or cause it to malfunction.
- In the event of antenna malfunction, do not use your phone, as it could be harmful to human body.
- Avoid letting the phone come into close contact with magnetic objects such as magnetic cards as the radiation waves of the mobile phone may erase the information stored on floppy disks, pay cards and credit cards.
- Please keep small metal objects, such as thumbtacks far away from the receiver. When the receiver is in use it becomes magnetic and may attract these small metal objects and thus these may cause injury or damage the mobile phone.
- Avoid having the mobile phone come into contact with water or other liquids. If liquids enter the phone, this could cause a short circuit, battery leakage or other malfunction.

1.3.3 Notices when using the battery

- The battery has a limited service life. The remaining life gets shorter as the times of charging increase. If the battery becomes feeble even after the charging, this indicates the service life is over and you have to use a new battery.
- Do not dispose of old batteries with everyday domestic garbage. Please dispose of old batteries at the directed places with specific rules for their disposal.
- Please do not throw batteries into a fire, as this will cause the batter to catch fire and explode.
- When installing the battery, do not use force or pressure, as this will cause the battery to leak, overheat, crack and catch fire.
- Please do not use wires, needles or other metal objects to short-circuit the battery. Also, do not put the battery near necklaces or other metal objects, as

this will cause the battery to leak, overheat, crack and catch fire.

- Please do not solder the contact points of the battery, as this will cause the battery to leak, overheat, crack and catch fire.
- If the liquid in the batteries goes into the eyes, there is a risk of blindness. If this occurs do not rub the eyes, but immediately rinse eyes with clear water and go to the hospital for treatment.
- Please do not disassemble or modify the battery, as this will cause the battery to leak, overheat, crack and catch fire.
- Please do not use or place the batteries near high temperature places such as near a fire or heating vessel, as this will cause the battery to leak, overheat, crack and catch fire.
- If the battery overheats, changes color, or becomes distorted during use, charging, or storage, please stop using and replace it with a new battery.
- If the liquid from the battery comes in contact with skin or clothing this could cause burning of the skin. Immediately use clear water to rinse and seek medical tips if necessary.
- If the battery leaks or gives off a strange odor, please remove the battery from the vicinity of the open fire to avoid a fire or explosion.
- Please do not let the battery become wet as this will cause the battery to overheat, smoke and corrode.
- Please do not use or place batteries in places of high temperature such as in direct sunlight, as this will cause the battery to leak and overheat, lower performance, and shorten the battery's life.
- Please do not continuously charge for more than 24 hours.

1.3.4 Notices when using the Epen

- Please use Epen in temperature of -5° c ~50° c and humidity of 20%~90%.

■ Please keep the phone in a temperature of -10°C ~ 60°C and humidity of 20%~95%.

1.3.5 Charging your phone

■ Connect the connector of the charger to the mobile phone. The battery level indicator flashes on the screen. Even if the phone has been turned off, the charging image still appears, indicating that the battery is being charged. If the phone is overused when the current is insufficient, it may take longer time for the charging indicator to appear on the screen after the charging begins.

■ When the battery level indicator does not flash and indicates the battery is full, this indicates the charging has been completed. If the phone is off during charging, the charging being completed image also appears on the screen. The charging process often takes 3 to 4 hours. During the charging, the battery, phone and charger get warm, this is a normal phenomenon.

■ Upon the completion of charging, disconnect the charger from the AC power socket, and from the mobile phone.

■ Notes:

■ During charging, the phone must be placed in a well-ventilated environment of $+5^{\circ}\text{C} \sim +40^{\circ}\text{C}$. Always use the charger supplied by your phone manufacturer. Using an unauthorized charger might cause danger and invalidate the authorization and warranty clauses for your phone.

■ The standby time and call duration provided by the manufacturer are based on ideal operating environment. In practice, the battery's operating time varies depending on network conditions, operating environment and usage methods.

■ Make sure the battery has been installed before charging. It is best not to remove the battery while charging.

- Upon completion of charging, disconnect the charger from your phone and the power supply.
- If you have not disconnected the charger from your phone and the power supply, the charger will continue to charge the battery after about 5 to 8 hours when the battery level decreases substantially. We advise you not to do like this, as it lowers your phone performance and shortens your phone life.
- 1.3.6 Notices when using your charger**
- Please use AC 100~240 volts. The use of any other voltage will cause battery leakage, fire and cause damage to the mobile phone and charger.
- It is forbidden to short circuit the charger, as this will cause electrical shock, smoking and damage to the charger.
- Please do not use the charger if the power cord is damaged, as this will cause fire or electrical shock.
- Please immediately clean any dust gathered on the electrical outlet.
- Please do not place vessels with water near the charger in order to avoid water splashing onto the charger and causing an electrical shortage, leakage or other malfunction.
- If the charger comes in contact with water or other liquid the power must immediately be switched off to avoid an electrical short or shock, fire or malfunction of the charger.
- Please do not disassemble or modify the charger, as it will lead to bodily harm, electrical shock, fire or damage to the charger.
- Please do not use the charger in the bathroom or other excessively moist areas, as this will cause electrical shock, fire or damage to the charger.
- Please do not touch the charger with wet hands, as this will cause electrical shock.
- Do not modify or place heavy objects on the power cord, as this will cause electrical shock or fire.

- Before cleaning or carrying out maintenance please unplug the charger from the electrical outlet.
- When unplugging charger, do not pull on the cord, but rather hold on to the body of the charger, as pulling on the cord will damage the cord and lead to electrical shock or fire.
- 1.3.7 Cleaning and maintenance**
- The mobile phone, battery, and charger are not water resistant. Please do not use them in the bathroom or other excessively moist areas and likewise avoid allowing them to get wet in the rain.
- Use a soft, dry cloth to clean the mobile phone, battery and charger.
- Please do not use alcohol, thinner, benzene or other solvents to wipe the mobile phone.
- A dirty outlet will cause poor electrical contact, lose of power and even inability to recharge. Please clean regularly.

2. Getting Started

2.1 Component name and explanation

2.1.1 Technical parameters

Handset

Model	WAVE
Dimension (L×W×T)	151*79*10.5mm
Weight	197g

Lithium-ion battery

Model	polymer battery (UTL)
Nominal voltage	3.7V
Maximum charge voltage	4.2V
Capacity	2750mAh
Standby duration	380H (2G /3G)
Talk duration	8H (2G), 3.5H (3G)

Travel charger

Model	WAVE
Input	90-300V

2.1.2 Icons

In the standby mode, the following icons may appear in standby screen:

Icon	Description
	Indicate the intensity of network signals.
	Show missed calls.
	Location by satellite.
	Receive a new message.
	An application is being downloaded.
	New Email.
	The alarm clock has been set and activated.
	A call is in progress.
	Call on hold.
	Bluetooth call.
	The phone is playing a song.
	Show battery level.
	Enable USB.

	The access is blocked.
	Get connected to the wireless network.
	Turn on the Bluetooth.
	Headset connected.
	GPRS data connection is on.
	Silent mode activated.
	Vibrate mode activated.
	Flight mode activated.
	Using 3G
	Blacklist activated.
	Flashlight activated.

2.2 Key explanations

There are three virtual navigation keys at the bottom of the screen, **Back**, **Home** and **Recently used application** keys.

Key	Explanations
Recently used application	<ul style="list-style-type: none"> Open the recent applications.
Back key	<ul style="list-style-type: none"> Return to the previous menu.
More key	<ul style="list-style-type: none"> Show options of current menu.
Home key	<ul style="list-style-type: none"> At any status, touch the key to return to the standby screen.
Power key	<ul style="list-style-type: none"> Touch and hold this key to turn your phone off and on. Generally, press this key to lock the mobile phone. While press the key and down volume key to capture the screen.
Side volume keys	<ul style="list-style-type: none"> During the conversation, press the two keys to adjust the volume. While playing an audio file, press the two keys to adjust the volume.

Note: In this guide, the phrase “touch the key” refers to

pressing and thereafter releasing a key. "touch and hold a key" refers to pressing a key and keeping it depressed for 2 seconds or longer.

The descriptions and functions of keys depend on the model of your phone.

2.3 Using the touch screen

Your phone provides **many** touch keys in the Main screen. To use these keys correctly, calibrate the touch screen in advance (see "**Calibrator**"). Meanwhile please follow the instructions:

- Do not touch the screen with wet hands.
- Do not touch the screen with great forces.
- Do not touch the screen with metallic or conductive objects.

A quick and easy way to interact with the Home screen and the whole interface of your device is by touch. Basically, the following are the types of actions, called finger gestures, which you would do when interacting with your device:

- Touch: When you want to select items such as icons and options or press on-screen buttons, simply touch them with your finger. Apply some pressure with your finger pad when touching them on the screen.
- Slide: To slide means to drag your finger vertically or horizontally across the screen.
- Touch and hold: Touch an item and hold it for more than 2 seconds to open a pop-up option list.
- Drag: Touch and hold your finger with some pressure before you start to drag. When the item magnifies and the device vibrates, drag your finger to any part of the screen to move the item, or drag to the Trash button to delete the item. While dragging, do not release your finger until you have reached the target position.
- Double touch: Touch twice quickly with your finger to zoom in or out while viewing photos or web pages.

2.4 Connecting to the network

2.4.1 Inserting and removing the SIM card

- Turn off the phone; remove the battery and unplug other external power supplies. Insert the two SIM cards into the SIM holders as shown in the phone.
- When you need to remove the SIM cards, turn off the phone, remove the battery and then remove the SIM cards from the holder.

Warning: Do not turn off your phone before removing the SIM card. Never insert or remove the SIM card when an external power supply is connected, as this may cause damage to the SIM card.

2.4.2 Turning your phone on and off

To turn on the phone, touch and hold the **POWER key** on the right side; to turn off the phone, touch and hold the **POWER key**.

If you have turned on your phone without inserting the SIM card, the phone will prompt you to install the SIM card. With the SIM card already inserted, your phone automatically verifies the availability of the SIM Card.

Then, the screen shows the following:

Enter PIN1 — if you have set the SIM card password.

Enter phone password — if you have set your phone password

Search for network — the phone searches for the appropriate network.

Notes:

If when you turn on the mobile phone, an exclamation mark appears on the screen and does not disappear, this is possibly caused by disoperation, that is, you press the Power key and the Volume Up key at the same time. Such disoperation activates the recovery mode, hence the occurrence of exclamation mark. If you just turn off the phone, next time when you turn it on, it will still come to the recovery mode.

Solution:

Touch the Home key when the exclamation mark and robot appear, a menu will pop up. Use the Volume key to select "reboot system now" to restart the phone.

2.4.3 Unlocking the SIM card

The PIN 1 (personal identification number) secures your SIM card from being misused by others. If you have selected this function, you must enter the PIN1 code each time you turn on the phone so that you may unlock the SIM card and then make or answer calls. You can deactivate SIM card protection (see "Safety settings"). In this case, the misuse of your SIM card cannot be prevented.

- Touch the Power key to turn on your phone;
- Enter your PIN1 code and touch OK for confirmation.

e.g. if your PIN1 is 1234, please enter: 1 2 3 4
If you enter incorrect numbers for three times in succession, your SIM card will be locked and your phone will ask you to enter PUK 1 number. If you do not know the PUK1 code, do not try. Instead, contact your network service provider. See "Safety settings".

Note: your network service provider sets a standard PIN1 code (4 to 8 digits) for your SIM card. You should immediately change this number. See "Safety settings".

2.4.4 Unlocking your phone

To prevent unauthorized use, you can set phone protection. If you have selected this function, you must draw unlocking pattern each time you turn on your phone, to unlock the phone and then make or answer calls. You may clear the unlocking pattern (see "Safety settings"). In this case, the unauthorized use of your phone cannot be protected.

If you forget your phone password, you must contact the retailer or local authorized service center to unlock your phone.

2.4.5 Connecting to the network

- Once your SIM card is unlocked, your phone

searches for available network automatically (the screen will show the network searching is underway). If your phone has found the available network, the name of network service provider appears at the center of screen.

Note: Making an emergency call. Note: If "only for emergency calls" appears on the screen, it indicates that you are beyond the network coverage (service area), and that you can still make emergency calls depending on the signal intensity.

2.4.6 Making a call

When the logo of network service provider appears on the screen, you can make or answer a call. The bars at the upper right corner of screen indicate the intensity of network signal.

Conversation quality is significantly affected by obstacles, thus moving within a small area while making or answering a call can improve the conversation quality.

2.4.7 Making a domestic call

In the Dial screen, enter a number, and touch the  key to make a call. To change the number, delete the digits you have entered. During dialing, the animation appears on the screen. After the call is picked up, the screen will show call status information. If the connection alert tone has been set, your phone will ring the alert tone (network dependent).

To end a call, touch the  key.

Zone code Phone number Dial key

2.4.8 Making an international call

To make an international call, touch and hold the **0 key** on the Dialing screen until the international prefix "+" for appears. This allows you to dial an international number without knowing its international fix (e.g. 00 for China).

Following the entry of international prefix, enter the country code and complete phone number. For the

country codes, follow the general conventions, for example, 49 for Germany, 44 for UK, and 46 for Sweden.

Like making an international call via a fixed telephone, omit the "0" at the head of a city code. For example, to call our hotline from another country, you can dial:

+86 21 114

+ Country code Complete phone number Dial key

2.4.9 Making a call from the list

All calls dialed and received are stored within a list in your phone. Those dialed and received recently are exhibited at the top of the list (see "Call Register"). All the numbers are sorted by Dialed Calls , Received Call  and Missed Call . Your phone also provides options for you to view all calls. When the call Register is full, the old numbers will be deleted automatically. To view the list, do the following:

- To view the dialed calls, touch .
- You can dial any number from the list by touching and hold the log -> Call.
- When the call list appears, Touch and hold a log -> add the number to the phonebook.

2.4.10 Making an emergency call

If you are beyond the network coverage (see network-signal-intensity bars at the upper right corner of the screen), you can still make emergency calls. If your network service provider does not provide roaming service to the area, the screen will show "only for emergency calls", alerting you that you can only make such calls. If you are within the network coverage, you can also make emergency calls even without the SIM card.

2.4.11 Call menu

The Call menu is only visible during an active call, and features such as Call Waiting, Call Diverting, and Multiple-party Call are network dependent. Contact

your network service provider.

The call options include:

■ Mute 

Do not send local voice.

■ Handsfree 

Switch on the loudspeaker to amplify the voice.

■ Hold 

Put the current call on hold or retrieve the call on hold.

■ End a call 

End the current call.

■ More 

*Start recording

Start voice recording.

*Add call


Make another new call.

3. Functional Menu

(※The following features depends on specific models)

3.1 File Management

The file management is composed of sdcard, while sdcard is the memory of the phone. In the file management, files can be searched rapid, deleted or edited in each card and new files can be created.

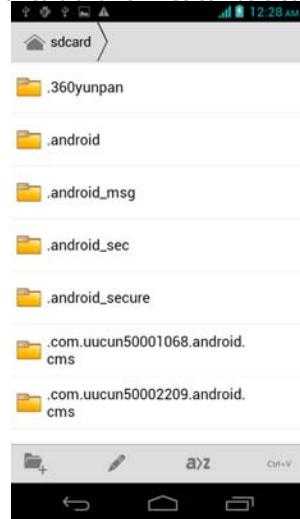

3.2 Sending an Email

You can send an Email by text or handwriting to anyone who has an Email address.


Entering the procedure and set an account, you can click the account so that you come into the account already created, you can also activate, compile and create an account and then delete the operating. The email can be sent and received just like in a computer. This procedure requires the network support.

Suspension preview: When you preview the text messaging, Email and picture, do not click on details, you can view detailed information. Put the Open tip near the content (less than 1cm), a small circle will appear on the screen, and suspended detailed preview appears.



3.3 Dialing

When dialing, you can have a quick access to the call records, contacts and digit dial keyboard (used for manual dialing) by the  key on the screen.

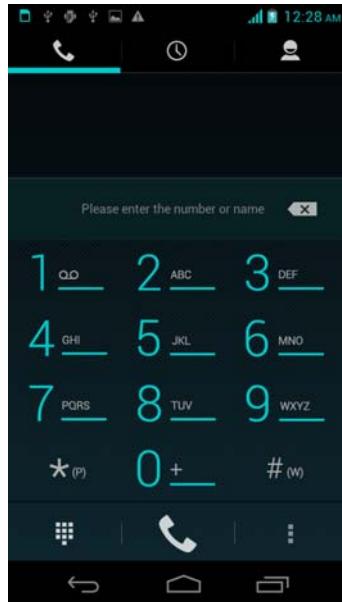


3.4 3G video call

Click a number portrait in the phonebook, and you can do these things instantly: dial, send a message and make a video call. During the video call, you can select applications such as adjusting it to mute mode, switching to robot portrait, turning off the voice and intercepting photos to SD card.



3.5 Calculator

Your phone provides a calculator with 4 basic functions for the convenience of your calculating.
Touch this button , and you delete the input and output in bitwise.
Notice: this calculator is of limited accuracy and sometimes it causes error, please forgive us for the inconvenience.

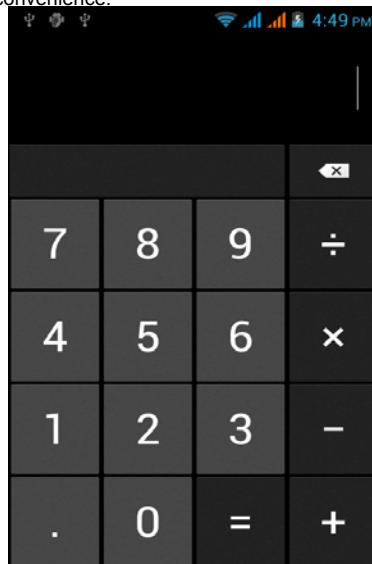


3.6 Browser

The browser allows you to surf on the net and browse the page just like on the computer. You can create on the phone a bookmark and synchronize it with computer. You can have a quick access to your favorite sites on the main screen. You could view web pages in longitudinal or transverse mode. The page rotates according to the rotation of the phone and automatically adjusts to fit the page.



3.7 Voice Recorder

The recorder could be used to record audio files.

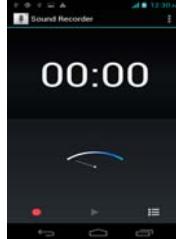

To start voice recording: Tap 

To end voice recording: Tap 

To play back voice recording: Tap 

The audio files are automatically stored on your phone. Click the Menu key, and you can operate and set the recorded voice. The file can be in document management and various players can be selected to play the voices.

3.8 Calendar

Calendar allows you to view your schedules and events at any time. You may view schedules one by one or several ones at the same time. Free writing or Recording function, record your schedules at any significant moment.

User can edit the events with free writing, and set alarms to remind you of important events.

Select to show calendar by day, week or month. If "by week (or month)", the calendar will be shown by week (or month). This application is convenient for you to view schedule or add events.



3.9 Settings



Reach the menu and customize your phone settings.
SIM card management: SIM card can be managed and made settings.

WLAN: WLAN can be turned on and off and made some settings.

Bluetooth: Bluetooth can be turned on and off and settings are made.

The information flow usage: It makes you in full awareness of the usage of the information.

More: Click more and you will set up flight mode and VPN and more.

Audio profiles: General, silent, meeting and outdoor optional. In the meanwhile, customized setting-up of some scene modes are allowed.

Select a mode and enter the customized setting-up, operational are vibration, volume, ring tones, notifications and key beep, etc.

Display: Customized setting-up of the phone luminance, wallpaper, the screen and screen time-out and font size is allowed.

Storage: The internal memory of the storage card and of the phone is shown.

Battery: The usage detail of the battery is shown.

Applications: View, manage and delete the applications on your phone.

Account and synchronization: Set the synchronization of your phone account with your phone.

Location service: Set the service during the locating.

Safety: Set unlocking pattern; lock the SIM card; set the SD card.

Language and keypad: Select a language and input method.

Backup and reset: Reset DRM and restore factory settings to clear all personal data on your phone.

Date and time: Set current time and date.

Schedule power on/off: set the time to turn on or off your phone.

Auxiliary function: Some auxiliary functions can be set.

Developers' options: Set some options used by developers.

Shortcut Command: In any interface, holding down the function key of Epen and draw the appropriate symbol, you can quickly open the corresponding application. In addition to writing "0" to screenshots, writing "+" to launch Memo, you can also self-defining other features.

About phone: View the model, service status, mobile software and hardware information, etc.

3.10 Radio

Wear your earpieces of radio before searching for channels.



Glossary:

Channel list: Display the list of FM radio channels. You can select to play one of them. (The list can contain 20 channels maximum)

Search: Select this option to automatically search for channels and generate the list of channels.

Loudspeaker: Touch the button to use the radio loudspeaker.

◀ and ▶: Tap to move to another channel.

▶ and II: Tap to broadcast and pause.

3.11 Search

You can locally search for the information you need.

3.12 Contacts

The “contacts” lets you easily call your colleagues or friends, or send emails or short messages to them. You may add contacts directly from your phone, or synchronize “contacts” with any application on your computer. You may open “contacts” directly from the Main screen.



Add a contact:

To add a contact, directly enter the name and phone number, or import the name and phone number from the SIM card. (The number of contacts you can add is limited by the memory of your phone.)

Search for contacts:

To search for a contact, touch the Search key in search screen, and a search box will pop up. In the search box, enter the key words, such as first name, second name and company name. While you are entering the key word, the matching contacts immediately appear.

Edit a contact:

To edit details of a contact, touch and hold a contact, select "Modify".


Delete a contact:

To delete the current contact, touch and hold a contact, select "Remove".

From the  menu, you can also synchronize with or share an account or import or export a contact.

3.13 Gallery

Gallery is a picture manager that typically exhibits miniatures, supports the features of "save picture", "set pictures as desktop" and "share picture".

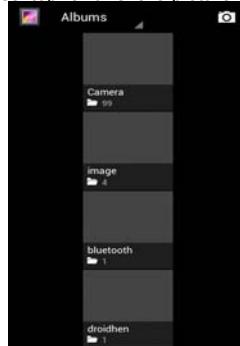


3.14 Camera

Your phone provides the camera and video recorder features. Wherever you go, you can take high-resolution photos and videos. It also supports advanced camera features such as distorted camera, video recording, image stabilization, face embellishment, panorama shooting, high dynamic range and zero delay shutter, which can also be customized.



3.15 Messaging

Messaging lets you send text and multimedia messages to any contact that has an SMS device. The multimedia messages include photos, video clips (for iPhone 3GS or other new style phones), contacts information, and voice memos. What's more, you can send messages to several contacts at the same time.

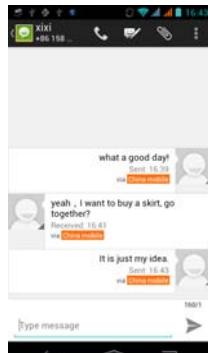

Note: Perhaps Messaging is not available in all countries and regions. Probably you need pay for using Messaging. For more information, consult your network operator.

As long as you are within the network, you can use "Messaging". As long as you can make a call, you can send messages. You probably have to pay for sending or receiving messages, depending on your network operator.


Send a message: Tap it, enter the number and name of the contact or select the contact from Contacts. Tap the text box above keypad, enter the information and then tap ►. You can also handwriting the messages.

After selecting the number, you can select such options as Call, Add subject, Attach, Insert facial expression, and more.

Tap Settings to set ringtone, Delivery reports, and maximum quantity of messages.

3.17 Notification Menu

Slide and pull down menu on the main interface, you can see the message notice and choose whether to turn on or off WIFI, Bluetooth, GPS, Data connection, off-line mode. In the data connection, the current SIM is available to make data connection of GPRS. Slide it around you can see the options of profile for your convenience.

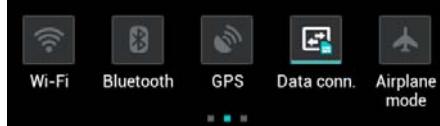


3.18 Download Content

You can download through the browser things and pictures you want and list them in the Download Content menu.

3.19 Music

Music is used for enjoying the stored audio files. Select Music, you can see the menus of "Playlists", "Songs", "Albums" and "Artists".

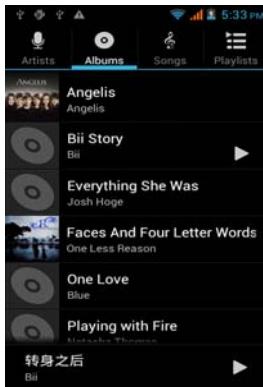

To pause playing a song Tap 

To resume playing a song Tap 

To skip to the next song or reading material Tap 

Return to the previous song or reading material Tap 

To move fast backward or forward Touch and hold  or . The longer you hold, the more songs you skipped.

To skip to any point in a song Drag the progress bar.


3.20 Call Records

Come into the call records, you can view missed calls, received calls and outgoing calls. The calling time is viewed in each record and features such as calling, sending messages and adding to new contacts can be

set. Deleting call records and setting up speed dial can be done in the menu.

3.21 Widget

The widget is on the right of applications in Main Menu, holding down this widget, you can drag it anywhere you want in the main screen. It is convenient for you to enter that procedure.

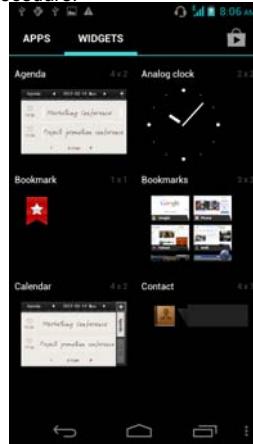

3.22 Selecting Wallpaper Source

Touch and hold the main screen, the options of selecting wallpaper source will appear, and then you can set up wallpapers you like.



3.23 Photo edit

With the picture edit feature, you can directly edit the screen shots, taking photos and pictures. You can edit creative picture with featured doodle, crop with the lariat or rectangle tool. Sharing pictures to Email,

Messaging, and Bluetooth. Pictures can also be set to contact picture or wallpaper.



3.24 Memo

With the phone memo feature, you can record important information or a burst of inspiration at any time or any moment with Epen or handwriting. Memo can be added to the desktop or removed by touching and holding it. You can also select the background

color of the memo. The shortcut memo can be called in any interface by holding down the function key of the G-pen and writing "+" on the screen. One clicking sharing to Email, Bluetooth, Agenda and Messaging.



3.25 Doodle


With the doodle feature, you can be creative at any time or any moment with Epen or handwriting. Unlimited free graphic insert function, you can insert picture, fun, shape, map, inspiring you unlimited creative inspiration. Graffiti works also can be timely share to MMS, and Email, share your personalized graffiti anytime,

anywhere.



3.26 All Backup

With the backup feature, you can quickly and easily backup your phone data to SD card, including: People, SMS, Call log, Calendar, Memo, Doodle, Blacklist and System setting, or restore data from SD card. You can also set timing backup.

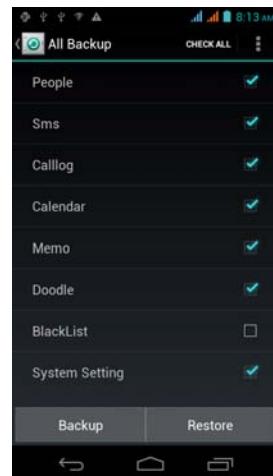

6. FAQs and Solutions

If you have any questions about the phone, please find the solutions from the table below.

FAQs	Causes	Solutions
Poor reception	When you use your phone at poor reception areas, for example, near high rise buildings or base rooms, the radio wave cannot be transmitted effectively.	Avoid this as far as you can.
	When you use your phone at network traffic congestion, such as working time and off-duty time, the congestion can result in poor reception.	Avoid this as far as you can.
	This is related to the distance to base station in question.	You may ask the network service provider to provide service coverage map.
Echoes or noises	The trunk line of network is in bad condition. It is a regional problem. In some areas, the call lines are in bad condition.	Hang off the call and dial again. Choose another better line.

	The standby time is relevant to network settings.	In poor reception areas, turn off your phone temporarily.
	Replace the batteries	Change with a new battery.
Shorter standby time	When no signals are received, your phone will continue searching for base stations, thus consuming a large amount of battery power and reducing standby time.	Use your phone at strong signal areas or Turn off the phone temporarily.
Failed to turn on your phone	The battery power is used up.	Check the battery power level or charge the battery.
	The SIM card is damaged.	Contact your network service provider.
SIM card error	The SIM card is not properly installed.	Ensure the SIM card is properly installed.
	The metallic face of the SIM card is contaminated.	Wipe the face with a clean cloth.
	The SIM card is invalid.	Contact your network service provider.
Failed to connect to the network	Beyond the GSM coverage.	Consult the network service provider for service areas.
	The signal is feeble.	Retry at a stronger signal area.

Failed to make a call	The call barring feature is used. The fixed dialing number feature is used.	Cancel the call barring settings. Cancel the fixed dialing number settings.
PIN code error	Enter incorrect PIN codes for three times in succession.	Contact your network service provider.
Failed to charge the battery	The battery or the charger is damaged.	Change a new battery or charger.
	Charge the battery when ambient temperature is lower than -10°C or above 55°C.	Change the environment.
	Poor connection.	Check whether the plug is properly connected.
Failed to add contacts to phonebook	The storage space of phonebook is used up.	Delete some contacts from the phonebook.
Failed to set up some features	Your network service provider does not provide the services, or you haven't subscribed them.	Contact your network service provider.

This manual here is indicative only. If there is inconsistency between the image and the actual product, the actual product shall govern.

1. Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.

2. CAUTION : RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.


3. The product shall only be connected to a USB interface of version USB2.0

4. Adapter shall be installed near the equipment and shall be easily accessible.

5. The plug considered as disconnect device of adapter

6. The device complies with RF specifications when the device used at 15cm from your body

7. "To prevent possible hearing damage, do not listen at high volume levels for long periods."

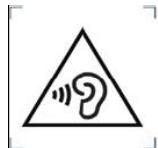

8. The maximum working temperature is 50 °C

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for aClass B digital device, pursuant to Part 15 of the FCC Rules.
These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Information and Statement
The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: P503 (FCC ID: 2A8CP503) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.245W/kg and when properly worn on the body is 1.176W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly.
The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided