


RF PS22TO1 User's manual

I. Characteristic:


1. High capability technology for CMOS
2. Frequency 2.4G.
3. handle distance: 10~15M
4. pressure: 3V (2 batteries).
5. electric current: 10 ~18mA(in working)
6. economize (Sleeping current < 2mA).
7. working for 400 Hours durative
8. function for current not enough
9. 8-bit ADC
10. double quiver
11. mode: Digital\Analog
12. Double color for MODE LED & communication in Transmitter
13. Could connect 2 controller to a host.
14. Tow LED for communication in Host (RX1,RX2))

II. Function photo

1. Gamepad

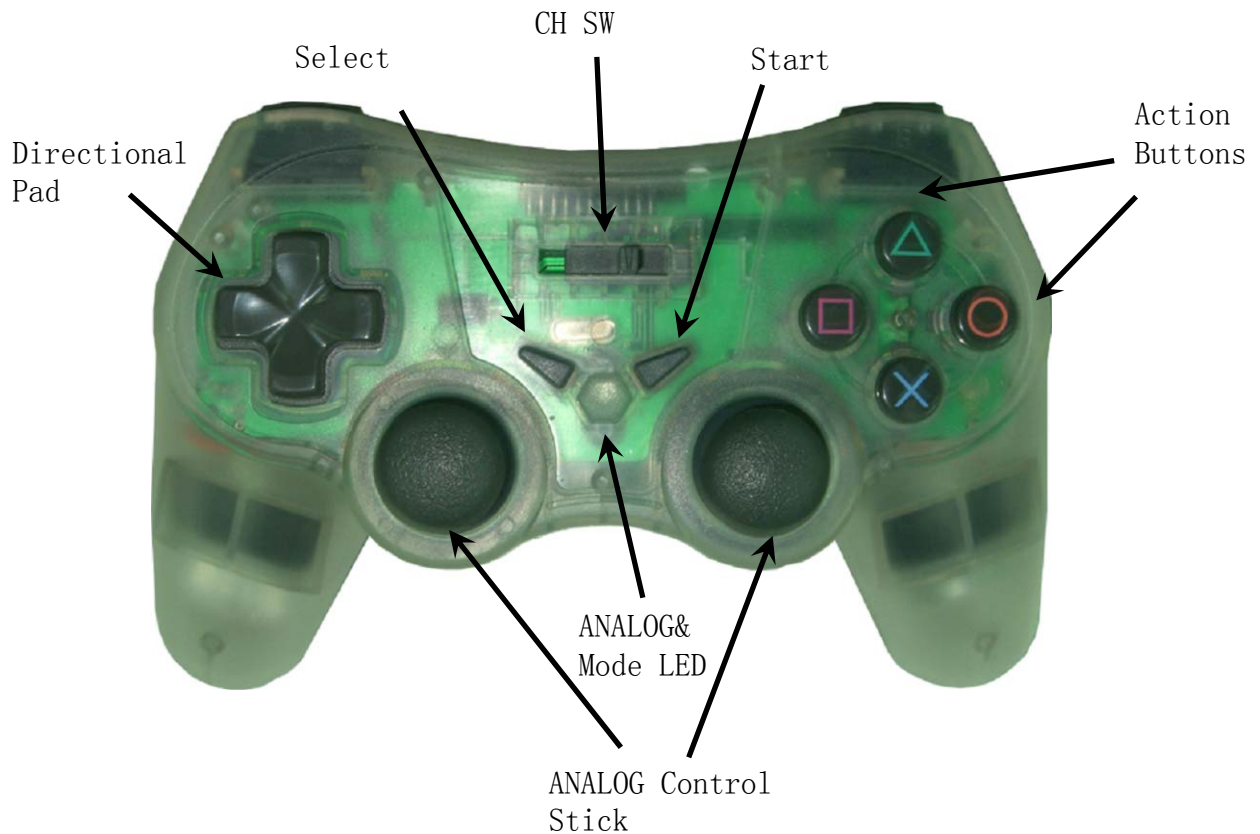

2. Host

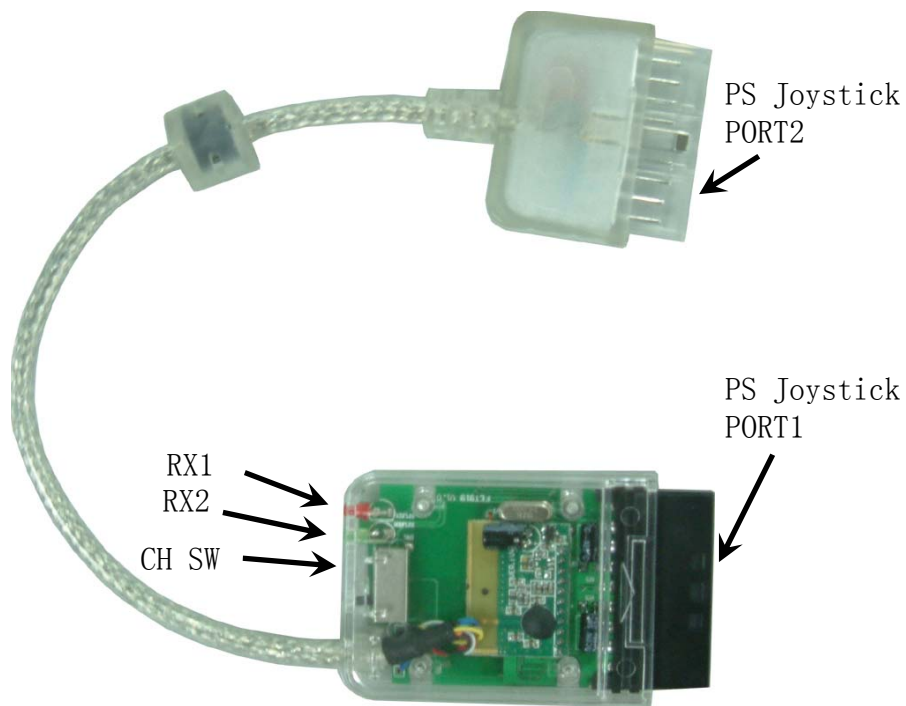

III. Handle method::

1. Take PS/PS2 CD to PS/PS2 host computer.
2. Switch on power supply
3. Cased 2 batteries (AAA) to Game pad.
4. Connect the signal to host computer that the RX1 & RX2 in Host flicker.
5. Debugging the same channel on Gamepad & Host.
6. Then the MODE LED & RX1 or 2LED bright that show could use.

IV. Function use method:

I.) MODE LED:

Digital/Analog : Separate by Orange and Green.

Every press the ANALOG that the MODE change , From Digital → Analog→ Digital...circle.

II.) RX1 RX2 LED:

1. **Handle:** Debugging the same channel on Gamepad & Host.
2. **Direction :** Normality :The light shine
Abnormality : The Light flicker
3. **Explain:** At the same host area more than 20 players, reverse could not circulate.

III.) Sleeping & Awaken:

1. **Action:** For saving. (current < 2mA)
 2. **Explain:** The light flicker for host at rest 3 minutes. Take the START button it restart.
- ## IV.)

Replace button::

1. **Handle** : The 2 rockers on left and right express Bearing on Digital MODE.
2. **Direction** : N/A
3. **Explain** : For player to handle bearing expediently on Digital MODE.

V. WARNING:

1. Do not submerge in water.
2. Do not disassociate any part of **Gamepad & Host**.
3. Do not place heavy objects on top of **Gamepad & Host**.
4. Do not allow small children to play with **Gamepad & Host** unsupervised.
5. Do not use this controller in any other way than its intended use.
6. Do not unplug host while the console is turned on.
7. Keep away from areas where dirt or liquid can get into **Gamepad & Host**.
8. Keep away from extreme temperatures
9. Store in areas away from dust and humidity
10. Turn off or discontinue use of Vibration function if you have any hand or wrist ailments or if you have any injury' s to which the vibration creates discomfort to you in anyway.

The users manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation