

BLUETOOTH SPEAKER MANUAL

MODEL NO.: KTS-1050B



Specification

Wireless version: 4.2+EDR

Speaker driver unit size: 4 INCH

Output power: 5W

Speaker impedance: 4 Ohm

Frequency response: 100Hz-20KHz

Signal to noise ratio: >=85dB

FM scan range: 87.5-108.0Mhz

Wireless range: 10 meter

Max memory USB/SD: 32GB

USB charging: DC 5V

Battery capacity: 800mAh

Backup time via wireless mode: Approx 1 hours at max volume

Backup time via USB mode: Approx 1 hours at max volume

Charging via USB port (PC): 1.5 hours

Accessory:

Charging and audio 2 in 1 cable: 1 piece;

User manual: 1 piece

Connect to Bluetooth device

Turn on the unit and switch on your mobile Bluetooth, then search for the speaker model name "**KTS-1050B**" and pair the device.

Once device is paired, Bluetooth will automatically connect when unit is turned on subsequently.



1. **OFF/ON:** To turn ON/OFF the speaker.
2. **DC 5V:** Plug the Micro USB cable to the speaker and connect other end USB port to the power source. (DC 5V)
Aux: Audio input jack when connect. Enable the sound source connection active devices (PC, digital media player, mobile phones and other audio-visual products).
3. **USB slot:** Used to read the Mp3 files in FAT32 format with maximum size of 32GB
4. **TF slot:** Used to read the Mp3 files in FAT32 format with maximum size of 32GB
5. **Play/Pause:** Under USB/TF/Bluetooth mode, short press for play and pause;
6. **M:** To change mode during USB/TF, Bluetooth, FM and Aux-in mode.
7. **PREV/VOL-:** USB/TF/Bluetooth/FM mode: Swipe left to move previous FM channel / track. Swipe left and long press to decrease the volume.
8. **NEXT/VOL+:** USB/TF/Bluetooth/FM mode: Swipe right to move next FM channel / track. Swipe right and long press to increase the volume.
9. **MIC-IN:** Connect with the MIC when you need.

NOTE: If FM mode reception is not good, connect a Micro USB cable for better FM reception.

Bluetooth

Turn on the speaker, It comes into the Bluetooth mode directly. After pair the device, it can play the music, Short Press **I>>I** to Play/Pause, press **I<<I** and **I>>I** to Prev and Next. Long press **I<<I** and **I>>I** button to turn down and turn up the Volume.

AUX-IN

AUX-IN, Using the audio cable into AUX jack, press **M** to switch to Aux in Mode. Long press **⏮** and **⏭** button to turn down and turn up the Volume.

In the AUX IN mode, it couldn't shift Prev and Next by Bluetooth speaker, but can control by connection device.

USB/TF Card

Insert the U flash memory or Micro-TF card into the USB/TF slot. it will read the MP3 format music automatically. Press **▶||** to Play/Pause, short time press **⏮** and **⏭** to Prev. and Next, Long press **⏮** and **⏭** button to turn down and turn up the Volume. Press 1~9999 to select the song and play.

FM Radio

Press **M** to switch to FM Mode. Short press **⏮** and **⏭** to Prev. and Next, Long press **⏮** and **⏭** button to turn down and turn up the Volume.

Charging

Please use the original charging cable to charge,
Red LED on when charging.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radiation Exposure Statement

This device complies with RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.