


WARNING:
CHOKING HAZARD - Small parts
Not for children under 3 years.

INSTRUCTION MANUAL
MANUEL D'INSTRUCTIONS
GEBRUIKSAANWIJZING
MANUAL DE INSTRUCCIONES


REMOTE FUN

MOTORBIKE
MOTOCYCLETTE
MOTORRAD
MOTOCICLETA



MOTO SPORTIVA
MOTO CICLETA
SNELLE MOTOR

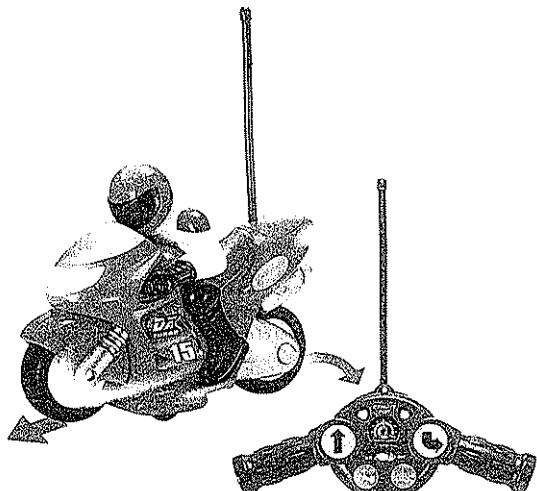

① Handset

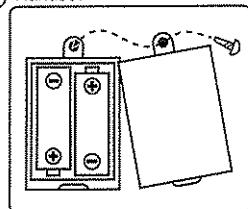

② Motorbike

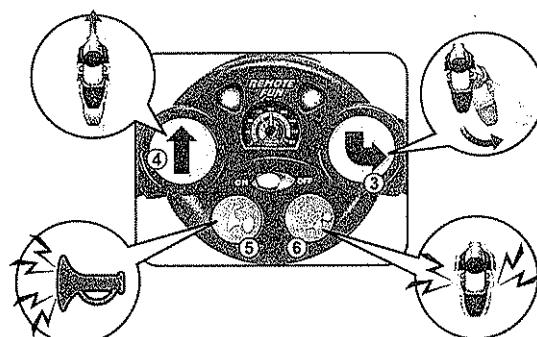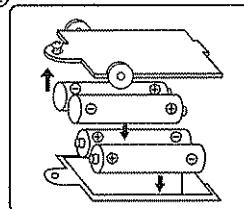

Please keep the packing and this manual. It contains important information.

Conserver l'emballage ainsi que ce manuel. Il contient des informations importantes.

Bitte die Verpackung und dieses Handbuch aufheben. Es enthält wichtige Informationen.

Por favor conserve este embalaje y el manual. El contiene informaciones importantes.

Conservare l'imballaggio e il manuale, poiché contiene informazioni importanti.

Favor conservar esta embalagem e este manual. Ele contém informações importantes.

Bewaar de verpakking en deze handleiding. Deze bevatten belangrijke informatie.

ATTENTION:
RISQUE D'ÉTOUFFEMENT - NE CONVIENT
PAS AUX ENFANTS DE MOINS 3 ANS.

INSTALLING THE BATTERIES

HANDSET: ①

1. Switch the power to the OFF position
2. Use a screwdriver to open the battery compartment cover at the back of the handset.
3. Insert 2 x LR6/AA (1.5V) batteries as marked in the battery compartment.
4. Replace the battery cover & tighten the screw securely.

MOTORBIKE: ②

1. Switch the power to the OFF position
2. Use a screwdriver to open the battery compartment cover at the bottom of the motorbike.
3. Insert 4 x LR6/AA (1.5V) batteries as marked in the battery compartment.
4. Replace the battery cover & tighten the screw securely.

* 2 x LR6/AA (1.5V) batteries included for try me function.

PLAYING WITH THE CAR

1. Switch ON the motorbike and the handset.
2. Press button to turn the motorbike in a anti-clockwise direction. ③
3. Press button to drive straight ahead.
4. Press button for horn sound & headlight. ⑤
5. Press button to start engine & headlight. ⑥

* The range of the transmitter is about 7 meters based on outdoor area with new batteries.

* If the motorbike does not operate correctly, check the motorbike and the handset are switched on, move away from other electrical devices and try switching the motorbike off and then back on again.

WARNING

1. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Avoid water when racing your motorbike. Do not submerge your motorbike or handset in water.
3. This product is not suitable for children under 36 months, as small parts could break off and be swallowed.
4. Do not use the motorbike in street traffic or on sidewalks. You would endanger other participants in street traffic.

NOTES (1)

This product complies with RF and EMC testing on R&TTE directives 1999/5/EC and intended for export to all European Union Member states, Iceland, Norway and Switzerland.

NOTES (2)

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

BATTERY SAFETY

1. Batteries should only be inserted or changed by adult.
2. Only use the same type of battery - do not mix brands or types.
3. Do not mix old and new batteries.
4. Do not use rechargeable batteries.
5. Non-rechargeable batteries are not to be recharged.
6. Replace all batteries at the same time with new ones.
7. Do not leave batteries in the toy for long periods of time when it is not in use.
8. Remove exhausted batteries from the toy.
9. Dispose of used batteries safely - do not throw on a fire or attempt to open up the outer casing.
10. At all times keep small batteries which could be a choking hazard to a small child out of its reach.
11. Batteries are harmful if swallowed. Seek medical advice if a small battery has been swallowed by a child.
12. The supply terminals are not to be short-circuited.

