

### PLEASE NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help

### TROUBLE SHOOTING

| Problems           | Reasons                                                                         | Solution                                                                                                                                                                                                                                                                                          |
|--------------------|---------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Running problems   | The alkaline battery inside the radio control or charger unit is too weak.      | Replace with new alkaline batteries.                                                                                                                                                                                                                                                              |
|                    | There is a weak or low reception for the radio control.                         |                                                                                                                                                                                                                                                                                                   |
| Operation problems | A small object obstructs movement of the tire or axle.                          | Use tweezers or a paper clip to remove obstruction.                                                                                                                                                                                                                                               |
|                    | The vehicle was driven on the carpet and has fabric threads caught in the axle. | Playing on the carpet is not recommended.                                                                                                                                                                                                                                                         |
| Other              | The vehicle does not respond to the radio control.                              | Try playing at another location.                                                                                                                                                                                                                                                                  |
|                    | The radio control's frequency is disrupted by something around the environment. | Some other equipment using the same radio wave could disrupt the radio control. Either play in another location or turn off other equipment. If you are planning to race your vehicles with another friend, purchase vehicles with 2 different frequencies (49MHz and 27MHz) to avoid disruption. |

# Instruction Manual



ITEM NO. 3821

**\*IMPORTANT - IF VEHICLE DOES NOT RESPOND PROPERLY,  
PLEASE REPLACE BATTERIES (4 X AA).**

**\*\*\* NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE EQUIPMENT.**

### WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation of the device.

**CONSUMER SERVICE**  
Please do not return to store!  
For parts information or  
questions, please call:  
1-877-FUN-TOYS  
(1-877-386-8697)

©Disney/Pixar



Manufactured & Distributed by  
© 2005 Planet Toys Inc.  
NY, NY 10001  
All Rights Reserved  
MADE IN CHINA

[www.planettoys.com](http://www.planettoys.com)




## START UP:

Unscrew and remove the battery covers on both the controller and the vehicle. Insert 4AA batteries into the vehicle and 3 AAA batteries into the controller unit. Replace both battery covers and tighten the screws. (See Diagram #1 & #2)

Diagram #1

 Diagram #2

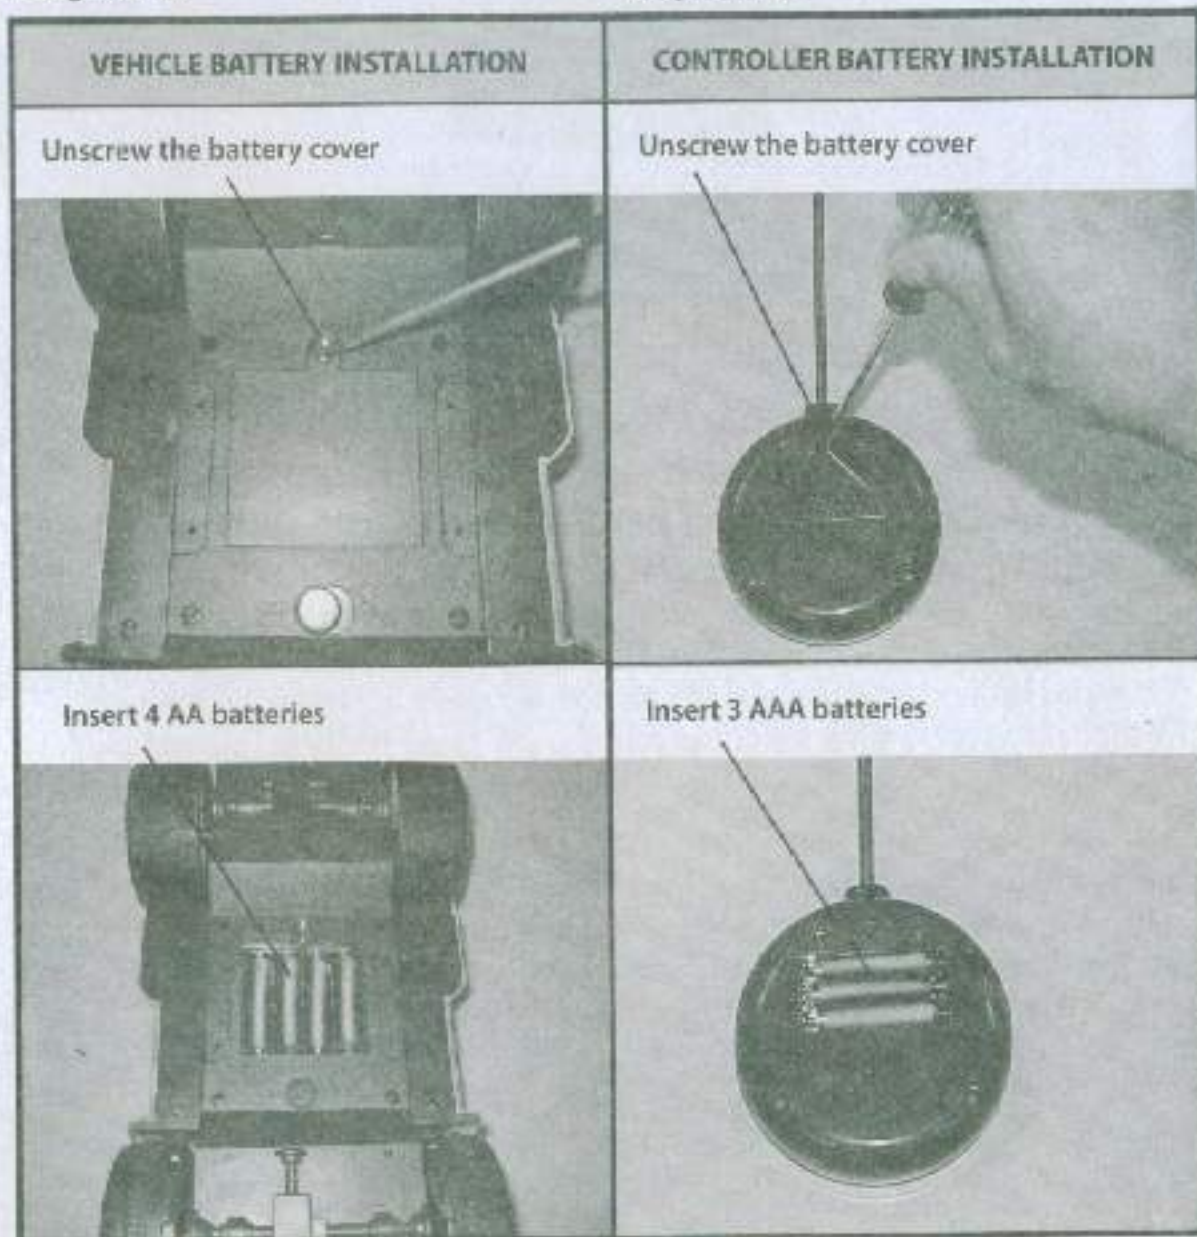

## ATTENTION!

A) Make sure the batteries have been inserted correctly (+ or -) into vehicle and controller.

B) If the car does not respond properly, please replace the alkaline batteries in the car and /or controller.

### NOTE:

- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.
- Do not dispose of batteries in fire, batteries may explode or leak.

 
## OPERATING THE VEHICLE:

1. Switch on the vehicle.
2. Press the buttons to control the vehicle to go forward and turn. ( See Diagram #3)
3. Press the horn button to play sounds. (See Diagram #3)
4. After use, switch off the vehicle.
5. If the vehicle is to be "parked" for a relatively long time, remove all batteries from the vehicle and controller unit.

### PLEASE NOTE:

A) When operating the controller, please do not touch the antenna, as the control, distance and speed will be affected.


B) If you notice a reduction in speed and control, please be prepared to replace the batteries per the instructions detailed on page 2.

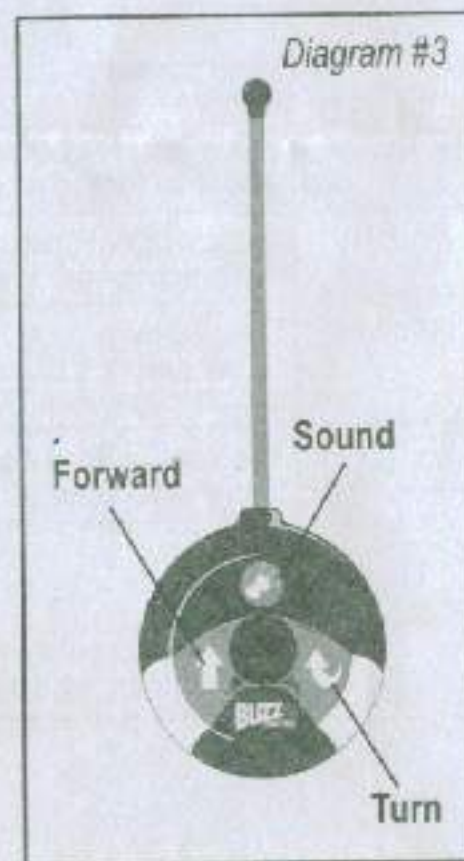



## START UP

 Unscrew and remove the battery covers on both the controller and the car. Insert 4 AA batteries into the car and 3 AAA battery into controller unit. Then replace the battery covers and tighten the screws (see diagram #1 & #2)

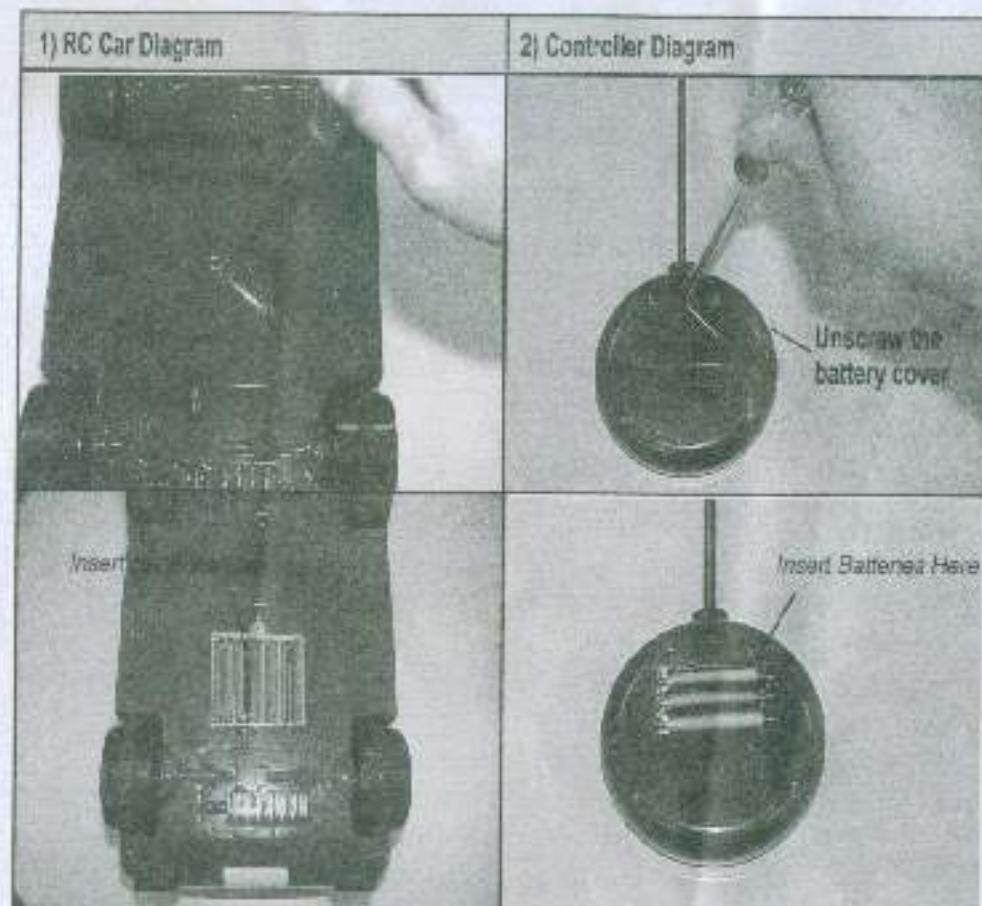

## PLEASE NOTE:

- Make sure the batteries have been inserted correctly (+ or -) into car and controller.
- If the car does not respond properly, please replace the alkaline batteries in the car and/or controller batteries.

## NOTE:

 
- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.
- Do not dispose of batteries in fire, batteries may explode or leak.

## OPERATING THE CAR

- Switch on the Little Tikes Radio Control™ Car
- Press the action buttons to control the Little Tikes R/C vehicle to go forward or reverse and turn. (see Diagram #3)
- After use, switch off the Little Tikes Radio Control™ Car.
- If the Little Tikes Radio Control™ Car is to be "parked" for a relatively long time, remove all batteries from the car and the

## PLEASE NOTE:


- When operating the controller, please do not touch the antenna, as the control, distance and speed will be affected.
- If you notice a reduction in speed and control, please begin to prepare to replace the batteries per the instructions detailed on the page 2.

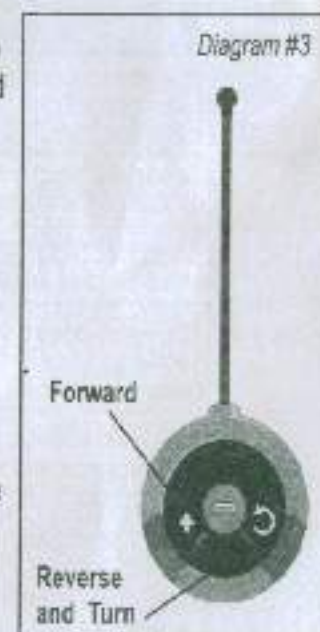



## DÉMARRAGE

 Dévissez et retirez le couvercle du compartiment à piles sur la voiture et sur la voiture. Insérez les 4 piles AA dans la voiture et les 3 piles AAA dans la commande. Remettez ensuite les couvercles des compartiments à piles en place et resserrez les vis (voir diagrammes n° 1 et n° 2).

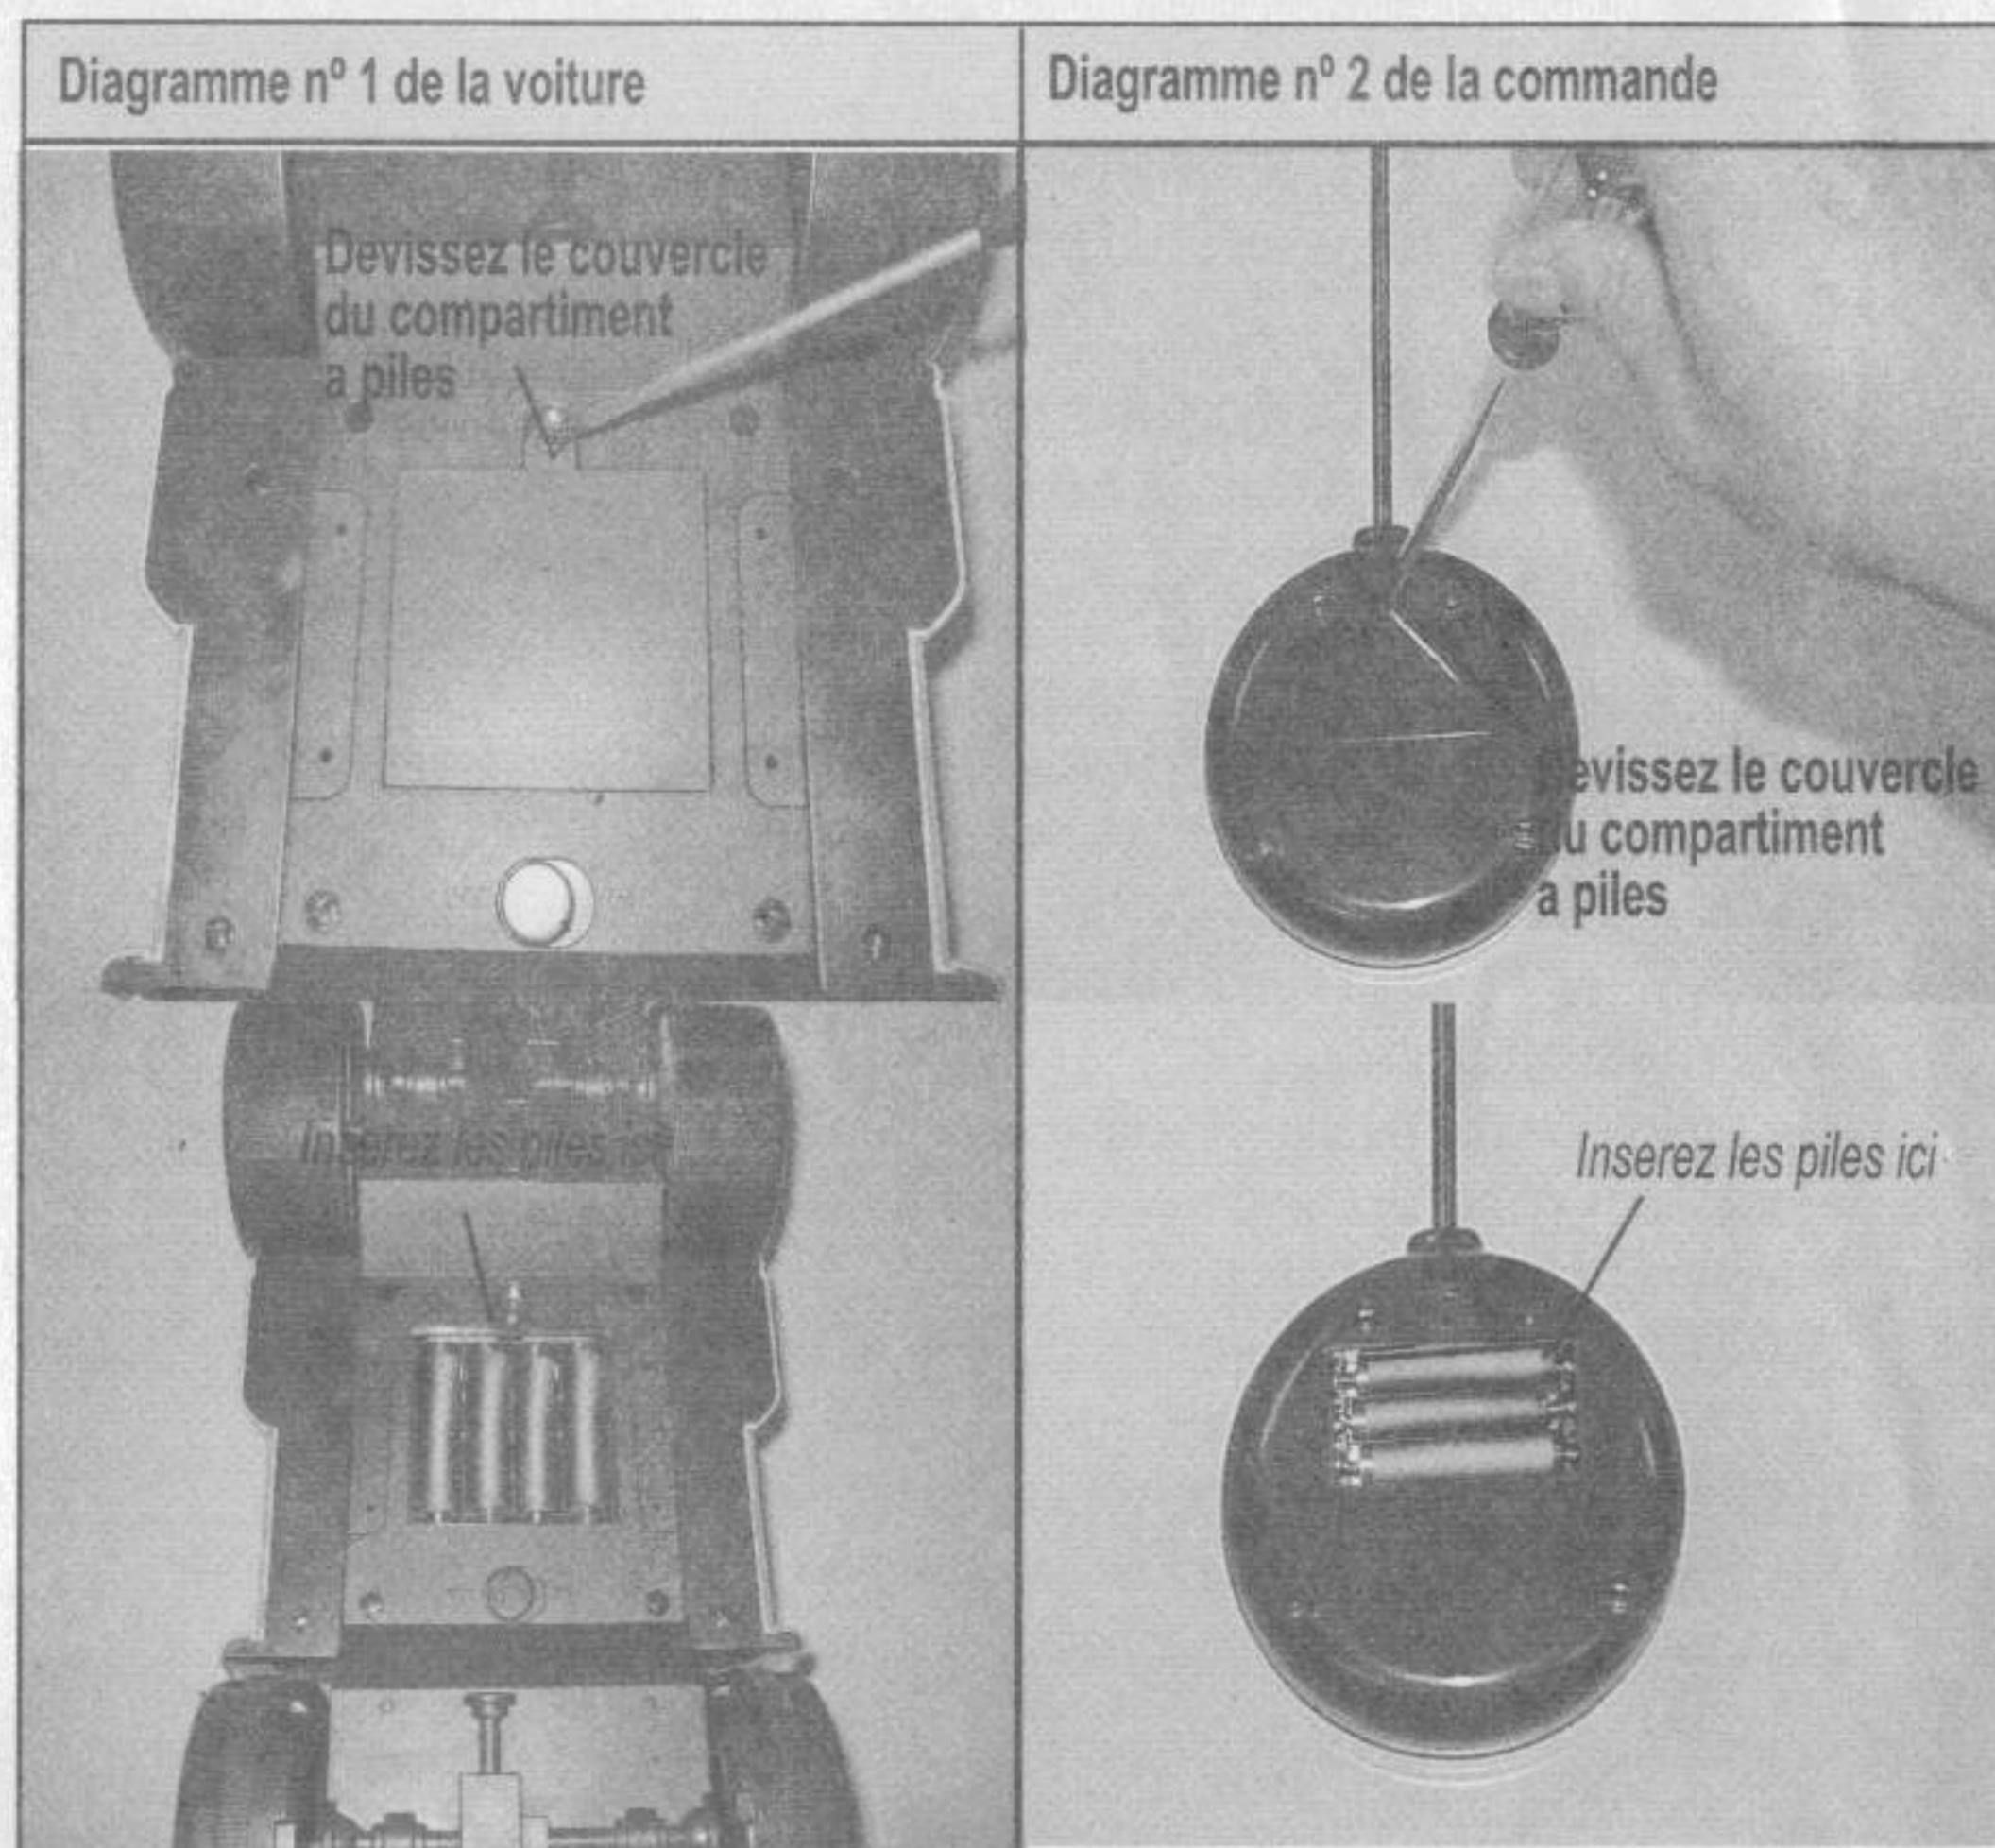

## ATTENTION :

- Verifiez que les piles ont été insérées correctement (+ or -) dans la voiture et la commande.
- Si la voiture ne réagit pas normalement, veuillez remplacer les piles alcalines dans la voiture et/ou la commande.

## ATTENTION :

- Ne mélangez pas les piles neuves et usagées.
- Ne mélangez pas les piles alcalines avec des piles standard (carbone/zinc) ou rechargeables (nickel-cadmium).

## FONCTIONNEMENT DU VEHICULE :

- Allumez la voiture à radiocommande Little Tikes.
- Appuyez sur les boutons avant et arrière afin de faire avancer, reculer ou tourner la voiture à radiocommande Little Tikes (voir diagramme n° 3).
- Après utilisation, éteignez la voiture à radiocommande Little Tikes.
- Si la voiture à radiocommande Little Tikes doit être « garée » pendant assez longtemps, retirez les piles de la voiture et de la commande.

## ATTENTION :

- Ne touchez pas l'antenne pendant l'utilisation de la commande, sous peine d'affecter la vitesse et la distance de contrôle.
- Veuillez commencer le rechargement selon les instructions données à la page 2 si vous notez une diminution de la vitesse et du contrôle.

