

CAUTIONS & WARNINGS

10

Recharging batteries should be done by an adult.

Do not recharge the Battery Pack if it is warm to the touch. Allow the Battery Pack to cool before recharging. Recharging a warm Battery Pack will shorten the life of the Pack.

Do not charge a damaged, leaking, hot or wet Battery Pack.

When not in use, remove Battery from its compartment.

When not in use, Transformer should be unplugged from the electrical outlet.

Under no circumstance should the Battery Pack be disposed of in fire. This may cause injury, leakage or explosion.

Please dispose of Ni-MH Battery cells properly.

Do not break open or disassemble the Battery Pack.

Do not use the Battery Pack or Charger for any other reason than charging and running a West Coast Choppers RC Vehicle.

Do not stall the motor during use.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and

2. This device must accept any interference received, including interference that may cause undesired operation of the device.

ATTENTION PARENTS: The Battery Charger & Battery Pack need to be periodically examined for potential hazards and any potential hazardous parts be repaired or replaced.

ITEM NO: 3341

CAUTION-ELECTRICALLY OPERATED PRODUCT:

NOT RECOMMENDED FOR CHILDREN UNDER 8 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING PACKING AND USE TO PREVENT ELECTRIC SHOCK. INPUT VOLTAGE: 110V AC. OUTPUT: 12.6V DC. 1.5A.

CHOPPERS

100%
SCALE

Full Function 9.6V Ni-MH Radio Control Vehicle

OPERATING INSTRUCTIONS

IMPORTANT: IF VEHICLE DOES NOT RESPOND PROPERLY, PLEASE REPLACE THE 9.6V Ni-MH BATTERY PACK. THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

SS TRUCK

PLEASE DO NOT RETURN TO STORE

For more information or questions, please call Consumer Services: 1-877-FUN-TOYS (1-877-386-8697)

Colors and decorations may vary. Keep content details for future reference.

WWW.WESTCOASTCHOPPERS.COM

*©2006 West Coast Choppers, Inc.

All Rights Reserved. Manufactured and used under license from Mattel. Mattel, L.P. West Coast Choppers and CH are trademarks of Mattel, Inc. U.S.A.

planet toys

Manufactured & Distributed by © 2006 Planet Toys Inc. NY, NY 10010 All Rights Reserved. MADE IN CHINA

www.planettoysltd.com

042005

3

CHARGING THE BATTERY PACK

IMPORTANT: The included 9.6V Ni-MH Battery is not charged, please charge prior to use.

Standard 110/120V Household electrical outlet

Transformer

9.6V Ni-MH Battery Pack

Charge Status Light

Charging Cradle

Plus (+) Minus (-) Markings

1. First, plug the Transformer into a Standard 110/120V Household electrical outlet. Then, insert the connecting plug into the opening located on the side of the Charger.

2. Place the 9.6V Ni-MH Battery into the Charger as shown above so that the (+) and (-) markings on the Battery Pack match the markings located on the Charging Cradle.

3. A red Status Light will indicate that the Battery Pack is being charged. Charge the Battery for about four hours. The Status Light will turn green when the Battery is fully charged. NOTE: Leaving the Battery in the Charger will not increase the life of your battery.

4. After charging and during use, the Battery Pack will become warm.

IMPORTANT: Please allow the Battery Pack to cool prior to recharging. Charging before doing so will greatly reduce the life of the Battery.

4

INSTALLING THE BATTERY PACK

1. Carefully turn the vehicle on its side and locate the battery compartment found on the bottom of the vehicle chassis.

2. Unscrew and remove the Battery Compartment cover.

3. Rotate the Battery Compartment Lock so that it is in the "unlock" position.

Unscure Battery Compartment Cover

Battery Cover

Rotate the Lock to "UNLOCK" Position

4. Examine the 9.6V Ni-MH Battery Pack. You will notice it has three "L" Shaped Notches located on the back part of each side. These Notches match up and lock into identical Notches located in the Battery Compartment. On the bottom end of the battery, near the polarity markings [(+) and (-)] are two Metal Contacts that will touch two Metal Contacts in the Compartment when the battery is properly installed.

5. Once charged, insert the 9.6V Ni-MH Battery Pack into the Battery Compartment so that the "L" Shaped Notches on the Battery Pack lock into the "L" Shaped Notches in the Battery Compartment. As explained in step 4, the Metal Contacts on the Battery Pack should be touching the Metal Contacts in the Battery Compartment.

6. Rotate the Battery Compartment Lock so that it is in the locked position.

7. Replace the Battery Compartment Cover and tighten the screws.

7

SS FEATURES, FUNCTIONS

WORKING HEADLIGHTS

Lights will glow while driving forward

WORKING TURN SIGNALS

Lights will activate while turning

WORKING TAILLIGHTS

Lights will glow while driving in reverse

AC/DC JACK

Plug the MP3 jack and play

You can also use battery pack as a music power supply. When MP3 jack is plugged in only lid bed can be operated.

HYDRAULIC BED COVER

Bed lid will rise and down continually when switches are activated

MP3 plug and play inside license plate

WORKING HYDRAULICS

Car will rise and drop continually when hydraulic switches are activated

1

TABLE OF CONTENTS

PAGE 1:

Table of Contents, Before You Begin: Remove Demonstration Wire.

PAGE 2:

Chopper Checklist.

PAGES 3-4:

Charging & Installing the 9.6V Ni-MH Battery Pack.

PAGE 5:

Controller Battery & Vehicle Antenna Installation.

PAGE 6:

Power, Sound On/Off Switch, Alignment Control.

PAGE 7:

SS Features and Functions.

PAGE 8:

Operating the Vehicle, Proper Use, Precautions & Care.

PAGE 9:

Please Note and Troubleshooting.

PAGE 10:

Caution, Warning & Attention Parents.

2

CHOPPER CHECKLIST

IMPORTANT: THE INCLUDED 9.6V Ni-MH BATTERY PACK IS NOT CHARGED PRIOR TO SHIPMENT AND MUST BE CHARGED BEFORE USE.

To prevent damage, the contents of the package that are listed below have been packed in the Styrofoam tray and may be out of plain sight. Please remove all contents from the tray.

VEHICLE

9.6V Ni-CD BATTERY PACK

CHARGING CRADLE

TRANSFORMER

CONTROLLER

(6 "AA" batteries included)

The batteries included in the controller are for demonstration only.

2 VEHICLE ANTENNA TUBES

5

CONTROLLER BATTERY INSTALLATION

1. On the back of the Controller, locate the Battery Compartment.

2. Unscrew the Battery Compartment Cover.

3. Insert 6 "AA" size alkaline batteries. Make sure the plus (+) and minus (-) markings on the battery match up with the plus (+) and minus (-) markings inside the Battery Compartment.

Insert 6 "AA" Batteries

Unscure the battery cover

4. Replace the Battery Compartment Cover and tighten the screw.

Tighten Screw

FOR BEST RESULTS:

1. Do not mix old and new batteries

2. Do not mix alkaline, standard or rechargeable batteries.

3. Use alkaline batteries only.

NOTE: Replace with Alkaline Batteries for longest life and best performance. Remember to take out all the batteries from the vehicle and the controller if the vehicle will not be used for a long time.

6

POWER, SOUND ON/OFF SWITCH

Off / Sounds /

Power, Sound On/Off Switch

ALIGNMENT CONTROL SWITCH

Alignment Control

The Alignment Control Dial is located between the front wheels. If the vehicle begins to pull to the left, adjust the trim control towards the "R" marking. If the vehicle pulls to the right while driving, adjust the trim control towards the "L" markings.

VEHICLE ANTENNA INSTALLATION

1. On the top of the vehicle, you will find an opening where the vehicle antenna wire is located.

2. Slide the vehicle antenna wire through the vehicle antenna tube. The tube will fit inside the opening found on the top of the car.

3. Tying a simple knot in the antenna wire will hold the vehicle antenna tube in place.

8

OPERATING THE VEHICLE

Boombax sounds button

Indicator light glows when in use

Forward (activates headlights)

Neutral

Reverse (activates rear lights)

Left button Vehicles go up and down with hydraulic sound

On with start engine sounds/Off with emergency light

Left/Right Steering Left (activates left turn signal)

Right (activates right turn signal)

Right button bed lid go up and down

PROPER USE, PRECAUTIONS & CARE

1. The Toy can perform better on a vinyl floor. Thick carpets are not recommended since carpet does not provide suitable traction and lint from the carpet may damage vehicle.

2. Operating multiple vehicles with the same frequency in close proximity will cause interference and poor performance.

FCC CAUTION: The manufacturer is not responsible for the radio interference caused by unauthorized frequency modification to this equipment. Such modifications could void the user's authority to operate the equipment.

3. Works best away from high voltage power lines, large buildings and walls.

4. Hold the controller antenna up for the best performance.

5. When the product does not respond, slows down, or loses range, replace the batteries.

6. This product is not recommended for use on loose dirt or wet surface.

7. Do not immerse in water.

9

PLEASE NOTE & TROUBLESHOOTING

PLEASE NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna

- Increase the separation between the equipment and receiver

- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.

- Consult the dealer or an experienced radio/TV technician for help

TROUBLE SHOOTING

Problems	Reasons	Solution
Running problems	The battery inside the radio control unit is too weak.	Replace with new alkaline batteries inside the control unit.
	There is a weak or low reception for the radio control.	
Operation problems	The rechargeable battery inside the vehicle is too weak.	Recharge the 9.6V NiMH Battery Pack.
	A small object obstructs movement of the tire or axle.	Use tweezers or a paper clip to remove obstruction.
Other	The vehicle was driven on the carpet and has fabric threads caught in the axle.	Playing on the carpet is not recommended.
	The vehicle does not respond to the radio control.	Try playing at another location.
Other	The radio control's frequency is disrupted by something around the environment.	Some other equipment using the same radio wave could disrupt the radio control. Either play in another location or turn off other equipment. If you are planning to race your vehicles with another friend, purchase vehicles with 2 different frequencies (49MHz and 27MHz) to avoid disruption