

1

CAUTIONS & WARNINGS

Do not recharge the Battery Pack if it is warm to the touch. Allow the Battery Pack to cool before recharging. Recharging a warm Battery Pack will shorten the life of the Pack.

Recharging batteries should be done by an adult.

Do not charge a damaged, leaking, hot or wet Battery Pack.

When not in use, remove Battery from its compartment.

When not in use, Transformer should be unplugged from the electrical outlet.

Under no circumstance should the Battery Pack be disposed of in fire. This may cause injury, leakage or explosion.

Please dispose of Ni-Cd Battery cells properly.

Do not break open or disassemble the Battery Pack.

Do not use the Battery Pack or Charger for any other reason than charging and running a West Coast Choppers RC Vehicle.

Do not stall the motor during use.

WARNING:
Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference recieved, including interference that may cause undesired operation of the device.

ATTENTION PARENTS: The Battery Charger & Battery Pack need to be periodically examined for potential hazards and any potential hazardous parts be repaired or replaced.

ITEM NO. 3349



CAUTION-ELECTRICALLY OPERATED PRODUCT:
NOT RECOMMENDED FOR CHILDREN UNDER 8 YEARS OF AGE & WITH ALL ELECTRIC PRODUCTS PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK. RATED 120V AC 60Hz 75W. COUNTRY OF ORIGIN: CHINA

Full Function 9.6V Ni-Cd Radio Control Custom Quad

OPERATING INSTRUCTIONS

IMPORTANT: IF VEHICLE DOES NOT RESPOND PROPERLY, PLEASE REPLACE THE 9.6V NI-Cd BATTERY PACK. THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.



PLEASE DO NOT RETURN TO STORE
For more information or questions, please call Consumer Services:
1-877-FUN-TOYS
(1-877-366-8697)

Colors and decorations may vary. Keep content details for future reference.

WWW.WESTCOASTCHOPPERS.COM

16 40906 West Coast Choppers, Inc.
All Rights Reserved. Manufactured and used under license from WestCoast Skidco L.P.
West Coast Choppers and CH and trademarks of WestCoast Skidco L.P.

 
Planet Toys
Manufactured & Distributed by
© 2005 Planet Toys Inc.
NY, NY 10010
All Rights Reserved
MADE IN CHINA
www.planettoysltd.com

092705

3

CHARGING THE BATTERY PACK

IMPORTANT: The included 9.6V NiCd Battery is not charged, please charge prior to use.

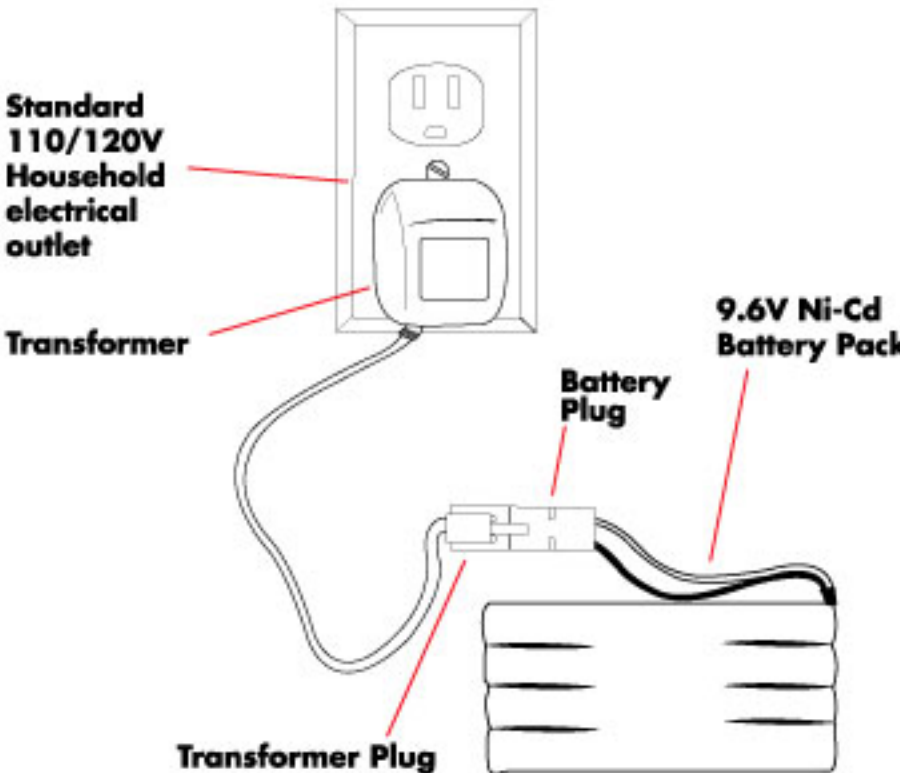

Standard 110/120V Household electrical outlet

Transformer

Battery Plug

9.6V Ni-Cd Battery Pack

Transformer Plug

 
1. First, plug the Transformer into a Standard 110/120V Household electrical outlet.
2. Plug the 9.6V Ni-Cd battery into charger.
3. Charge the Battery for about five hours.
NOTE: Leaving the Battery in the Charger will not increase the life of your battery.
4. After charging and during use, the Battery Pack will become warm.

IMPORTANT: Please allow the Battery Pack to cool prior to recharging. Charging before doing so will greatly reduce the life of the Battery.

4

BATTERY PACK INSTALLATION

1. Unscrew the battery cover.
2. Plug the 9.6V Ni-Cd battery into battery box.
3. Replace the battery compartment cover and tighten the screw.

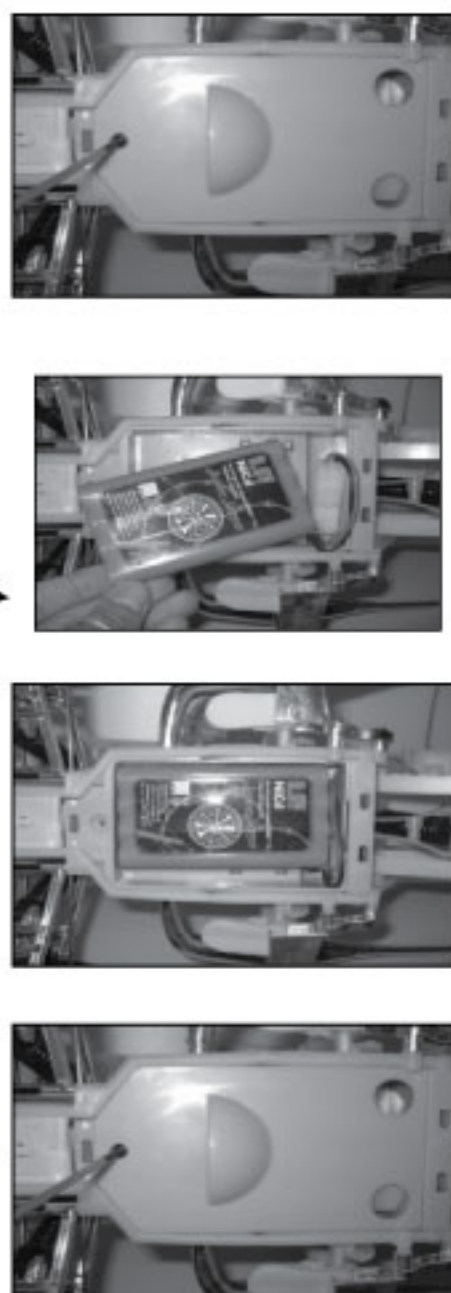


7

RELEASING THE 13" SKELETON


Follow the below steps to unlock & remove the 13" Skeleton Rider from the Quad.

 1. Pull the hands from the Quad's handles.
2. Rotate the plate up to release the lock.
3. Pull out both legs from the Quad.
4. Pick up the skeleton rider from the Quad.

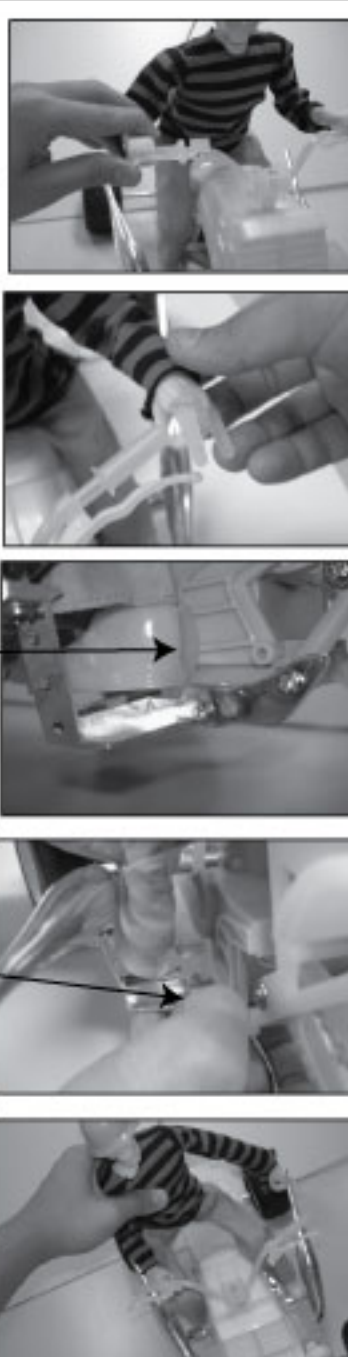

8

 OPERATING THE VEHICLE

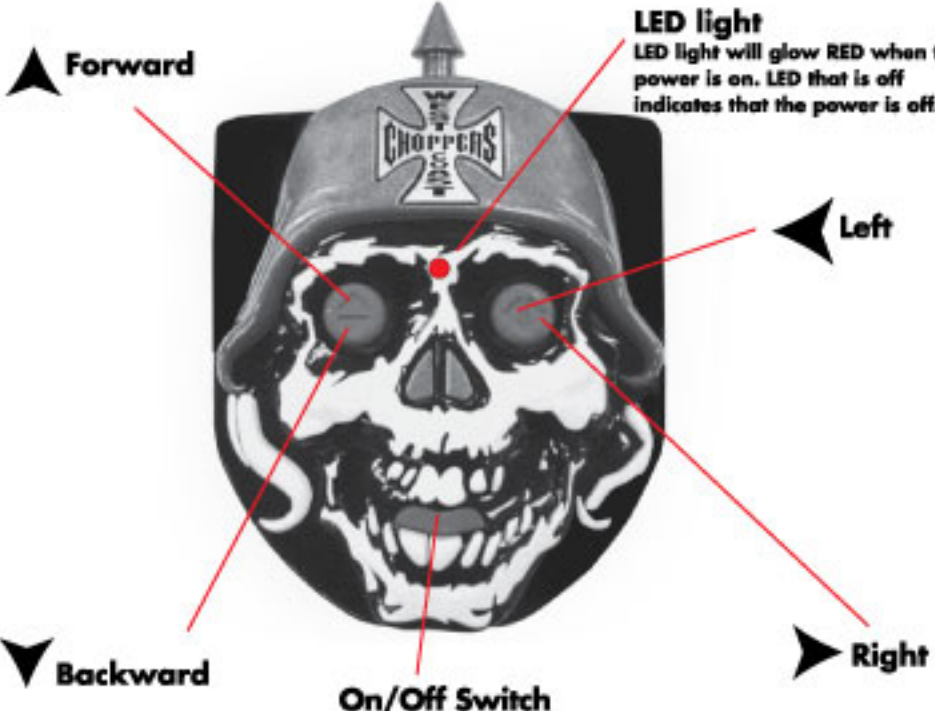

Forward

Backward

Left

Right

LED light
LED light will glow RED when the power is on. LED that is off indicates that the power is off.

On/Off Switch

PROPER USE, PRECAUTIONS & CARE

- 1.The Toy can perform better on a vinyl floor. Thick carpets are not recommended since carpet does not provide suitable traction and lint from the carpet may damage vehicle.
- 2.Operating multiple vehicles with the same frequency in close proximity will cause interference and poor performance.

FCC CAUTION:
The manufacturer is not responsible for the radio interference caused by unauthorized frequency modification to this equipment. Such modifications could void the user's authority to operate the equipment.

- 3.Works best away from high voltage power lines, large buildings and walls.
- 4.Hold the controller antenna up for the best performance.
- 5.When the product does not respond, slows down, or loses range, replace the batteries.
- 6.This product is not recommended for use on loose dirt or wet surface.
- 7.Do not Immerse in water.

1

TABLE OF CONTENTS

PAGE 1: Table of Contents.

PAGE 2: Chopper Checklist.

PAGE 3: Charging the 9.6V Ni-Cd Battery Pack.

PAGE 4: Battery Pack Installation.

PAGE 5: Controller Battery Installation.

PAGE 6: On/Off Switch, Alignment Control.

PAGE 7: Releasing the 13" Skeleton.

PAGE 8: Operating the Vehicle, Proper Use, Precautions & Care.

PAGE 9: Quad Features.

PAGE 10: Please note and troubleshooting.

PAGE 11: Caution, Warning & Attention Parents.

CHOPPER CHECKLIST

2

IMPORTANT: THE INCLUDED 9.6V NI-Cd BATTERY PACK IS NOT CHARGED PRIOR TO SHIPMENT AND MUST BE CHARGED BEFORE USE.

To prevent damage, the contents of the package that are listed below have been packed in the styrofoam tray and may be out of plain sight. Please remove all contents from the tray.



VEHICLE



CONTROLLER
(1 9V Battery Included)



9.6 Ni-Cd BATTERY



1 "9V" BATTERY

 


Ni-Cd BATTERY CHARGER

5

CONTROLLER BATTERY INSTALLATION

1. On the back of the Controller, locate the Battery Compartment.
2. Unscrew the Battery Compartment Cover.
3. Insert 1 9V size alkaline battery. Make sure the plus (+) and minus (-) markings on the battery match up with the plus (+) and minus (-) markings inside the Battery Compartment.
4. Replace the Battery Compartment Cover and tighten the screw.

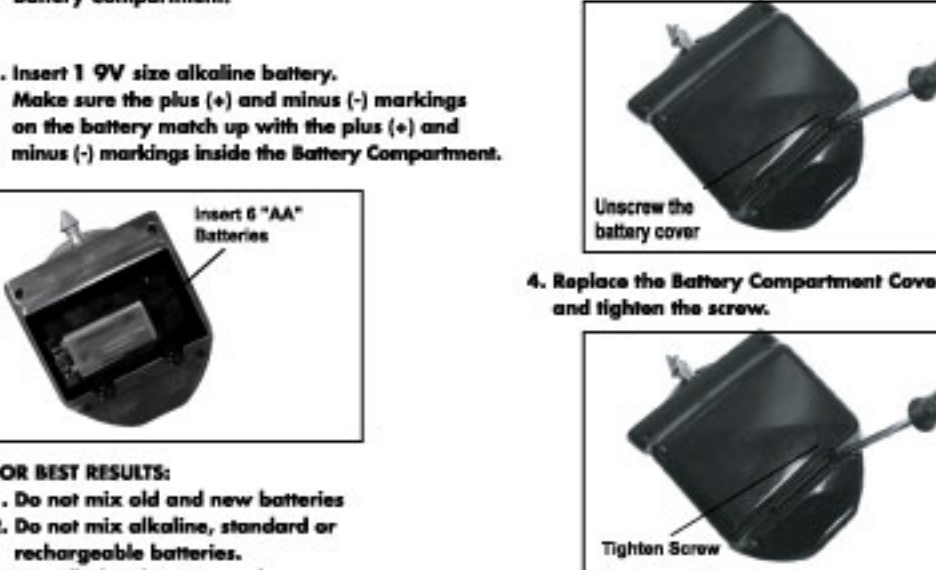

Insert 6 "AA" Batteries

Unscrew the battery cover

Tighten Screw

FOR BEST RESULTS:

 
1. Do not mix old and new batteries
2. Do not mix alkaline, standard or rechargeable batteries.
3. Use alkaline batteries only.

NOTE: Replace with Alkaline Batteries for longest life and best performance. Remember to take out all the batteries from the vehicle and the controller if the vehicle will not be used for a long time.

ON/OFF SWITCH, ALIGNMENT CONTROL

6

The Alignment Control Dial is located between the front wheels. If the vehicle begins to pull to the left, adjust the trim control towards the "R" marking. If the vehicle pulls to the right while driving, adjust the trim control towards the "L" markings.

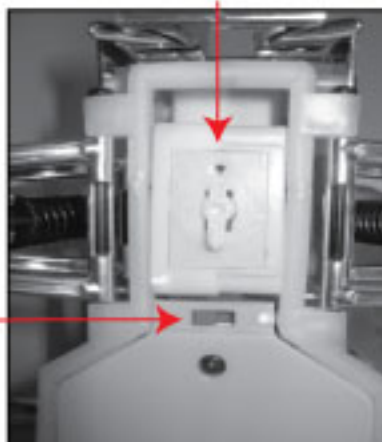

Alignment Control Dial

On/Off Switch

9

QUAD FEATURES

WORKING HEADLIGHTS



Lights will glow while driving forward.

FRONT SUSPENSION



REAR SUSPENSION



13" SKELETON RIDER



10

PLEASE NOTE & TROUBLESHOOTING

PLEASE NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help

TROUBLE SHOOTING

Problems	Reasons	Solution
Running problems	The battery inside the radio control unit is too weak.	Replace with new alkaline batteries inside the control unit.
	There is a weak or low reception for the radio control.	Recharge the 9.6V Ni-Cd Battery Pack.
Operation problems	A small object obstructs movement of the tire or axle.	Use tweezers or a paper clip to remove obstruction.
	The vehicle was driven on the carpet and has fabric threads caught in the axle.	Playing on the carpet is not recommended.
Other	The vehicle does not respond to the radio control.	Try playing at another location.
	The radio control's frequency is disrupted by something around the environment.	Some other equipment using the same radio wave could disrupt the radio control. Either play in another location or turn off other equipment. If you are planning to race your vehicles with another friend, purchase vehicles with 2 different frequencies (49MHz and 27MHz) to avoid disruption