

PLEASE NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help

TROUBLE SHOOTING

Problems	Reasons	Solution
Running problems	The alkaline battery inside the radio control is too weak.	Replace with new alkaline batteries.
	There is a weak or low reception for the radio control.	
Operation problems	A small object obstructs movement of the tire or axle.	Use tweezers or a paper clip to remove obstruction.
	The vehicle was driven on the carpet and has fabric threads caught in the axle.	Playing on the carpet is not recommended.
Other	The vehicle does not respond to the radio control.	Try playing at another location.
	The radio control's frequency is disrupted by something around the environment.	Some other equipment using the same radio wave could disrupt the radio control. Either play in another location or turn off other equipment.

INSTRUCTION MANUAL



Manufactured & Distributed by
© 2005 Planet Toys Inc.
NY, NY 10010
All Rights Reserved
MADE IN CHINA
www.planettoysltd.com

ASST. NO. 3520
ITEM NO. 3521



This product is manufactured under license for McMULLEN
AROUS PUBLISHING INC. - A PRIMEDIA company, publishing
for Truckin' Magazine. ©2005. All Rights Reserved.

***IMPORTANT - IF CAR DOES NOT RESPOND PROPERLY,
PLEASE REPLACE 3 x 'AA' SIZE BATTERIES
IN CAR UNIT (NOT INCLUDED) AND 1 X "9V"
BATTERY IN CONTROLLER. (NOT INCLUDED)**

****NOTE: THE MANUFACTURER IS NOT RESPONSIBLE
FOR ANY RADIO OR TV INTERFERENCE CAUSED BY
UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT.
SUCH MODIFICATIONS COULD VOID THE USER'S
AUTHORITY TO OPERATE THE EQUIPMENT.**

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:



1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation of the device.

Colors and decorations may vary.
Keep content details
for future reference.

**PLEASE DO NOT
RETURN TO STORE**
For more information
or questions, please call
Consumer Services:
1-877-FUN-TOYS
(1-877-386-8697)

START UP

Unscrew and remove the battery covers on both the controller and the R/C car. Insert 3 "AAA" batteries (not included) into the R/C car and 1 "9V" battery (not included) into controller unit. Then replace the battery covers and tighten the screws (see diagram #1 & #2).

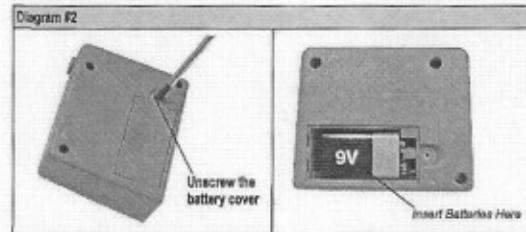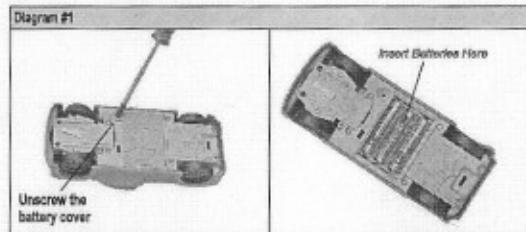

PLEASE NOTE:

- Make sure the batteries have been inserted correctly (+ or -) into car and controller.
- If the car does not respond properly, please replace the alkaline batteries in the car and/or controller batteries.

NOTE:

- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.

OPERATING THE CAR

1. Ensure that band selector switch on remote and car are set to the same number (Car has 4 selectable bandwidths).
2. Turn the power switch to "ON" (see diagram #3).
3. Turn the power switch to "ON" (see diagram #4).
4. Press the left and right shifter (see diagram #5) to drive your vehicle in all directions.
5. Adjust the fine tune steering lever located under the vehicle to keep it moving straight (see diagram #3).
6. After use, Turn "OFF" the vehicle and controller.
7. If the vehicle is to be "parked" for a relatively long time, remove all batteries from the vehicle and the R/C controller.

