

# CAUTIONS & WARNINGS

9

ITEM NO. 3556 & 3557



**CAUTION-ELECTRICALLY OPERATED PRODUCT:**  
NOT RECOMMENDED FOR CHILDREN UNDER 8 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK. INPUT: 120V AC 60Hz 9W. OUTPUT: 4V DC 30mA.



OR



Full-Function 7.2V Ni-Cd Radio Control Vehicle

## OPERATING INSTRUCTIONS

**\*IMPORTANT: IF VEHICLE DOES NOT RESPOND PROPERLY, PLEASE REPLACE THE 7.2V NI-CD BATTERY PACK.**

CAUTION: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

**PLEASE DO NOT RETURN TO STORE**  
For more information or questions, please call Consumer Services: 1-877-FUN-TOYS (1-877-386-8697)

Colors and decorations may vary. Keep content details for future reference.



Manufactured & Distributed by  
© 2006 Planet Toys Inc.  
NY, NY 10001  
All Rights Reserved  
MADE IN CHINA

www.planettoys.com

Dodge and HEMI are trademarks of DaimlerChrysler Corporation. Dodge Charger SRT8, Dodge Challenger, Dodge HEMI and their trade dress are used under license by Planet Toys Inc. © DaimlerChrysler Corporation 2006

042406

# CHARGING THE BATTERY PACK

**IMPORTANT: The included 9.6V Ni-Cd Battery is not charged, please charge prior to use.**




- First, plug the Transformer into a Standard 110/120V Household electrical outlet. Then, insert the connecting plug into the opening located on the side of the Charger.
- Plug the battery wire connector and transformer wire connector together.
- Charge the battery pack for 5 hours. The battery pack will feel warm. In this condition, the battery is fully charged.  
**NOTE: Leaving the Battery in the Charger will not increase the life of your battery.**
- After charging and during use, the Battery Pack will become warm.

**IMPORTANT: Please allow the Battery Pack to cool prior to recharging. Charging before doing so will greatly reduce the life of the Battery.**

# INSTALLING THE BATTERY PACK

4

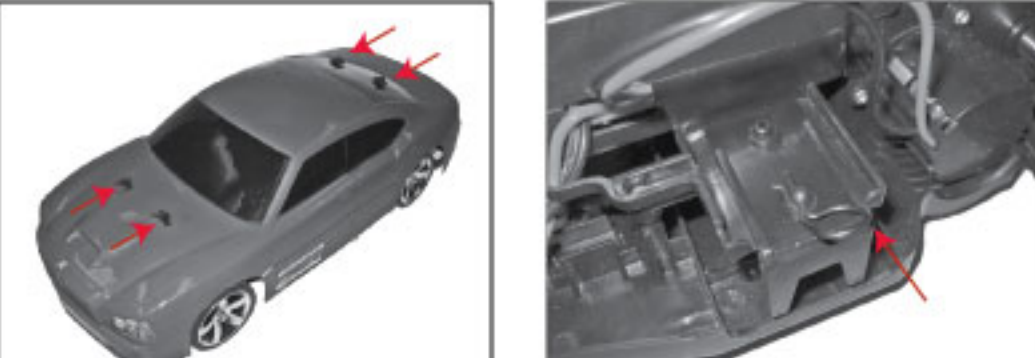

1. Take off the clips and open PVC shell.



2. Take out the clip



3. open the battery cover



4. Insert the battery



5. Clip in the battery cover and plug the battery connector

# OPERATING THE VEHICLE



## PROPER USE, PRECAUTIONS & CARE

- The Toy can perform better on a vinyl floor. Thick carpets are not recommended since carpet does not provide suitable traction and lint from the carpet may damage vehicle.
- Operating multiple vehicles with the same frequency in close proximity will cause interference and poor performance.
- Works best away from high voltage power lines, large buildings and walls.
- Hold the controller antenna up for the best performance.
- When the product does not respond, slows down, or loses range, replace the batteries.
- This product is not recommended for use on loose dirt or wet surface.
- Do not immerse in water.

# PLEASE NOTE & TROUBLESHOOTING

8

**PLEASE NOTE:**  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
- Reorient or relocate the receiving antenna  
- Increase the separation between the equipment and receiver  
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.  
- Consult the dealer or an experienced radio/TV technician for help

Problems	Reasons	Solutions
Running problems	The batteries inside the radio control are too weak.	Replace with new alkaline batteries inside the control unit.
	There is a weak or low reception for the radio control.	
Operation problems	The rechargeable battery inside the vehicle is too weak.	Recharge the 7.2V Ni-Cd Battery Pack.
	A small object obstructs movement of the tire or axle.	Use tweezers or a paper clip to remove obstruction.
Other	The vehicle was driven on the carpet and has fabric threads caught in the axle.	Playing on the carpet is not recommended.
	The vehicle does not respond to the radio control.	Try playing at another location.
	The radio control's frequency is disrupted by something around the environment.	Some other equipment using the same radio wave could disrupt the radio control. Either play in another location or turn off other equipment.

# TABLE OF CONTENTS

- PAGE 1:** Table of Contents, DODGE Features.  
**PAGE 2:** DODGE Checklist.  
**PAGES 3-4:** Charging & Installing the 7.2V Sub-C size Ni-Cd Battery Pack.  
**PAGE 5:** Vehicle Antenna Installation & Controller battery installation  
**PAGE 6:** Power On/Off Switch & Alignment Control.  
**PAGE 7:** Operating the Vehicle, Proper Use, Precautions & Care.  
**PAGE 8:** Please Note and Troubleshooting.  
**PAGE 9:** Caution, Warning & Attention Parents.

# DODGE FEATURES



OR



- Full Function
- Ready to Run
- 7.2V Sub-C 1200mAh Ni-CD for vehicle included
- 9V batt. for controller included
- Transformer included

# DODGE CHECKLIST

2

**IMPORTANT: THE INCLUDED 9.6V NI-CD BATTERY PACK IS NOT CHARGED PRIOR TO SHIPMENT AND MUST BE CHARGED BEFORE USE.**

To prevent damage, the contents of the package that are listed below have been packed in the tray and may be out of plain sight. Please remove all contents from the tray.

<b>VEHICLE</b> 		<b>7.2V Sub-C 1200mAh Ni-CD</b>
		<b>9V BATTERY (1 9V battery included)</b>
		<b>TRANSFORMER</b>
		<b>ANTENNA TUBE</b>

# CONTROLLER BATTERY INSTALLATION

- On the bottom of the Controller, locate the Battery Compartment.
  - Untight the screw of the Battery Compartment Cover.
  - Insert 1 "9V" size batteries. Make sure the plus (+) and minus (-) markings on the battery match up with the plus (+) and minus (-) markings inside the Battery Compartment.
  - Replace the Battery Compartment Cover
- CAUTIONS**  
1. Do not mix old and new batteries.  
2. Do not mix alkaline, standard or rechargeable batteries.  
3. Use Alkaline batteries only.
- NOTE: Replace with Alkaline Batteries for longest life and best performance. Remember to take out all the batteries from the vehicle and the controller if the vehicle will not be used for a long time.**

# VEHICLE ANTENNA INSTALLATION

- On the top of the vehicle, you will find an opening where the vehicle antenna wire is located.
- Slide the vehicle antenna wire through the vehicle antenna tube. The tube will fit inside the opening found on the top of the car.
- Tying a simple knot in the antenna wire will hold the vehicle antenna tube in place.

# POWER ON/OFF BAND A,B,C ALIGNMENT CONTROL SWITCH

