

### PLEASE NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help

### TROUBLE SHOOTING

Problems	Reasons	Solutions
Running problems	The alkaline batteries inside the radio control are too weak.	Replace with new alkaline batteries.
	There is a weak or low reception for the radio control.	
Operation problems	A small object obstructs movement of the tire or axle.	Use tweezers or a paper clip to remove obstruction.
	The vehicle was driven on the carpet and has fabric threads caught in the axle.	Playing on the carpet is not recommended.
Other	The vehicle does not respond to the radio control.	Try playing at another location.
	The radio control's frequency is disrupted by something around the environment.	Some other equipment using the same radio wave could disrupt the radio control. Either play in another location or turn off other equipment.

ITEM NO.3610

# INSTRUCTION MANUAL



Manufactured & Distributed by  
© 2005 Planet Toys Inc.  
NY, NY 10010  
All Rights Reserved  
MADE IN CHINA

[www.planettoysltd.com](http://www.planettoysltd.com)



MACK, Mack and the Bulldog oval design and the Bulldog hood ornament design are registered trademarks of Mack Trucks, Inc. and used under license by Planet Toys Inc.

**\*IMPORTANT - IF CAR DOES NOT RESPOND PROPERLY, PLEASE REPLACE 3 x "AAA" SIZE BATTERIES IN CAR UNIT (NOT INCLUDED) AND 1 X "9V" BATTERY IN CONTROLLER (NOT INCLUDED).**

**\*\*NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

### WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation of the device.


Colors and decorations may vary.  
Keep content details  
for future reference.

**PLEASE DO NOT RETURN TO STORE**  
For more information  
or questions, please call  
Consumer Services:  
**1-877-FUN-TOYS**  
(1-877-386-8697)

## START UP

Unscrew and remove the battery covers on both the controller and the R/C vehicle. Insert 3 "AAA" batteries (not included) into the R/C vehicle and 1 "9V" battery (not included) into the controller unit. Then replace the battery covers and tighten the screws (see diagram #1 & #2).

 Diagram #1

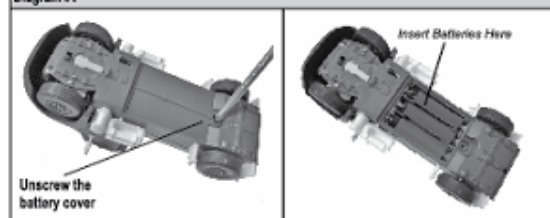

### PLEASE NOTE:

- a) Make sure the batteries have been inserted correctly (+ or -) into vehicle
- b) If the vehicle does not respond properly, please replace the alkaline batteries in the vehicle:

## NOTE:

- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.
- Do not dispose of batteries in fire, batteries may explode or leak.

## OPERATING THE CAR

1. Ensure that band selector switch on remote and vehicle are set to the same letter - A,B,C or D. (Vehicle has 4 selectable bandwidths, see diagram #3).
2. Turn the power switch to "ON" (see diagram #4).
3. Turn the power switch to "ON"
4. Press the left and right shifter (see diagram #6) to drive your vehicle in all directions.
5. Adjust the fine tune steering lever located under the vehicle to keep it moving straight (see diagram #4)
6. After use, Turn "OFF" the vehicle
7. If the vehicle is to be "parked" for a relatively long time, remove all batteries from the vehicle

Diagram #3

Band selector switch on car chassis

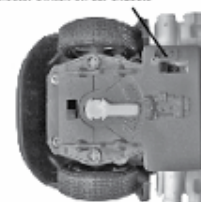 


Diagram #4

Steering lever

Power switch

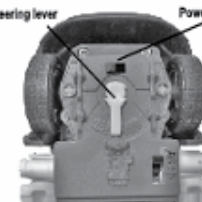 


Diagram #6

