

V-CARE DEVELOPMENT LTD

RF LOCATOR vc-3010X

Instruction Manual

Customer :
Revision : R1.0
Date : 25th -Jan-2005

Copyright © 2005 by V-Care Development Ltd.

All right reserved. This document may not be copied, photo-copied, reproduced, translated or reduced, in whole or part, in written form or to any electronic medium or machine-readable form without prior permission of the manufacturer.


The manufacturer assumes no liability for errors or direct, indirect, special, incidental or consequential damages in connection with the performance or use of this equipment, manual or any related materials. The information in this document is subject to change without notice.

(1) Features :

Simply press one of the colour buttons on the base unit, the matching receiving beeper will beep loudly so that you can find your missing item anywhere in your home.

(2) Battery Installation :


For the base unit, remove the screw and battery door on back to insert 4 AAA batteries. Make sure the polarity is correct.

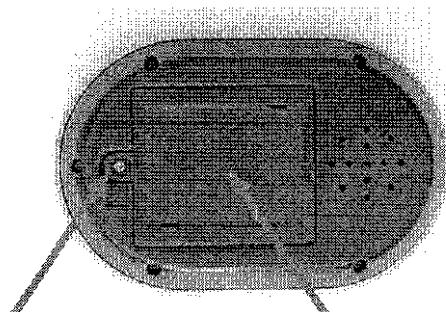

Screw


Battery door

For the beepers, the first set of batteries has been installed by factory. Simply pull out the insulating plastic tab from battery compartment on underside for all the beepers.

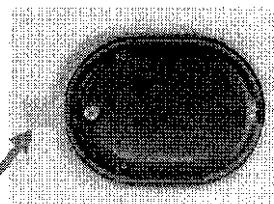


Insulating plastic tab

To replace battery of beeper, remove the screw and slide out the battery compartment. Make sure the battery is inserted with positive side up.

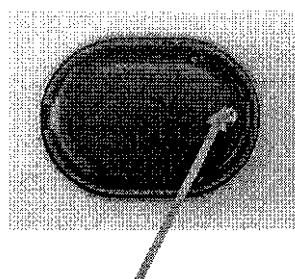

Screw

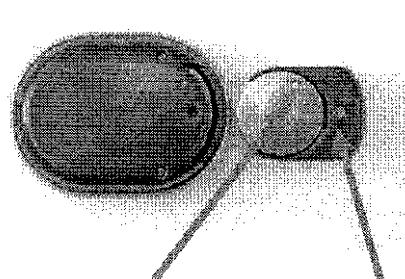

Battery (+)

Battery compartment

Battery life depends on frequency of use.

For both base unit and the beepers, change the batteries if they do not work properly.


(3) Operation :

Press the button on the base unit that matches the colour of the beepers you are trying to find.

Once the beeper receives the searching signal which is sent from the base, it will generate a beep pattern :

Colour	Beep Pattern
Red	* * *
Yellow	** ** **
Green	*** *** ***
Blue	**** **** ****

There is a memo card provided for you to record down the names of items which are attached to the beepers. Simply slot in the memo card using the four guide holes at the battery door of the base unit.

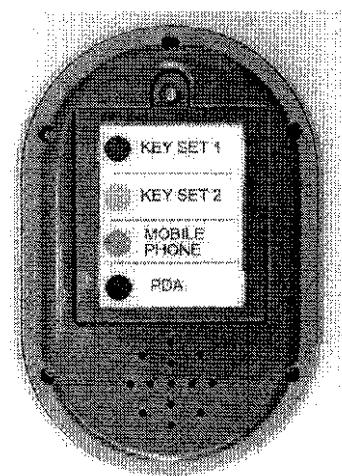

(4) Specification :

Working Distance : 15 metres (50 feet)

Operating Temperature : +10 to +40 degree C

Battery type :

Base Unit : AAA X 4 pcs

Beepers : CR2032

(5) Important Notes :

It may be necessary to move around the area and press the button several times before you can locate the object.

Do not use this product in places that are extremely hot, cold or humid.

Please keep all information for future reference.


(6) Battery Safety Information:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same to equivalent type as recommended are to be used.
- Be sure to insert batteries as instructed.
- Do not mix old and new batteries.
- Remove weak or exhausted batteries.
- Remove batteries if base or beeper unit not be used for a long period.
- Check the contact surfaces are clean before installing batteries.
- Due to small parts, batteries should be replaced by adult.
- Dispose of batteries safely.
- The supply terminals must not be short circuited.

To fulfill the requirement for FCC regulation of Model VC-3010X, we will add those materials:

The following label will be added on the Transmit unit (Ratio 1:1, Bottom cabinet).

This label adds a colon (:) to the FCC ID label sample after the words "FCC ID".

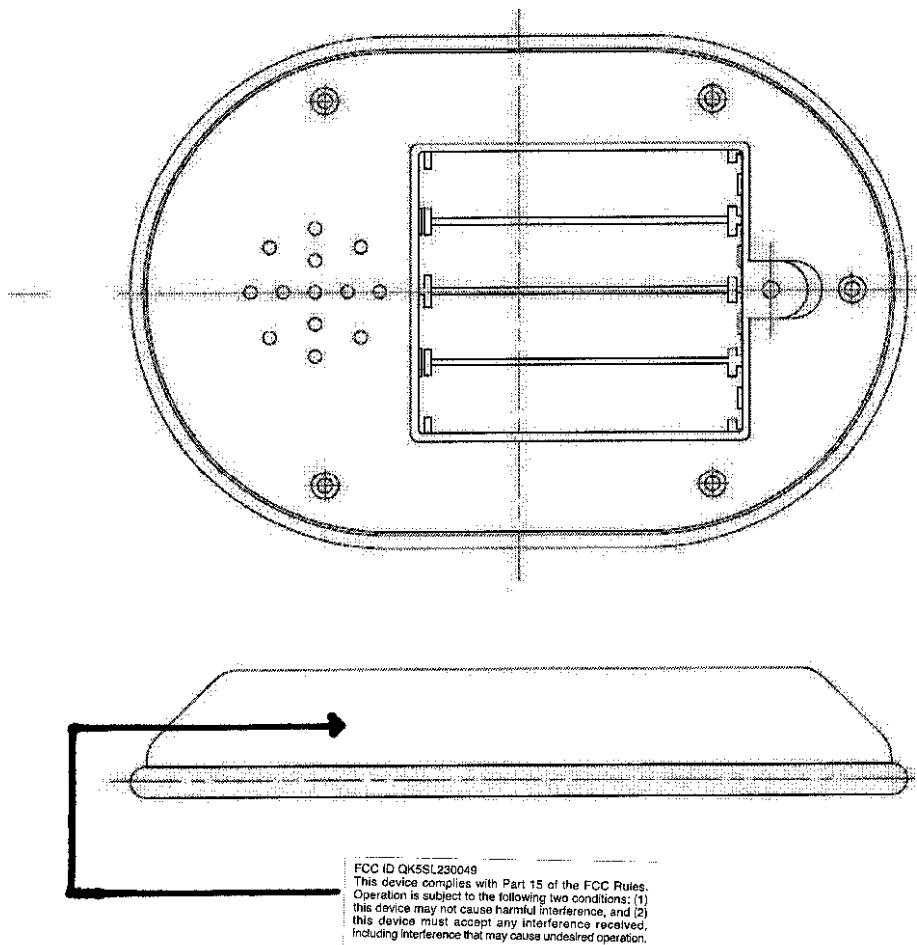

The following paper will be added in the package (Ratio 1:1). The supplementary menu will be inside to the package.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio / TV technician for help.

If you have any problem, please feel free to contact with me. Thanks!

Yours truly,




Eric Wong


Project Engineer

Grandway Technology Limtied

<Block>.

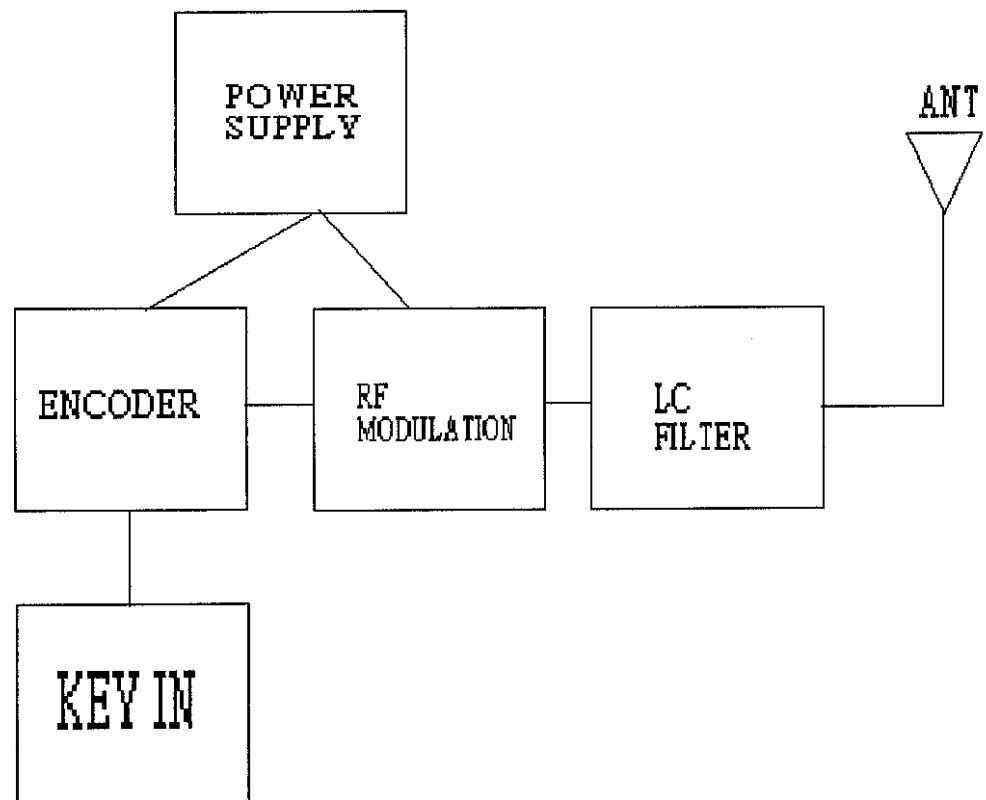

Tx

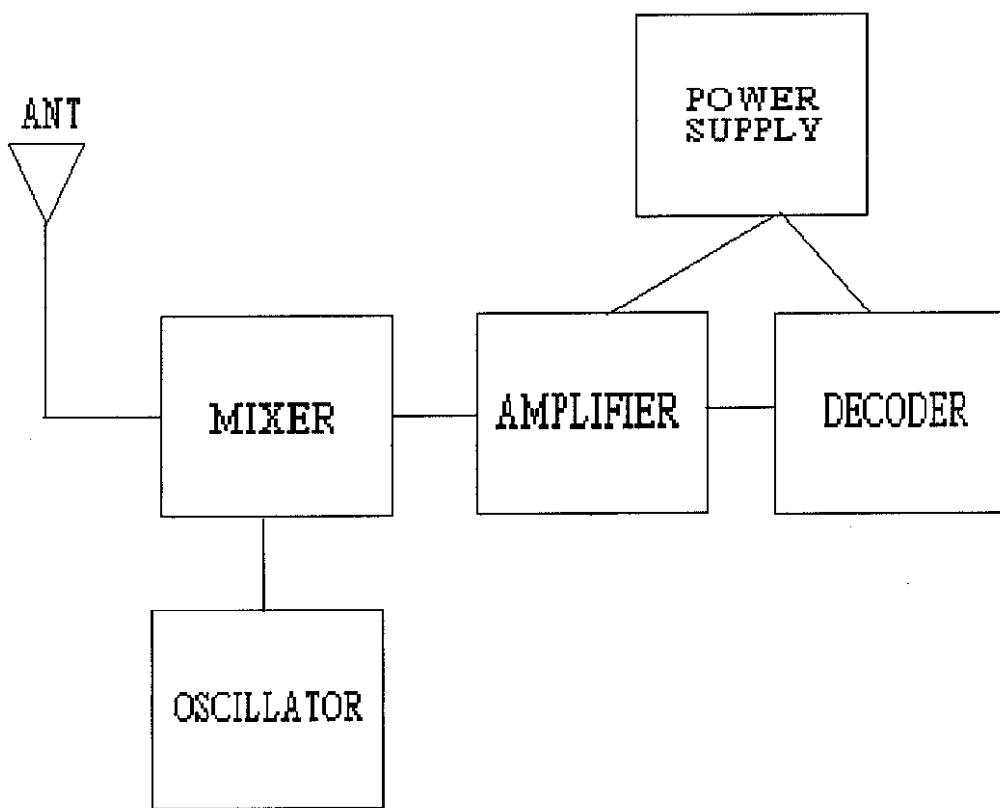

Rx

1) Features :

Simply press one of the colour buttons on the base unit, the matching receiving beeper will beep loudly so that you can find your missing item anywhere in your home.

2) Operation :

Press the button on the base unit that matches the colour of the beepers you are trying to find.

Once the beeper receives the searching signal which is sent from the base, it will generate a beep pattern :

Colour	Beep Pattern
Red	* * *
Yellow	** ** **
Green	*** *** ***
Blue	**** **** ****

3) Specification :

Operating Temperature : +10 to +40 degree C

Battery type :

Base Unit : AAA X 4 pcs

Beeper : CR2032