

(7) Battery Safety Information:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the device before being charged.
- Only batteries of the same to equivalent type as recommended are to be used.
- Be sure to insert batteries as instructed.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon - zinc), or rechargeable (nickel - cadmium) batteries.
- Remove weak or exhausted batteries.
- Remove batteries if base or beeper unit not be used for a long period.
- Check the contact surfaces are clean before installing batteries.
- Dispose of batteries safely.
- Do not dispose of batteries in fire, batteries may explode or leak.
- The supply terminals must not be short circuited.
- Attention should be drawn to the environmental aspects of battery disposal.

Statement of FCC Compliance

Caution : changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE : This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF LOCATOR VC-30124

BD44 (with 4 beepers)

User Guide

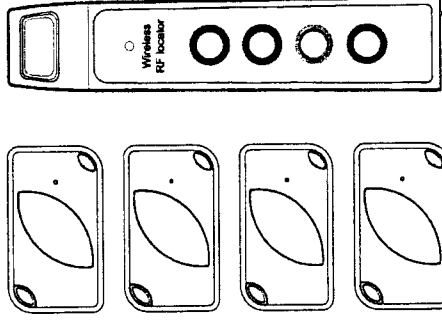 



TABLE OF CONTENTS

1. Features
2. Part Description
3. Operation
4. Technical Specification
5. Battery Installation
6. Important Notes
7. Battery Safety Information

(1) Features :

Simply press one of the colour buttons on the base unit, the matching receiving beeper will beep loudly so that you can find your missing item anywhere in your home.

 (2) Part Description :

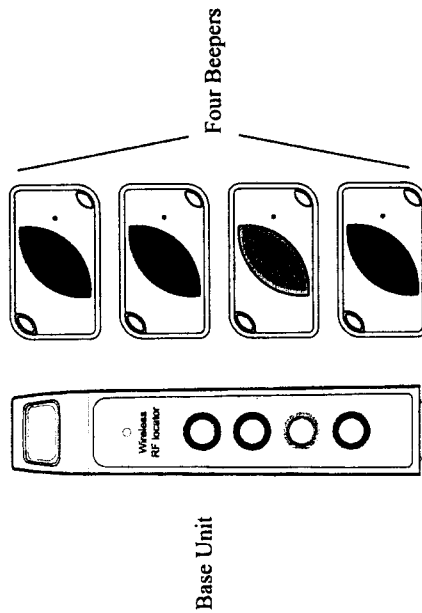

(3) Operation :

Press the button on the base unit that matches the colour of the beepers you are trying to find.

Once the beeper receives the searching signal which is sent from the base, it will generate a beep pattern :


Colour	Beep Pattern
Red	* * *
Blue	** ** *
Yellow	*** ** *
Green	**** **** *

(4) Technical Specification :


- Working Distance : 12 metre (40 feet)
- Operating Temperature : +10 to +40 degree C
- Battery Use : Base Unit : AAA X 2 pcs
Beeper : CR2032
- Battery life : One year in general for base unit and beepers
(battery life depends on frequency of use)

(5) Battery Installation :

 
For the base unit, remove the battery door on back to insert 2 AAA batteries (Rating:3.0V d.c.). Make sure the polarity is correct.

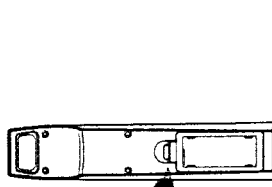

 For the beepers, the first set of batteries has been installed by factory. Simply pull out the insulating plastic tab from battery compartment on underside for all the beepers.

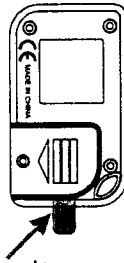


 To replace battery of beeper, remove the screw and the battery cover. Make sure the battery is inserted with positive side up.

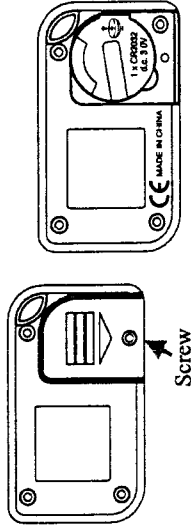

Battery life depends on frequency of use. For both base unit and the beepers, change the batteries if they do not work properly.

 There is a memo card provided for you to record down the names of items which are attached to the beepers. Simply slot in the memo card using the four guide holes at the battery door of the base unit.



(6) Important Notes :

It may be necessary to move around the area and press the button several times before you can locate the object.
Do not use this product in places that are extremely hot, cold or humid.
Please keep all information for future reference.