

## i>clicker Remote FCC

**Changes or modifications not expressly approved by Holtzbrinck Publishers could void the user's authority to operate this equipment.**

**This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.**

**FCC ID: T24-RLR13**

### **Declaration of Conformity:**

**Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:**

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- Consult the dealer or an experienced radio/TV technician for help.**

**The antenna used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter**

## i>clicker Remote IC

**IC: 6495A-RLR13**

## **i>clicker Remote Instructions**

### **POWER**

Solid blue light = Your i>clicker is on.

### **VOTE STATUS**

Green = Vote received and confirmed.

Red flashing = Vote not received or your instructor has not begun polling; please try again.

### **LOW BATTERY**

A flashing red light indicates that less than 10 hours of battery power remain. Press key in slot on back of your remote to release battery cover and replace 3 AAA batteries. Your remote will shut off automatically after 90 minutes.

### **REGISTRATION**

Your unique remote ID is located on the sticker below.

### **CHANGE FREQUENCY**

Press and hold ON/OFF button until power light flashes. Enter 2-key frequency code provided by your instructor.