



MATERIAL IS 0.005 INCH THICK
 CLEAR POLYESTER WITH 3M467
 TYPE ADHESIVE BACKING.
 ALL TEXT IS SECOND
 SURFACE PRINTED.

i>clicker INSTRUCTIONS

VOTE STATUS

✓ = Vote received

⊗ = Vote not received
 CLOSED - polling is not active
 NO BASE - incorrect frequency or too far from base

LOW BATTERY

No bars and flashing battery icon indicate less than 25 hours of battery power.

REGISTRATION

Unique i>clicker ID is located on sticker below and on display during power up.

CHANGE FREQUENCY

Press and hold orange Power button until frequency code flashes. Enter 2-letter frequency code given by instructor.

QUESTION MODE

Press blue Refresh button before voting to enter correct question mode.

IC: 6495A-RLR14
 FCC ID: T24-RLR14

SCALE: 2/1

25.4 mm
 1.00 inch