

# iclicker

## INSTRUCTIONS

### CHANGE FREQUENCY

Press and hold POWER for flashing green light

Enter 2-letter frequency code

### VOTE STATUS

Steady green A-E light = answer received

Flashing red A-E light = answer not received or polling not active

### LOW BATTERY

Flashing red light = < 10 hours battery life

Replace both batteries with new AAA batteries

Alkaline batteries recommended

### REGISTRATION

Use the unique remote ID on the sticker below


### NEED HELP?

Visit [iclicker.com](http://iclicker.com)

MODEL: RLR15

IC: 6495A-RLR15

FCC ID: T24-RLR15

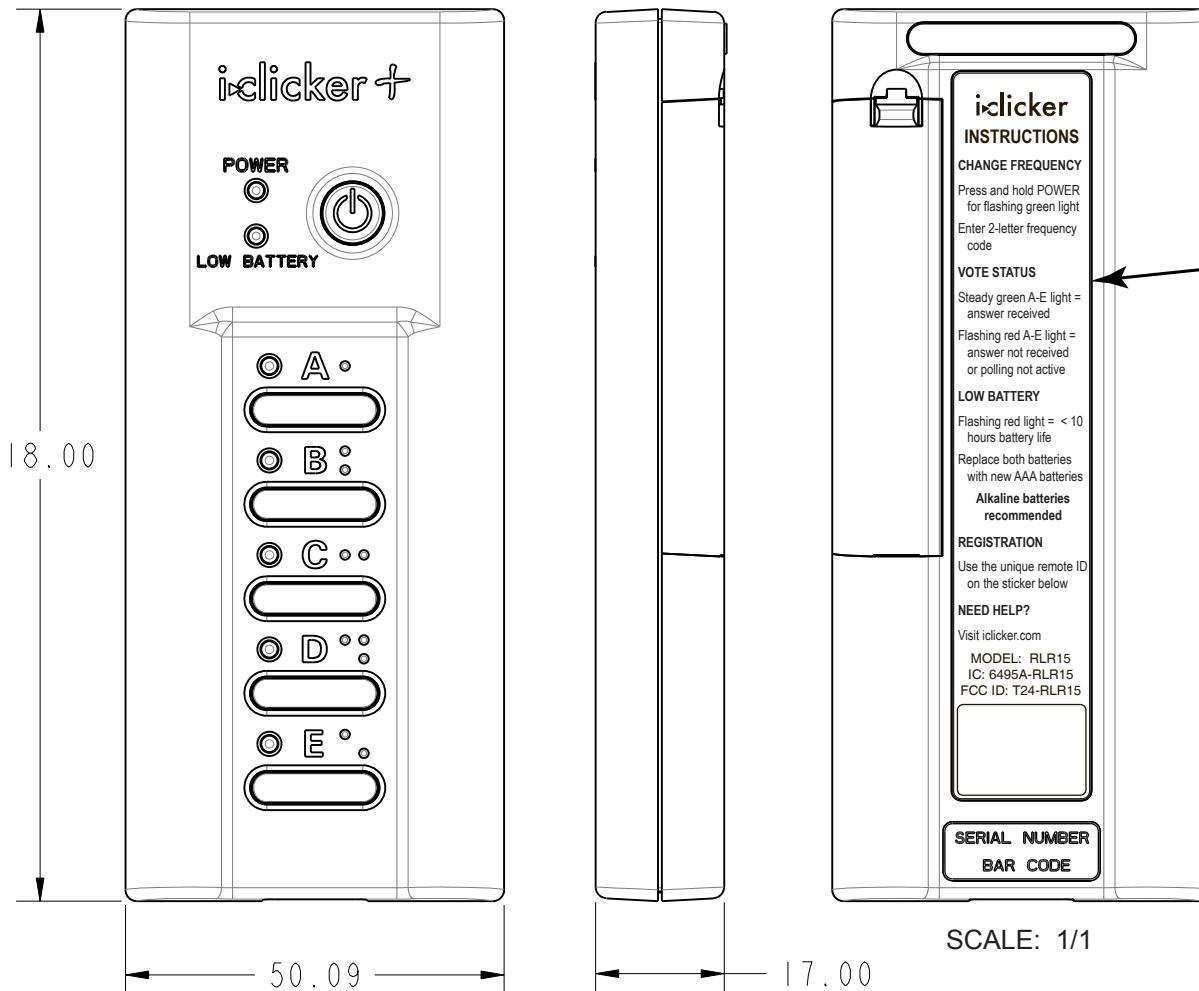

**iclicker+ Student Remote**  
All dimensions are in millimeters

SCALE: 2/1