

i>clicker BASE INSTRUCTIONS

START UP

1. Plug your USB cable into the back of the base in the port labeled "To Computer."
2. Connect the USB cable to your computer's USB port.
3. Each base comes with a flash drive that contains the i>clicker software. Place flash drive in base (or other USB port).
4. On a PC, go to "My Computer," and locate the flash drive and double click on it. On a Macintosh, the flash drive icon will appear on your desk top; double click on the icon.
5. Locate your i>clicker folder and open it. Double-click on the i>clicker.exe icon and click "Start Session."
6. The i>clicker floating bar will appear on the top left corner of your computer screen. It will float above any presentation software.

POLLING YOUR STUDENTS

1. To begin polling, click "Start." To stop polling, click "Stop."
2. Incoming votes are recorded on the LCD display on your base. The LCD displays a timer, the total vote count, and the percentage of answers submitted for A, B, C, D, and E.
3. Click "Display" to see results graph. The results graph will float over any presentation application you are using (including PowerPoint). To hide the results graph, select "Hide."

ASSIGNING CREDIT

1. Double click on the i>grader application.
2. Follow instructions in software to set points and export grades.

For more information on the software (including i>grader and registration options), www.iclicker.com.

PATENT PENDING

i>clicker
Model:TMX13

FCC ID: T24-TMX13
IC: 6495A-TMX13

MADE IN USA

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

SCALE: 1/1

 
25.4 mm



NOTE: OUTLINE BORDERS ARE FOR ALIGNMENT/REGISTRATION ONLY AND SHOULD NOT BE PRINTED.

<div style="text-align: right; font-size: 0.8em;">© ALL RIGHTS RESERVED</div>			PROPRIETARY USE PURSUANT TO COMPANY INSTRUCTIONS
TITLE: BASE LABEL GRAPHICS			SCALE: AS SHOWN
DATE: 5/15/06	SHEET: 1 OF 1	REVISION: 1	ARTMASTER NO. 103M08

2. THIS IS PART OF ENCLOSURE JG-3990A, AVAILABLE FROM POLYCASE INC. PH 888-694-0447.
3. THIS SCREW MAY BE OBTAINED FROM POLYCASE INC. AS THEIR PART "SCREWS-MB", PH 888-694-0447.
4. HEX SPACER, PART NUMBER 90308A110 AVAILABLE FROM MCMaster-CARR SUPPLY CO. PH. 630-834-9427.
5. SCREW, PART NUMBER 95345A027 AVAILABLE FROM MCMaster-CARR SUPPLY CO. PH. 630-834-9427.
6. RUBBER FOOT PART NUMBER 9723K11 AVAILABLE FROM MCMaster-CARR SUPPLY CO. PH. 630-834-9427.
7. LCD PART NUMBER C-51848NFJ-SLW-ADN AVAILABLE FROM OPTREX OR ONE OF THEIR DISTRIBUTORS.
8. ANTENNA PART NUMBER S152AH-915S AVAILABLE FROM NEARSON INC. PH. 703-913-5552
9. HEADER IS SOLDERED TO LCD AT 90 DEGREES. PART NUMBER DW-16-10-F-S-540 AVAILABLE FROM SAMTEC USA, PH. 800-726-8329.
10. USB CABLE KOBICONN PART NUMBER 172-1024 AVAILABLE FROM MOUSER ELECTRONICS, PH 800-346-6873
11. DRIVE PCB MOUNTING SCREWS TO 3.0 IN-LB. DRIVE HOUSING SCREWS TO 4.5 IN-LB.
12. APPLY THREAD LOCKING COMPOUND ON EXTERNAL THREADS OF RF CONNECTOR PRIOR TO SCREWING ON ANTENNA. USE HIGH STRENGTH (RED TYPE), LOCTITE 262, OR APPROVED EQUIVALENT.

1