

# CK3000

## WARNING STATEMENT:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.



Using the CK3000 car audio kit is fast, easy and totally hassle-free. No need for screws, screwdriver or drills or complicated installation procedures. Simply plug the CK3000 into the car's cigarette lighter jack and up you go and enjoy your favorite digital music with iPod nano..

CK3000 gets a wireless full band FM transmitter (88 to 108MHz) with 5 programmable presets and also a power source for charging iPod nano

## Features

- Full band FM transmitter from 88.0 to 108MHz(76-90 MHz for Japan)
- 200 radio channels to be selected(140 channels for Japan)
- 5 Presets can be easily programmed
- Blue backlight display showing the transmitting frequency
- DC out to charge iPod nano
- Digital PLL for fast locking
- Allow DC in from 12V to 24V

## Operations

- a) Program Car FM Presets

- 1) Power up CK3000 by pressing 'POWER' button on the panel
- 2) The display indicate the transmitting frequency
- 3) iPod nano is well placed in the CK3000 and playing music
- 4) Tune the Car FM radio to the same frequency
- 5) You should overhear the MUSIC from your car audio system
- 6) Repeat the above if you want to program all FIVE presets available

b) Program CK3000 transmitting Presets

- 1) Power up CK3000 by pressing 'POWER' button on the panel
- 2) The display indicates the transmitting frequency
- 3) iPod nano is well placed in the CK3000 and playing music
- 4) Turn on the Car FM radio and tuned to NO existing broadcasting station
- 5) Press 'MEM' on the CK3000 to set CK3000 into the programming status
- 6) Tune the transmitting frequency to be same as the one with Car FM radio by  
‘ ’ (0.1MHz/step up) or ‘ v’(0.1MHz/step down)
- 7) You should overhear the MUSIC from your car audio system
- 8) Press 'MEM' on the CK3000 to store the frequency into the Preset. c)  
Power on/off CK3000  
Press 'POWER' button to turn on/off CK3000

d) Change Presets  
Press '^' or 'v' when CK3000 is not in PROGRAMMING state to move along 5 Preset