




Yealink MeetingEye 900 Video Conferencing Endpoint Quick Start Guide V1.0

Package Contents



 MeetingEye 900



(3.0m, 9.84ft)

Ethernet Cable

 


(1.8m, 5.91ft)

HDMI Cable × 2



Power Cord
(220V)



(2.0m, 9.84ft)

Network port to DB9 cable × 2



VCR11
and AAA Battery × 2



Mounting ears × 2



M4 screw × 6



Cable Tie × 5



Quick Start Guide

Optional Accessories



VCH51



(7.5m, 24.60ft)

Ethernet Cable



(0.6m, 1.97ft)

HDMI Cable



(0.6m, 1.97ft)

USB Type-C Cable

 


Quick Start Guide




Interface Protective
Cover


VCH51 Wired Sharing Package



Mspeaker II

 

Wall Mount
Bracket

 

Power Adapter



Silicone
Pad×2



Expansion Screw
and Machine Screw

 


3.5mm
Audio Cable



Quick Start Guide

Mspeaker II Package (Soundbar)



UVC84




(7.5m, 24.60ft)
Ethernet Cable




VCR20



 AAA Battery×2



(48V/0.7A)
Power Adapter

 

Mounting Bracket
and Accessories



VESA Accessory



Cable Tie ×5



Quick Start Guide



(7.5m, 24.60ft)
USB Cable



Velcro×5



Camera Lens
Privacy cover

UVC84 Package (Camera)



VCM38



Telescopic rod

 


Expansion Screw and
Machine Screw




Quick Start Guide

VCM38 Package (Microphone)

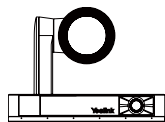

UVC86

 


(7.5m, 24.60ft)

USB Cable



(7.5m, 24.60ft)

 Ethernet Cable



Power Adapter (48V/0.7A)



VCR20



 
AAA Battery × 2



Velcro × 5



Cable Tie × 5




Mounting Bracket and Accessories



Quick Start Guide

 UVC86 Package (Camera)



VCM35



Double-sided adhesive



 
RJ45 Coupler



Quick Start Guide




Cable Tie



CTP18



 (7.5m, 24.60ft)
Ethernet Cable



Mounting Bracket and Accessories



 
Screwdriver



Cable lock box



Velcro



PoE Adapter (Optional)




Quick Start Guide

VCM35 Package (Microphone)

CTP18-STD Package


Installation

 - Put on the Desk



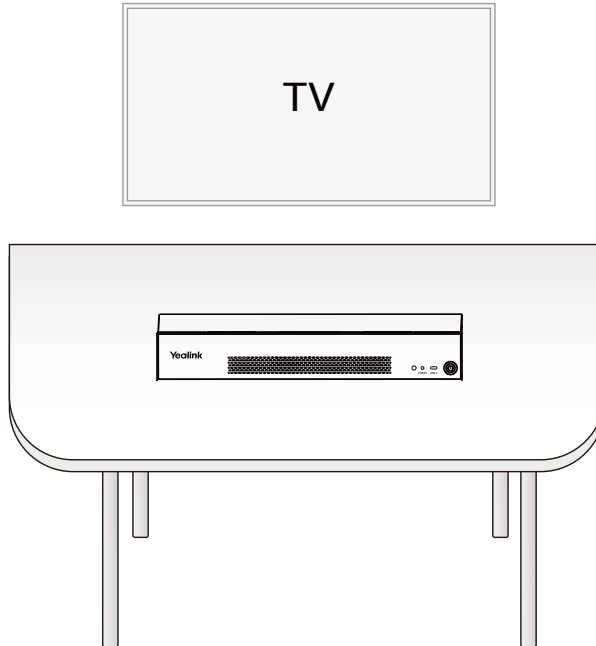


- **Mount in a Rack**

 1. Install the mounting ears to the sides of the MeetingEye 900.

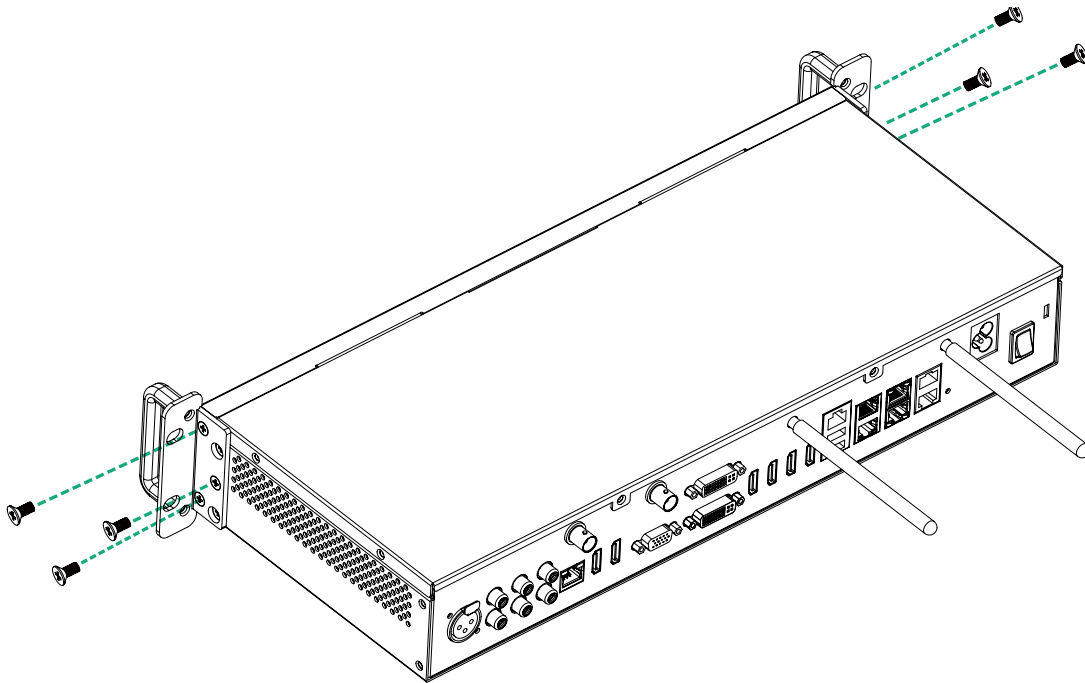

   
2. Install the mounting ears to the sides of the MeetingEye 900.

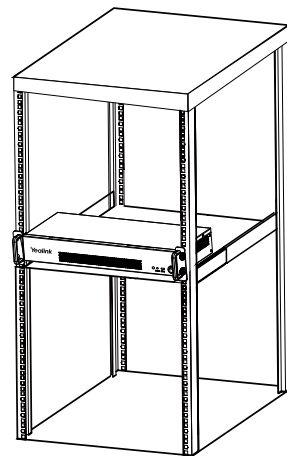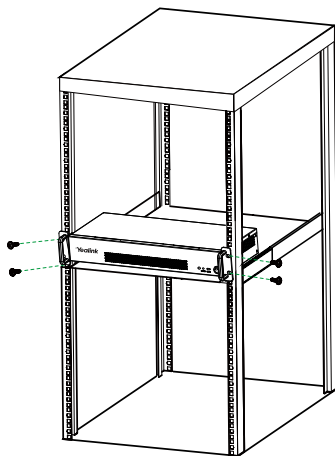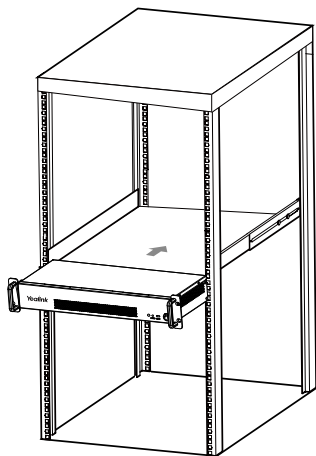

 Package Contents do not include screws.

Connection

 Only one model of microphone is supported at the same time.

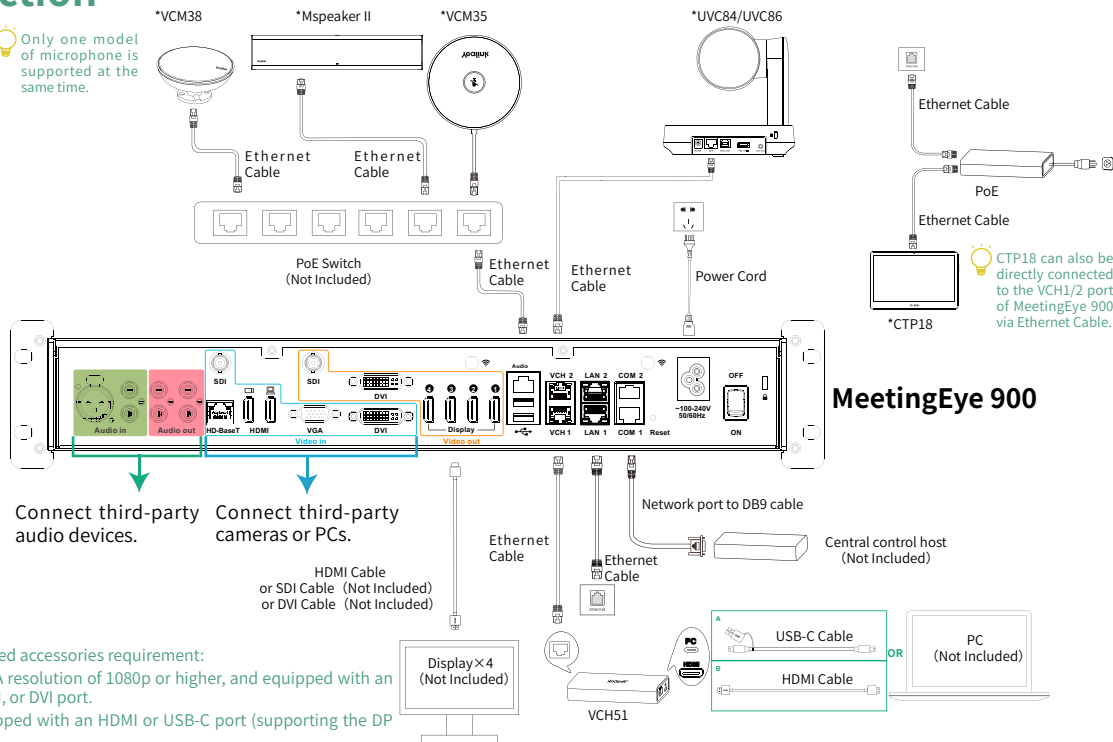

Connect third-party audio devices.

Connect third-party cameras or PCs.

HDMI Cable (Not Included)
or DVI Cable (Not Included)

Display×4 (Not Included)

VCH51

MeetingEye 900

Central control host (Not Included)

PC (Not Included)



Not included accessories requirement:

- Display: A resolution of 1080p or higher, and equipped with an HDMI, SDI, or DVI port.
- PC: Equipped with an HDMI or USB-C port (supporting the DP protocol).

 
- PoE switch: If you use PoE to connect speakers or cameras, you need to use PoE+.

- SDI/DVI Cable: A standard SDI or DVI cable.


- The ones with * are optional accessories.

- Use the Yealink original power cord (220V) to charge the endpoint only. The use of the third-party poweradapter may cause the damage to the endpoint.

Wired Content Sharing - VCH51

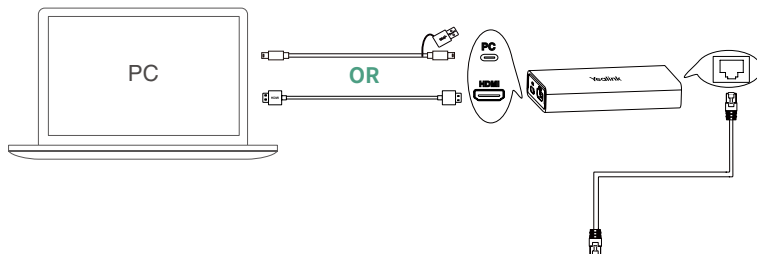


 Connect VCH51 and MeetingEye 900 with an Ethernet Cable, and connect VCH51 and PC with a USB-C Cable or HDMI Cable. Automatically start screen sharing after connection.

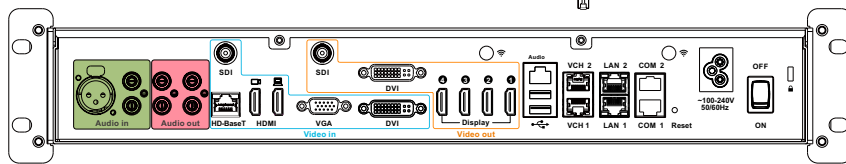

If connecting with a USB-C Cable, the MeetingEye 900 will prompt whether to enter the BYOD mode and choose Cancel to share screen.

 
Wired Content Sharing - HDMI in/VGA in/DVI in

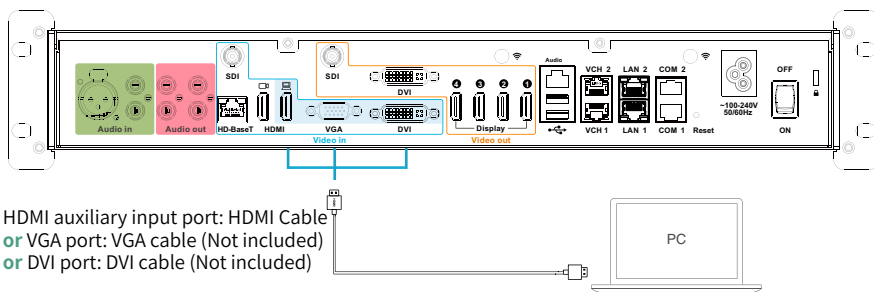

HDMI auxiliary input port: HDMI Cable
 or VGA port: VGA cable (Not included)
 or DVI port: DVI cable (Not included)

To connect your computer/video source to the MeetingEye 900, use an HDMI cable, VGA cable, or DVI cable. Once connected, it will automatically share content.

 Wired USB Device Mode - VCH51

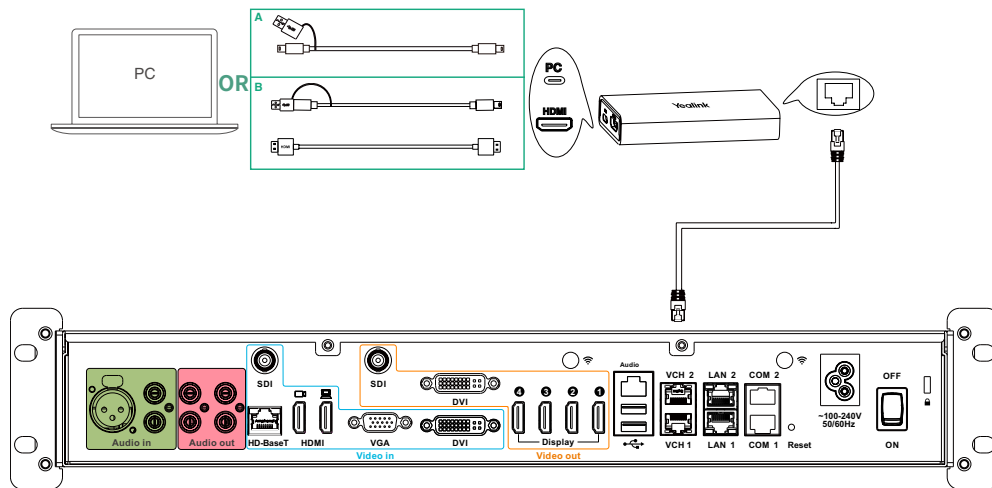

1. Connect VCH51 and MeetingEye 900 with an Ethernet Cable.

2. Do one of the following to connect PC and VCH51:

A Connect VCH51 and the USB-C port of MeetingEye 900 with a USB-C Cable.

 
B Connect the VCH51 and the USB-A port of PC with a USB-C Cable (with USB-A adapter), and connect the VCH51 and PC an HDMI Cable.

3. The MeetingEye 900 will prompt whether to enter the BYOD mode. Click OK to enter USB Device Mode.

💡 If you do not enter Device-USB Mode immediately, you can switch to Device-USB Mode by clicking **More** (sidebar) > **BYOD** during use.

Third-party camera connection

Third-party camera (Not Included)

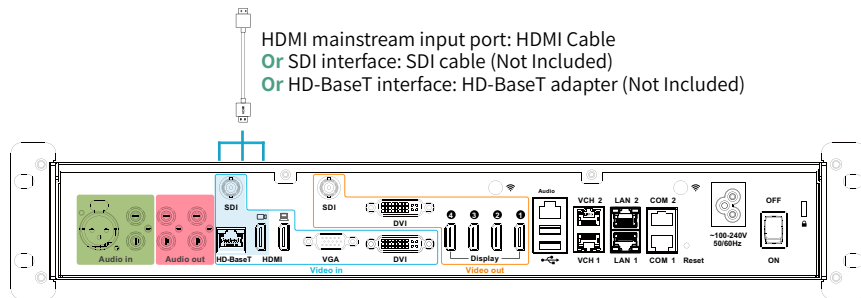

Use HDMI Cable or SDI cable or HD-BaseT adapter to connect the third-party camera and MeetingEye 900.

Third-party audio device connection

Third-party audio input device

(Not Included)

 
Supports audio devices with XLR and RCA interfaces.

Third-party audio output device

(Not Included)

Supports audio devices with RCA interface.

XLR Port × 1
RC in port × 1 set
RC out port × 2 sets

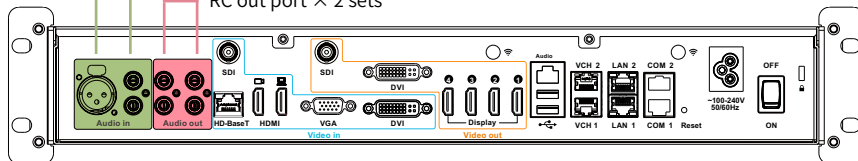

Audio in: Use XLR cable or RCA cable to connect the third-party audio input device and MeetingEye 900.

Audio out: Use RCA cables to connect third-party audio output devices and MeetingEye 900.

Operating Ambient Temperatures

- Operating temperature: +32 to 113°F (0 to 45°C)
- Relative humidity: 5% to 90%, noncondensing
- Storage temperature: -22 to +158°F (-30 to +70°C)

Warranty

Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment. We are not liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product; we are not liable for financial damages, lost profits, claims from third parties, etc., arising from the use of this product.

Explanation of the symbols

DC symbol

— is the DC voltage symbol.

WEEE Warning symbol



To avoid the potential effects on the environment and human health as a result of the presence of hazardous

substances in electrical and electronic equipment, and users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Restriction of Hazardous Substances Directive (RoHS)

This device complies with the requirements of the EU RoHS Directive. Statements of compliance can be obtained by contacting support@yealink.com.

Safety Instructions

Save these instructions. Read these safety instructions before use!

General Requirements

- Before you install and use the device, read the safety instructions carefully and observe the situation during operation.
- During the process of storage, transportation, and operation, please always keep the device dry and clean, avoid collision and crash.
- Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center for repair.
- Please refer to the relevant laws and statutes while using the device. Legal rights of others should be respected as well.

Environmental Requirements

- Do not cover ventilation openings, this equipment is not intended to be used on soft support.
- The marking information is located at the exterior of the bottom
- Place the device at a well-ventilated place. Do not expose the device under direct sunlight.
- Keep the device dry and free of dusts.
- Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber-made materials.
- Keep the device away from any heat source or bare fire, such as a candle or an electric heater.

Operating Requirements

- Do not let a child operate the device without guidance.
- Do not let a child play with the device or any accessory in case of accidental swallowing.
- Please use the accessories provided or authorized by the manufacturer only.
- The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided surge protection power socket only.
- Before plugging or unplugging any cable, make sure that your hands are completely dry.
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet basement or near a swimming pool.
- During a thunderstorm, stop using the device and disconnect it from the power supply. Unplug the power plug and the Asymmetric Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avoid lightning strike.
- If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug.
- When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device from the power supply, and unplug the power plug immediately.
- Contact the specified maintenance center for repair.
- Do not insert any object into equipment slots that is not part of the product or auxiliary product.
- Before connecting a cable, connect the grounding cable of the device first. Do not disconnect the grounding cable until you disconnect all other cables.

Cleaning Requirements

- Use a piece of soft, dry and anti-static cloth to clean the device.

Troubleshooting

The usage environment is out of operating temperature range.

1. Use in the operating temperature range.

The cable between the unit and the Yealink device is connected incorrectly.

1. Connect the cable correctly.

Some dust, etc., may be in the port.

1. Clean the port.

Contact your dealer or authorized service facility for any further questions.

FCC CAUTION:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED WARNING:

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR de l'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Les communications effectuées au moyen de cet appareil ne sont pas nécessairement protégées des indiscretions.

The equipment complies with ISCED radiation exposure limits set forth for an uncontrolled environment. The equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Déclaration d'exposition aux radiations: Cet équipement est conforme aux limites d'exposition aux rayonnements ISCED Canada établies pour environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20cm de distance entre la source de rayonnement et votre corps.

The device for operation in the band 5 150-5 350 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Les dispositifs fonctionnant dans la bande 5 150-5 350 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

EU Regulatory Information

Support Frequency Bands and Power:

WLAN 2.4 GHz < 20 dBm;

WLAN 5150-5250 MHz < 23 dBm;

WLAN 5250-5350 MHz < 20 dBm;

WLAN 5470-5725 MHz < 27 dBm;

WLAN 5745-5825 MHz < 14 dBm;



BE	BG	CZ	DK	DE	EE	IE	EL
ES	FR	HR	IT	CY	LV	LT	LU
HU	MT	NL	AT	PL	PT	RO	SI
SK	FI	SE	NO	IS	LI	CH	TR

In all EU member states, operation of 5150-5350 MHz is restricted to indoor use only.

Contact Information

YEALINK NETWORK TECHNOLOGY CO., LTD.

No.666 Hu'an Rd, Huli District, Xiamen City, Fujian, P.R. China

YEALINK (EUROPE) NETWORK TECHNOLOGY B.V.

Sir Winston Churchillinn 299 k, 2288DC Rijswijk

YEALINK (USA) NETWORK TECHNOLOGY CO., LTD.

999 Peachtree Street Suite 2300, Fulton, Atlanta, GA, 30309, USA

Made in China