

8. DISCLAIMER

The manufacturer, distributor and retailer will not take responsibility for any loss or liability resulting from the use of this product. When the Mini Reminder is normally used, it will reduce the possibility of loss of protected objects. However, the Mini Reminder is no substitute for strict attention to children, pets and objects of value, but is meant as an added tool to limit the possibility of loss either by theft, kidnapping or negligence.

READ FIRST BEFORE USE

1. Turn the Transmitter unit on first before turning the Receiver to VS.
2. Reshape the antenna into an oval loop but do not cut it off.

Mini Reminder Troubleshooting Guide

Symptom	Possible Causes	Remedy
1) Receiver activates continuously or occasionally within the monitoring range.	* Transmitter battery is low. * Transmitter is off, or Receiver failed code learning * Transmitter antenna is broken. * Antenna is twisted. * Antenna is loose.	* Change the battery. (See manual) * Turn on transmitter first before turning on Receiver. * Replace antenna. (See manual) * Re-shape antenna. (See manual) * Re-tighten antenna. (See Manual)
2) Receiver activates when the Transmitter is very close to some RF wireless devices. The monitoring range may vary.	* Transmitter and Receiver may catch some RF interference.	* Set the Receiver distance switch to L. * Slightly move or rotate the protected object if possible.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID No.: T2EUT-MRR05-GENIS

MR INSTRUCTION MANUAL

Model #: MRR05

1. Contents

- * One Receiver unit
- * One Transmitter unit
- * One nylon necklace
- * One key-hook
- * One spare Transmitter antenna
- * One wrist Velcro™ band (Long)
- * One extra safety Velcro™ band (Short)
- * Three bottom Velcro™ mounts for objects
- * Instruction manual



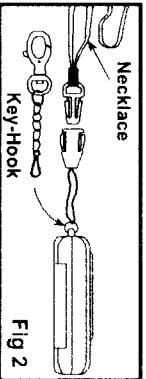


Fig 4

Back Case

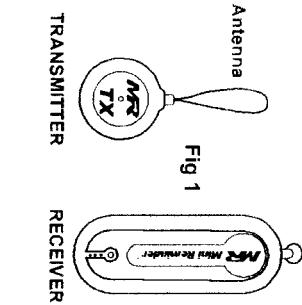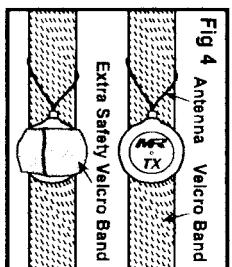

3. Testing
Transmitter - Turn the Transmitter power switch to **ON** position. The LED indicator should flash continuously.

Notes : 1) Do not cut off the antenna. The broken antenna can be removed and replaced by spare one (included). The antenna must be in good condition to normally operate the Mini Reminder.

A Product of
Genis International Corporation
Patent Pending
Web Page : www.minireminderusa.com

China

(1)

(4)