

Important information to be read before use

- Use only rechargeable batteries of the type described for your cordless mouse. Never use conventional disposable batteries as they may explode if charged.
- Wireless devices may be affected by interference if there are other strong transmitters close by, e.g. Mobile phones, cordless phones or another cordless mouse, keep the other transmitters away from your cordless mouse.
- The rechargeable batteries must be charged for at least 15 hours before using them for the life of your rechargeable batteries.
- Do not place the mouse or receiver on metal surfaces. Metal may absorb or reflect the radio waves.
- There should also be a gap of at least 20cm between the receiver and the computer/monitor or any other electronic devices. Problem may occur if the -se distances are not maintained.
- The optical mouse may not function properly on reflecting surfaces (glass, mirrors or shiny mouse pads).
- Some computer interrupts the power supply to the USB ports when they go into sleep mode. Make sure that the computer's power-saving function is switched off during the charging phase.

Contents of package

- Cordless optical mouse with receiver
- 2x rechargeable battery NiMh A.A 1.2 V 600mAh

System requirements

- Windows 98, 2000, ME, XP
- Processor 486 or higher
- USB port or PS/2 port

Insert rechargeable battery into the mouse

1. Open the battery cover on top of the mouse as shown below.
2. Insert the rechargeable NiMH A.A batteries. Follow the direction sign in battery compartment.
3. Refit the cover of the battery compartment.



Troubleshooting

Mouse pointer is jerky

- Is the mouse pad suitable for an optical mouse?
- Try another working surface or mouse pad.

- Reception problem? Interference?
- Try re-connecting. Make sure the receiver is away from other electronic device.

- Is the receiver properly connected to the computer?
- Make sure that the connection is properly done.

Are the batteries run down?

Recharge the batteries

- Are the batteries incorrectly inserted?

- Make sure the batteries are inserted following the direction sign on the battery compartment.

- Is the wireless connection properly done?
- Try re-connecting.



Optical Wireless Mouse

Charge the mouse

1. Plug the USB plug of the receiver into a port on your computer. The green LED inside the Connect button will light up.
2. Place the mouse upright onto the receiver cradle. Move the top the mouse lightly to ensure the mouse is being locked in firmly.
3. The red LED will be lighted during charging and when the batteries in the mouse are fully charged, the red light goes off and return to green light.



Establish wireless contact between the mouse and receiver

1. Press the Connect button on the receiver. The green LED flashes slowly.
2. Now press the Connect button on the base of the mouse.



The green LED on the receiver now blinks faster. The connection between the receiver and the mouse is now established.

Your mouse has 256 IDs to ensure the receiver can only receive signals from your mouse. If you have problems with reception, try using a different radio frequency by re-establishing the wireless contact stated above.

You can start to use your cordless mouse now. Whenever there is mouse movement, the Connect button green LED on the receiver will blink accordingly. The data is being received by the receiver.

Do not press the connect button on the receiver or the mouse as this will interrupt the connection between the mouse and the receiver. You need to re-establish the connection again as described above if the connection is interrupted.

Switch cordless mouse on and off

The mouse has a power saving feature. When the mouse is placed on the desk and not moving for more than 8 minutes, it will go into sleep mode. You need to press either the left or right button of the mouse or the roller to awake the mouse.

If you wish to turn off the mouse power completely, just press the connect button at the base of the mouse for more than 3 seconds to completely switch off the mouse. You need to press the same button to await the mouse in this case. You may need to re-establish the connection between mouse and the receiver in this case.

***** Caution *****

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes of modifications not expressly approved by the party responsible for compliance could void the user 's authority to operate the equipment.

FCC statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.