

## Manual

1. RAPID START THERMAL PROTECTION CLASS P.
2. INSTALLING ACCORDANCE WITH NATIONAL CODES.
3. CAUTION:HAZARDOUS VOLTAGE.
4. DISCONNECT LINE VOLTAGE BEFORE INSTALLING OR REPLACING.



## NOTE

This device complies with part 18 of the FCC Rules.

- 1, Before commissioning this oven please read this instruction manual and keep it carefully.
  - 2, There must be more than 30cm high space necessary above the top surface of oven.
  - 3, Do not repair the oven yourself, please consult an authorized expert.
  - 4, The contents of feeding bottles and baby food jars are to be stirred or shaken and the temperature is to be checked before consumption, in order to avoid burns.
  - 5, Check the oven and the cable regularly for damage. If there is any kind of damage, the oven should not be used.
- Do not attempt to operate this oven with the door open since open- door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
  - Carefully clean door seals and sealing surfaces.
  - Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the : (1) door(bent). (2) hinges and latches( broken or loosened). (3) door seals and sealing surfaces.
  - Utensils should be checked to ensure that they are suitable for use in microwave ovens.
  - When heating food in plastic or paper containers, check the oven frequently due to the possibility of ignition.
  - Microwave heating of beverages can result in delayed eruptive boiling, therefore care has to be taken when handling the container.
  - If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
  - Egg in their shell and whole hard- boiled eggs shall not be heated in microwave ovens since they may explode.
  - If the door or door seals are damaged. The oven must not be operated until it has been repaired by a trained person.
  - Liquids or other foods must not be heated in sealed containers since they are liable to explode.

## Warning:

- 1, It is hazardous for anyone other than a trained person to carry out any service or repair operation, which involves the removal of any cover which gives protection against exposure to microwave energy.
- 2, Only allow children to use the oven without supervision when adequate instructions have been given so that the children is able to use the oven in a safe way and understands the hazards of improper use.
- 3, If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- 4, This product will make disturbance in AV product, if any disturbance is occurred, use different electrical source jack to supply electricity or use low power or away from them.

Note: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT .SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.