



Title FM Wireless transmitter

Item No. HN-1301

Function. Be able to transfer sound sources, like CD, MD, MP3 to FM receiver of motor vehicle through the transmitter.

Operating Instruction :

1. Open the bottom of the transmitter and insert into a “AAA” size battery (Please note the polarity symbols).
2. Slide the power switch to the ON position on the right side, the LCD screen will activate.
3. Pull up the audio plug on the top of the rear of the transmitter, and connect the plug to output terminals of sound sources like CD, MD, and MP3, etc.
4. Choose the FM receiver of the automobile, adjust its frequency to the transmitter, or turn the TUNE knob on the right of the transmitter, (turn”+ ” to increase or turn” - ” to decrease the frequency), and then the FM receiver will automatically scan and you may enjoy the sound sources.
5. Slide the power switch to the OFF position on the right side; the LCD screen will be disabled.

Product Parameters:

- 1 Power Voltage: 1.5V
- 2 Frequency Range: 88.1MHZ - 107.9MHZ
- 3 Transmit Power: 16mW
- 4 Stereo Cross talk: -60dB
- 6 Optimum Input Signal: 0.5mv
- 7 Signal to Noise Ratio: 68dB
- 8 Frequency Drift: 0.05MHZ
- 9 Consumption Current: 59mA±3mA
- 10 Dimension: 58mm×48mm×15mm

Notice : The changes or modifications not expressly approved by the party responsible for compliance could void the user' s authority to operate the equipment.

IMPORTANT NOTE: To comply with the FCC RF exposure compliance equipments, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user' s authority to operate the device.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.
OPERATIONS IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,
INCLUDING INTERFERENCE THAT MAY CAUSE UNDESRIED
OPERATION