


Notes:

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. To comply with the FCC RF exposure compliance requirements, this device and its antenna must not be co-located or operating to conjunction with any other antenna or transmitter.



INSTRUCTION MANUAL



 Bluetooth V1.2 compliant

IB-BT900D-CAR-STD

Instruction Manual

Introduction

BT900-D is a Bluetooth device in connection with car radio handsfree kits

Bluetooth Wireless Technology

BT900-D is compatible for Bluetooth enabled mobile phones with Handsfree and Headset profile.

Profile is a set of Bluetooth commands which BT900-D uses to control the mobile phones.

The Bluetooth technology enable wireless connection between BT900-D and Bluetooth enabled phones within 10 meters.

BT900-D is compliant with and adopts the Bluetooth Specification 1.2.

Functionalities

- LCD display
- Automatic mute the car radio
- Displays Caller ID (telephone number) on the LCD screen
- Voice out caller ID at car speaker (You could preset without voice)
- 10 Received Calls memory
- 10 Missed Calls memory

Key functions





Confirm / Ok

- Pick up incoming calls.
- Call waiting
- Read out last 10 missed & 10 received calls
- Confirm selected option



Volume Up / Forward

- Volume up
- Selection forward



Bluetooth Link

- Reconnect OR disconnect latest paired phone.
- To mute the microphone during conversation.
- Entry setup manual.



Reject calls / function Cancel

- Hang-up call.
- Reject a call.
- Exit Manual



Volume Down / Backward

- Volume down.
- Selection backward.



Call function

- Activate voice dialing
- Transfer a call between BT900-D and phone.

Pairing BT900-D with Bluetooth enabled mobile phone

Step 1-- Activates phone Bluetooth connection. Pls refer phone user guide for the bluetooth connection.

Step 2 -- Set the phone to SEARCH for Bluetooth devices as instruct in the user guide of the phone.

Step 3-- Once SEARCH finish, select **"CAR08a"** from the list.

Step 4 --Enter the generic pass code **"1234"** to associate ("Pair") and connect the BT900-D with phone.

Step 5--Once you have entered the pass code, the phone is default for the BT900-D

BT900-D display show " Paired" and then "HandsFree Profile" or "Headset Profile".

LCD display show the name of paired phone name (for example "phone Name;

T610"). Paired success.

Remarks : BT900-D can be paired for 4 users at the same time.

Adding a 5th user will remove last paired user (ie.the 4th user) BT900-D will serve the last paired.

Disconnect & Reconnection

You could disconnect your paired phone with BT900-D

Method 1--Press  button once. OR:

Method 2--Switch off BT900-C, OR:


Method 3--In the phone's Bluetooth menu. OR :

Method 4 --Move the phone more than 10 meters away from the BT900-D.

Note :



You do not need to delete the pairing with the BT900-D to disconnect it. When you reconnect them, you do not need to re-enter its pass code.


To reconnect BT900-D with paired phone.

-- Press BT900-D  button once. (disconnected previously) OR:



-- From phone, in the phone's Bluetooth menu.

Answer, Reject and End a call

When you receive a call, car radio is auto muted and you hear a ringing tone through car speakers. To answer the incoming call, Press  button OR phone's answer key. If you don't want to answer incoming call, briefly press  to reject it.

Press the  button to hang up, you can also end the call using phone's button .

Volume up and down

-- Press  to increase volume and  to decrease volume.

Muting microphone during conversation

During conversation, Press **[M]** to mute the microphone (the display shows “ Mute On”), i.e other party could not hear you. Press **[M]** again to re-activate the microphone on (the display show “Mute off”). The microphone is automatic switch on once call is finished.

Call waiting

During conversation with 1st call, a new 2nd incoming calls in,

-- if you don't want to pick up the new incoming call (2nd), just keep on your current conversation

-- press **[2]** to activate 2nd call, keep current conversation call waiting.

-- press **[2]** again to re-activate the 1st call and hold 2nd call waiting.

-- Press **[3]** hang-up current conversation call and re-activate remain call.

-- Press **[3]** again to hang up last conversation call.

Call transfer (Switching the call between phone and Car kit)

Press **[C]** once to transfer the call from car kit to mobile phone.

Press **[C]** once more to transfer calls from mobile phone to car kits.

Automatic answer





If your phone is preset with Automatic Answer, the phone automatically answer the incoming call after one ring tone. You could hear the caller voice at car radio speaker.

Voice dialing


Press and hold **[C]** 2 seconds until you hear a tone that indicates that you can say the desired name (“voice tag”). Say the voice tag. The phone plays the voice tag and dials the related phone number.



Note that this function is only available if the phone supports voice dialing.


Making a call from the last 10 received and last 10 missed calls

Press and hold  2 seconds, entry history of calls from Car kit memory, press  OR  to change the selection and press  to confirm a selected number for making an outgoing call.

Set up Menu

Press and hold  to enter the setup menu.

 OR  : forward / backward

 Confirm the selection

 Exit



Menu setup flowchart

