

## Notice

1. Do turn off power switch after running it, if not, electric energy will be exhausted bit and working time would be shortened.

## Frequency & Location

1. If there are cars of same frequency running around, the car may be uncontrolled.
2. And, if interfered by other electric waves, the car may also be uncontrollable. Try changing the playing location or run it at later time.
3. Rough cement ground is suitable for the car running. Running on water milled cement ground or on even smoother ground may cause malfunctions such as off-course running, tossing at 180° or spinning at the same place for there is too little friction between the wheel and the ground surface.
4. The playfield should be large enough. It is not suggested to run inside family house.

## Installation and Replacement of Battery in Controller

1. Use a screwdriver to unscrew the screws of the cover on the back of the remote controller. Press the button and take down the cover.
2. Put 2x1.5V AA cell into it.
3. If the buttons don't work effectively or the indicating light becomes dim, renew the battery.

## Installation and Replacement of Batteries in Car Body

1. Make sure the power switch at the rear of the car is at OFF position, then unscrew the battery cover and slide it to one side to open it.
2. After loading 4x1.5AA batteries, shut the cover and fix the screw.
3. When the car slows down, change the batteries.

## NOTE:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications, could void the User's authority to operate the equipment.