

## Tune up Procedure

- 1 Please confirm that the power meter, Minimum Spectrum Analyzer and Six 7<sup>th</sup> battery are prepared.
- 2 Install the batteries into battery box of the transmitter, Install the antenna into the transmitter
- 3 Turn on the transmitter's power
- 4 The MCU output a PWM Signal to the RF module.
- 5 The PWM signal in the RF module through the local oscillator, the driver, the power amplifier, the band filter, the antenna, and then carryout.
- 6 27.195MHZ signal transmitter through the antenna.