

netis 150Mbps Wireless-N Outdoor Access Point Quick Installation Guide

WF-2301

**V1.1.01
2012-02-08**

Package Contents

The following items should be found in your package

- 150Mbps Wireless-N Outdoor AP
- PoE Adapter
- Quick Installation Guide

Please make sure that the package contains the above items, if any of the listed items are damaged or missing, please contact with your distributor.

Before You Begin

Minimum Requirements:

- Broadband Internet access service (DSL / Cable / Ethernet)
- Internet Explorer 5.0 or higher for Web configuration
- 802.11n, 802.11g or 802.11b compliant wireless adapters (for wireless connection)
- Windows 98/2000/XP/2003/Vista or higher operating system

1. Hardware Installation Procedures

The procedures to install the Wireless-N AP please refer to Figure 1-1

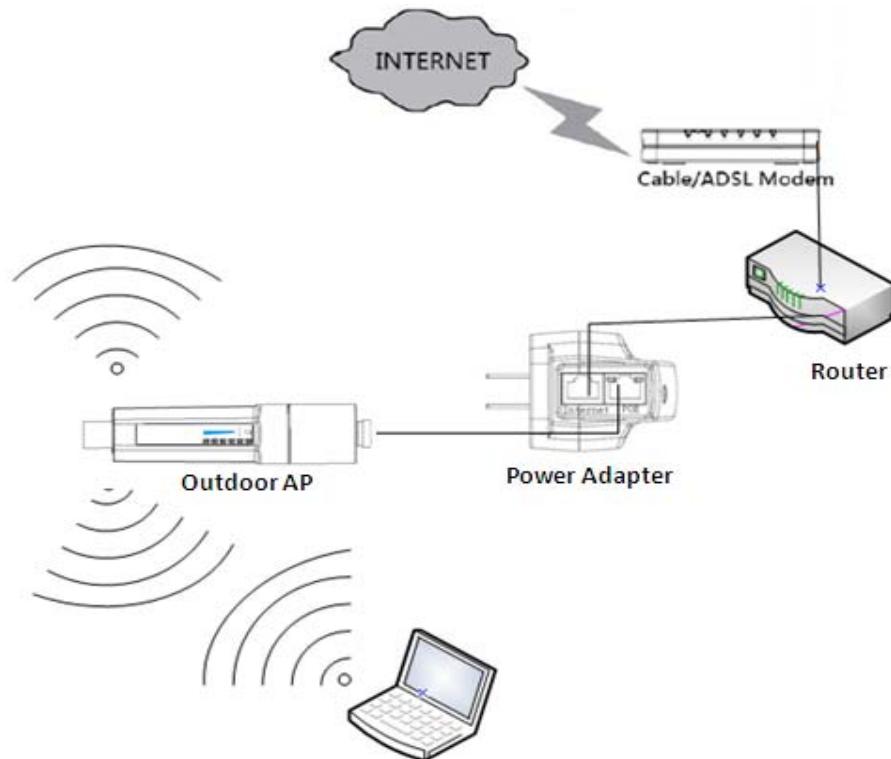


Figure 1-1

- Step 1 connecting Cable/ADSL Modem to the WAN port.

Attach one end of an Ethernet cable to your modem's Ethernet port, and the other end to one of the WAN ports of your router.

- Step 2 connecting the power adapter.

Attach one end of an Ethernet cable to the Internet access router LAN port, the other end to the Internet port of power adapter. Then plug the Power Adapter into an AC outlet.

- Step 3 connecting the 150Mbps outdoor adapter.

Connect another Ethernet cable from your POE port of the power adapter to the LAN port of 150Mbps outdoor AP.

- Step 4 Power on the following devices in this order:

Cable/ADSL modem, Router.

2. LED Indicators

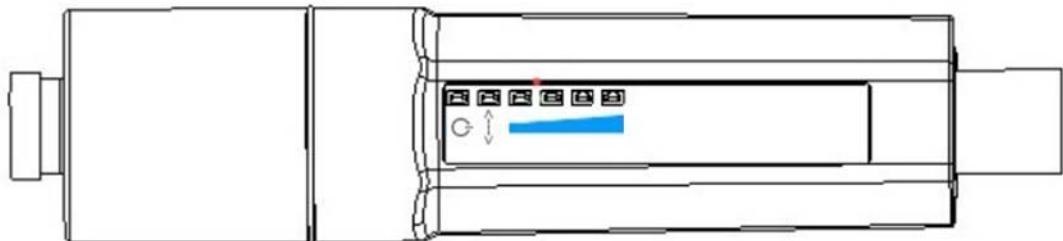


Figure 2-1

| LED | Function | |
|-----|----------|---|
| | ON | Power on |
| | Off | Power off |
| | On | Connection normal |
| | Off | Abnormal |
| | Flashing | Data transmitting |
| | On | Power supply normal |
| | Off | Abnormal |
| | Flashing | 4 light signal strength above 75% 3 light signal strength medium Less than 2 light signal strength is weak. |
| | Off | No signal |

3. Configure computer

3.1. Windows 98/Me

1. Go to Start → Settings → Control Panel.
2. Find and double-click the Network icon. The Network dialog box appears.
3. Click the Configuration label and ensure that you have network card.
4. Select TCP/IP. If TCP/IP appears more than once, please select the item that has an arrow “→” pointing to the network card installed on your computer. DO NOT choose the instance of TCP/IP with the words “Dial Up Adapter” beside it.
5. Click Properties. The TCP/IP Properties dialog box appears.
6. Ensure the Obtain IP Address Automatically is checked.
7. From the WINS Configuration dialog box, Ensure that Disable WINS Resolution is checked.
8. From the Gateway dialog box, remove all entries from the Installed gateways by selecting them and clicking Remove.
9. From the DNS Configuration dialog box, remove all entries from the DNS Server Search Order box by selecting them and clicking Remove. Remove all entries from the Domain Suffix Search Order box by selecting them and clicking Remove. Click Disable DNS.
10. Click OK, back to Network Configuration dialog box
11. Click OK, if prompted to restart, click YES.

3.2. Windows 2000

Please follow the steps below to setup your computer:

1. Go to Start → Settings → Control Panel



Figure 3-1

2. Double click the icon Network and Dial-up Connections
3. Highlight the icon Local Area Connection, right click your mouse, and click Properties

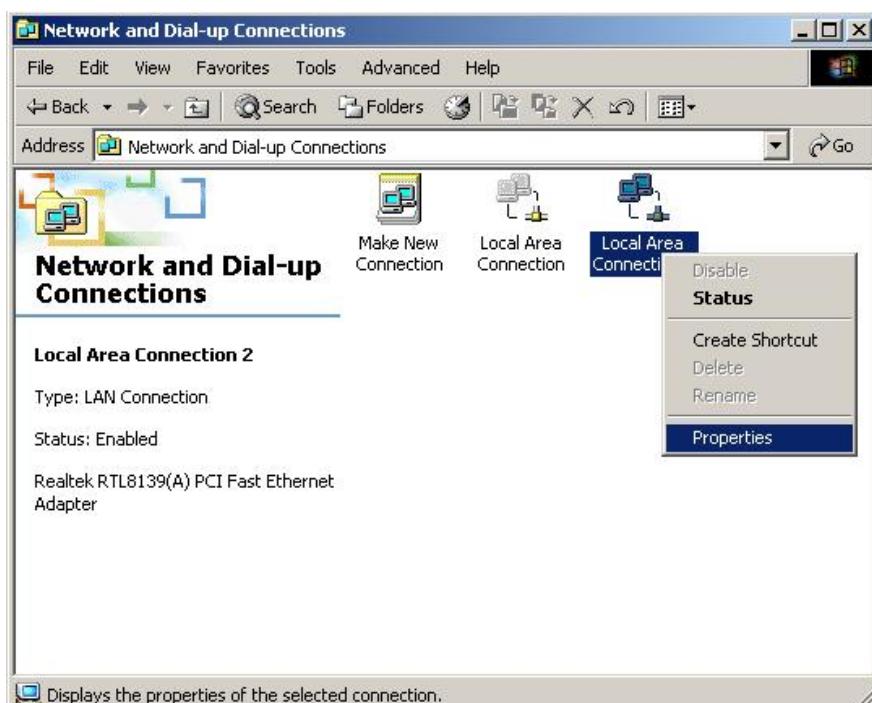


Figure 3-2

4. Highlight Internet Protocol (TCP/IP), and then press Properties button



Figure 3-3

5. Choose Obtain an IP address automatically and Obtain DNS server address automatically, and then press OK to close the Internet Protocol (TCP/IP) Properties window

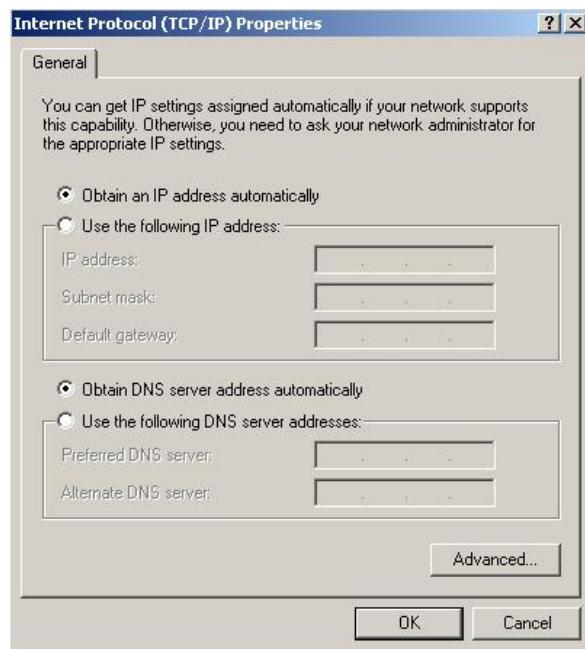


Figure 3-4

6. Press OK to close the Local Area Connection Properties window

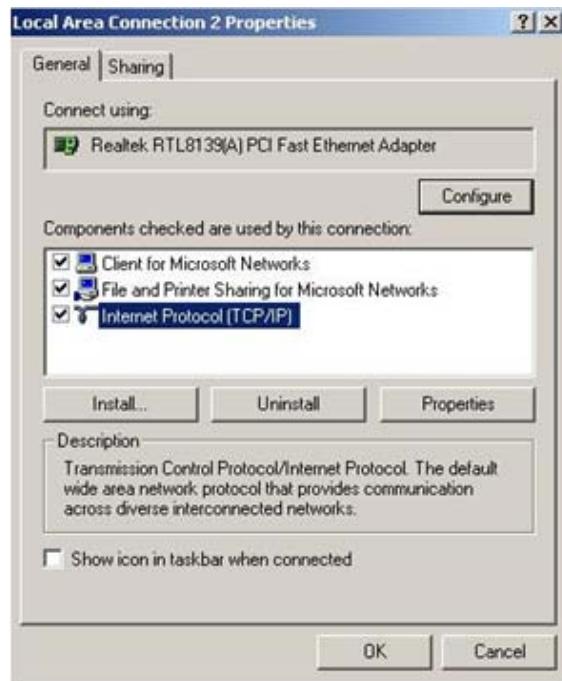


Figure 3-5

3.3. Windows XP

Please follow the steps below to setup your computer:

1. Go to Start → Settings → Control Panel
2. Click Network and Internet Connections



Figure 3-6

3. Click Network Connections



Figure 3-7

4. Highlight the icon Local Area Connection, right click your mouse, and click Properties

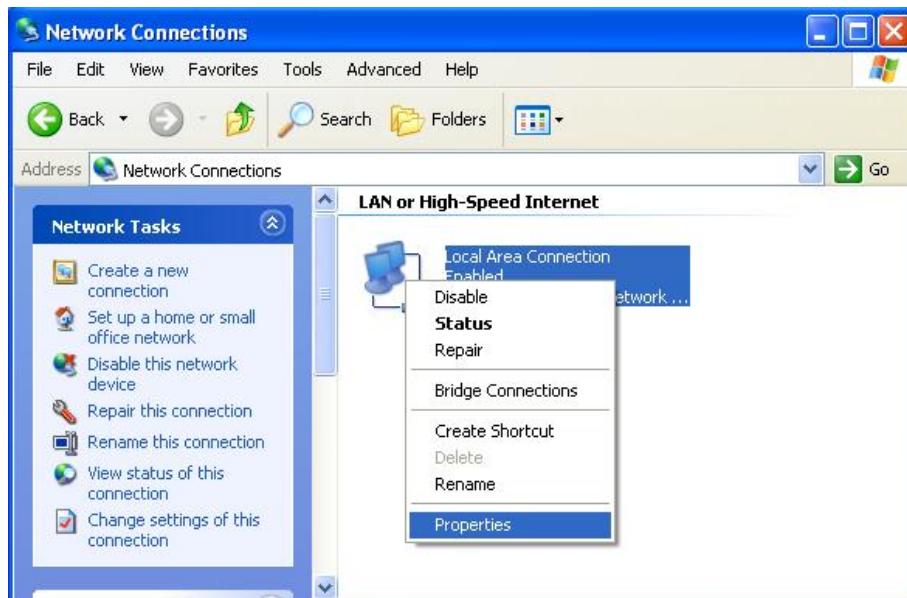


Figure 3-8

5. Highlight Internet Protocol (TCP/IP), and then press Properties button



Figure 3-9

6. Choose Obtain an IP address automatically and Obtain DNS server address automatically, and then press OK to close the Internet Protocol (TCP/IP) Properties window

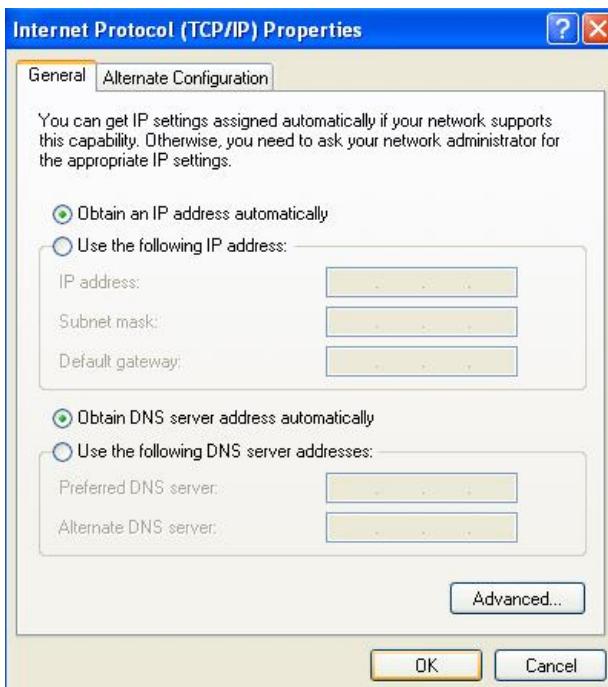


Figure 3-10

7. Press OK to close the Local Area Connection Properties window



Figure 3-11

3.4. Windows Vista

Please follow the steps below to setup your computer:

1. Go to Start → Settings → Control Panel
2. Click Network and Sharing Center

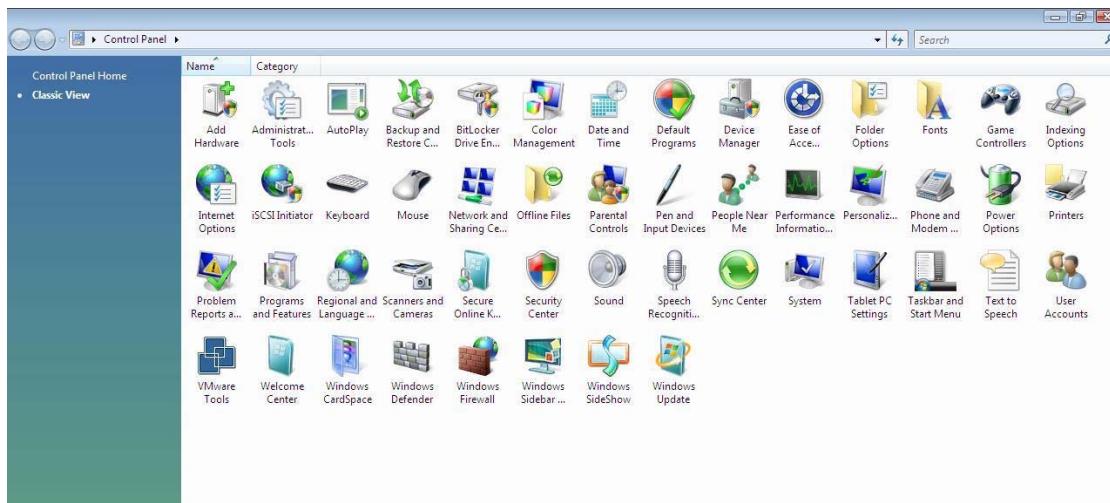


Figure 3-12

3. Click Manage Network Connections

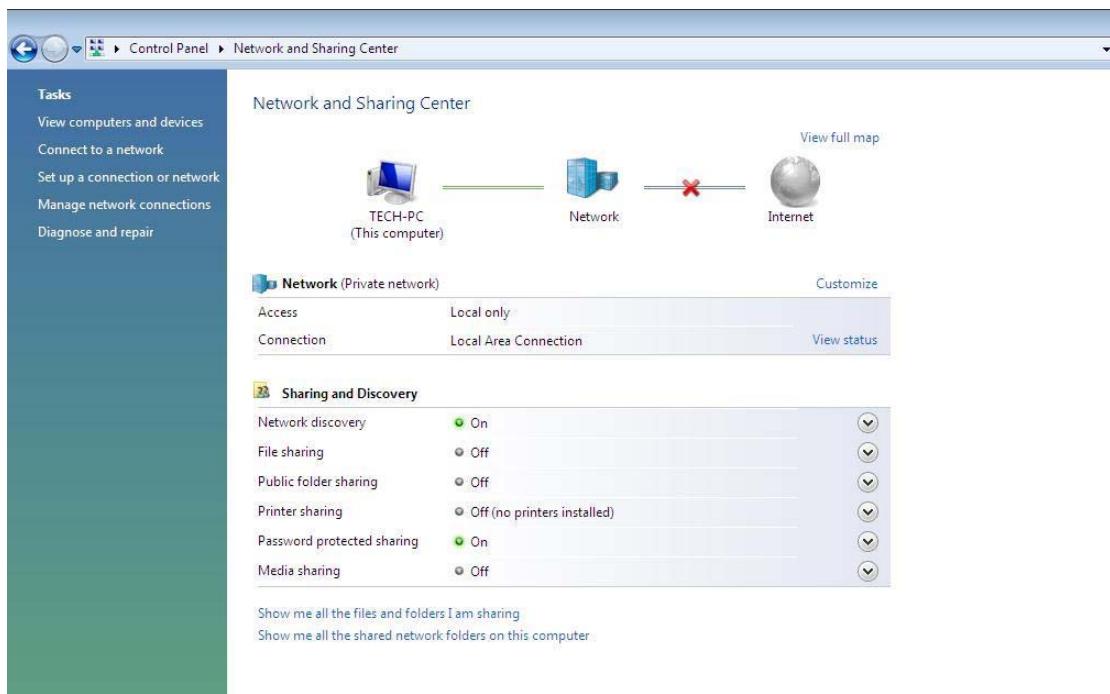


Figure 3-13

4. Highlight the icon Local Area Connection, right click your mouse, and click Properties

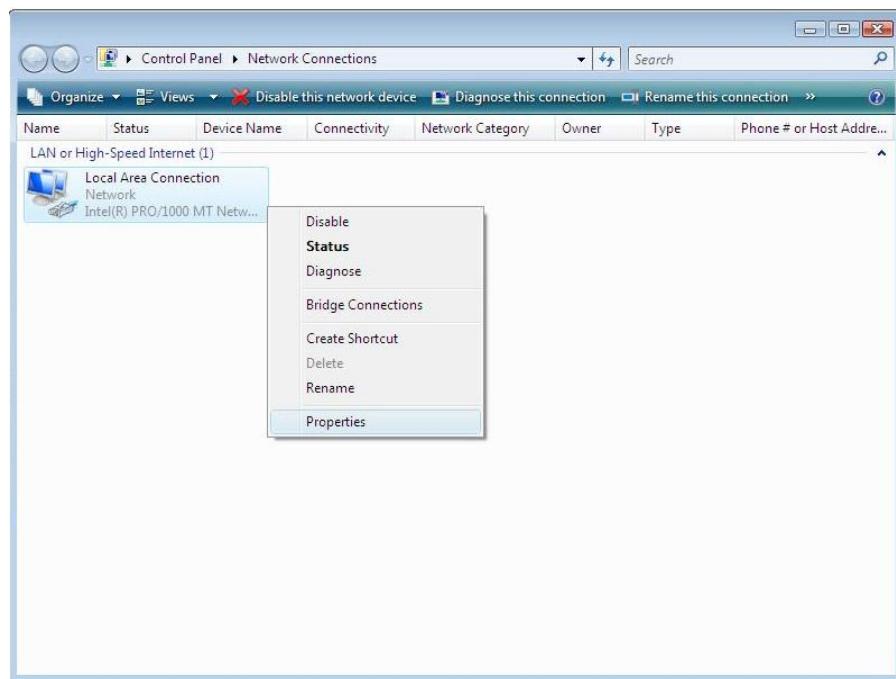


Figure 3-14

5. Highlight Internet Protocol Version 4 (TCP/IP) and then press Properties button

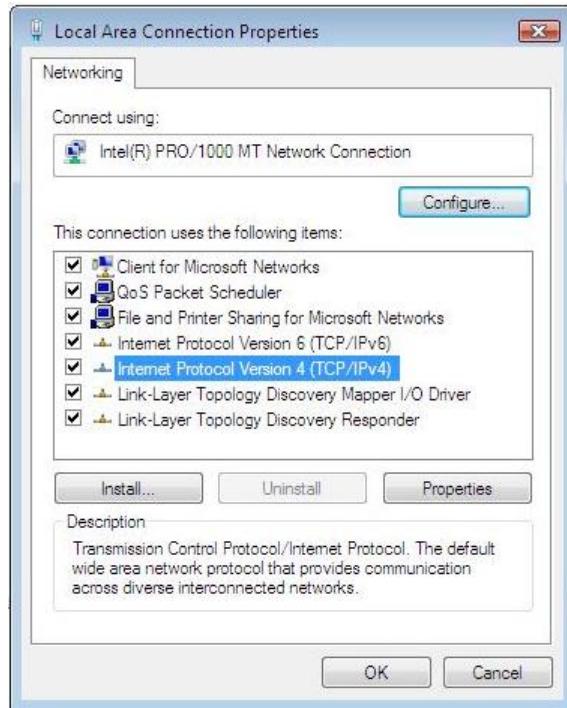


Figure 3-15

6. Choose Obtain an IP address automatically and Obtain DNS server address automatically, and then press OK to close the Internet Protocol (TCP/IP) Properties window

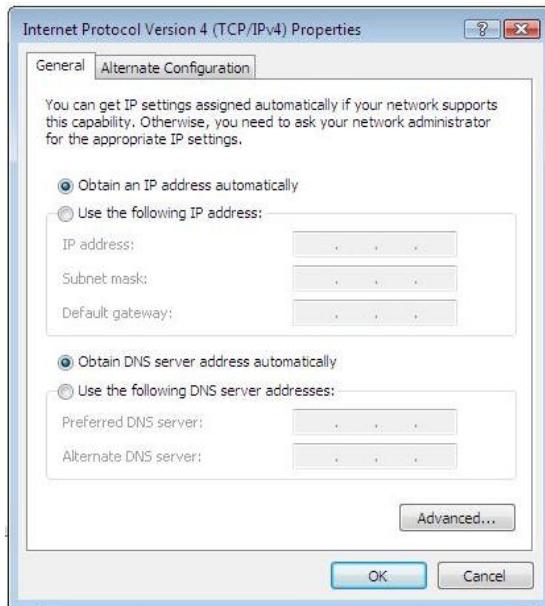


Figure 3-16

7. Press OK to close the Local Area Connection Properties window.

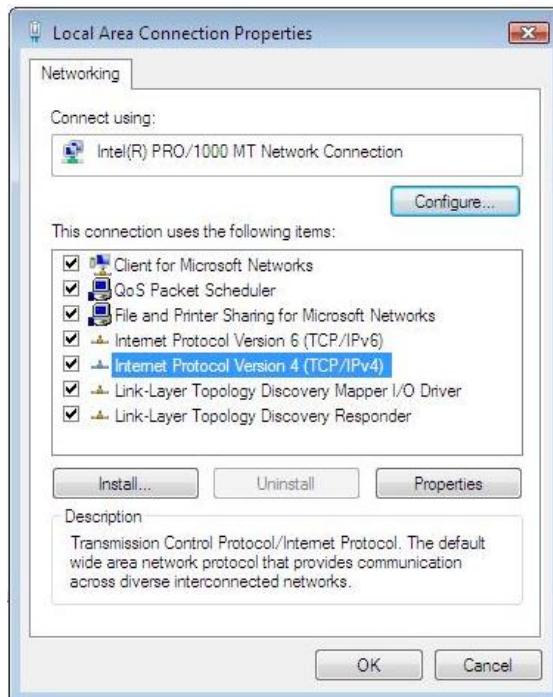


Figure 3-17

3.5. Windows 7

Please follow the steps below to setup your computer:

1. Go to Start → Control Panel → Network and Internet.
2. Click Network and Sharing Center → Change adapter settings.
3. Highlight the icon Local Area Connection, right click your mouse, and click Properties.
Highlight Internet Protocol version 4 (TCP/IPv4).

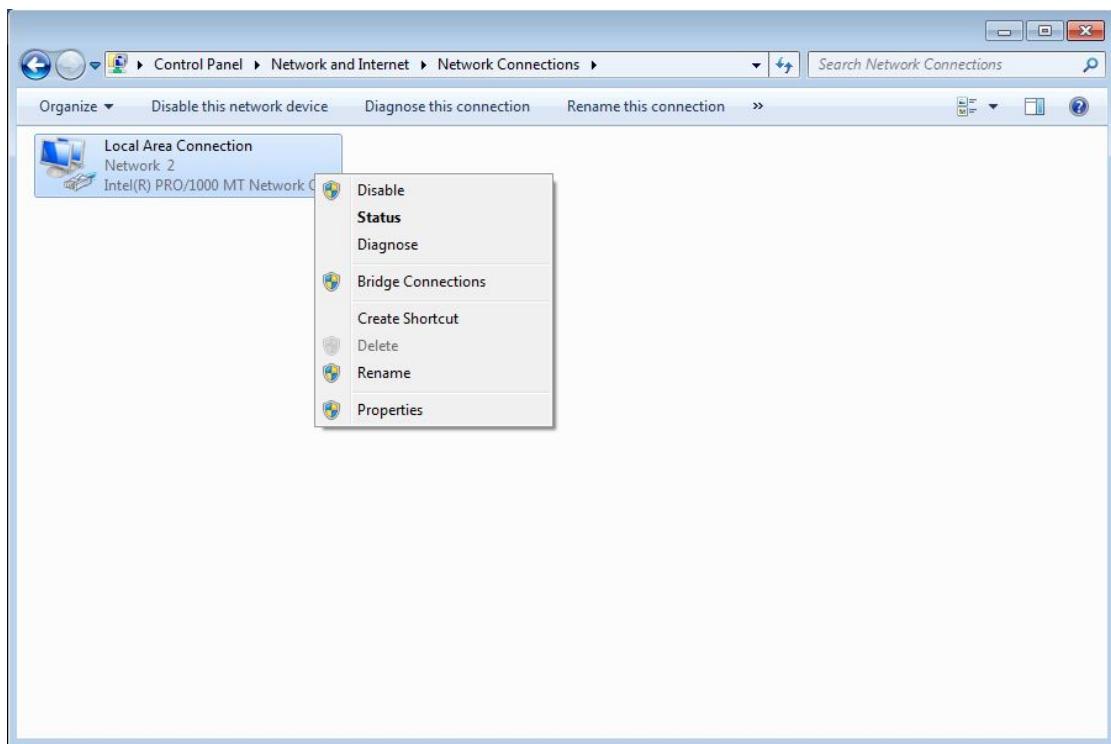


Figure 3-18

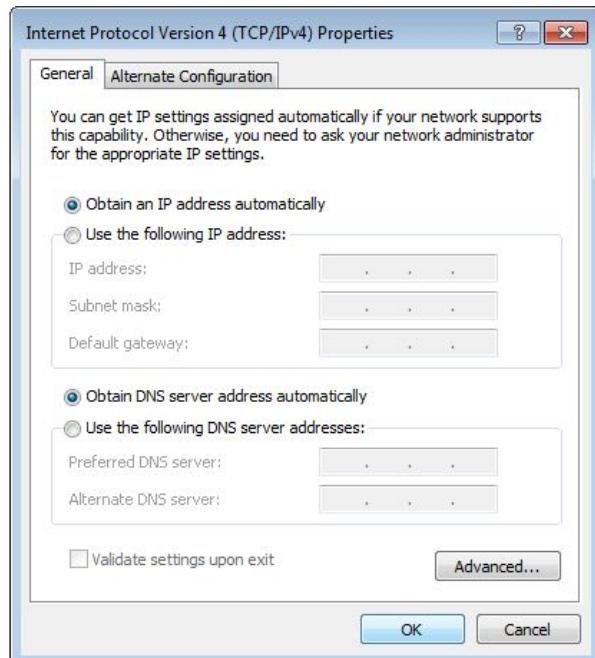


Figure 3-19

4. Choose Obtain an IP address automatically and Obtain DNS server address automatically, and then press the OK to close the window.

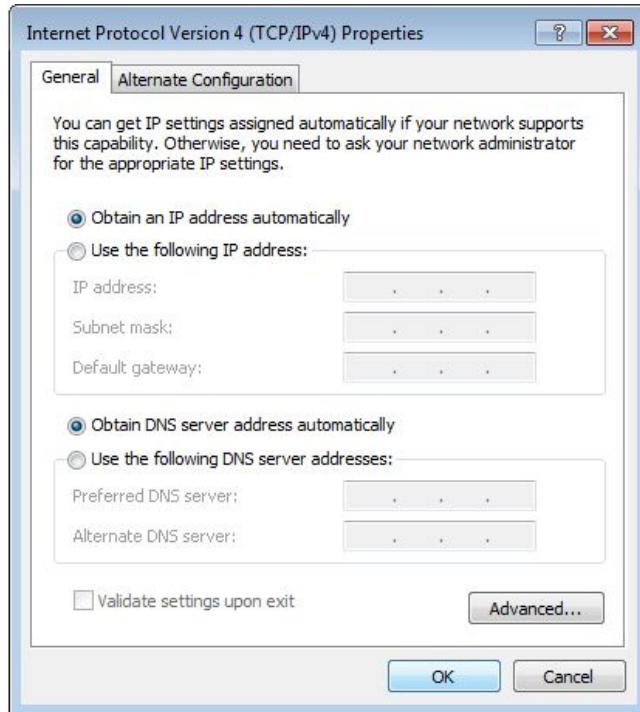


Figure 3-20

5. Press OK to close the Local Area Connection Properties window.

4. Checking Connection with the Adapter

After configuring the TCP/IP protocol, use the ping command to verify if the computer can communicate with the Router. To execute the ping command, open the DOS window and Ping the IP address of the 300Mbps Wireless-N Gigabit Router at the DOS prompt:

- For Windows 98/Me: Start → Run. Type command and click OK.
- For Windows 2000/XP: Start → Run. Type cmd and click OK.
- For Windows Vista/7: Start → Type cmd at the start search bar and press the Enter.

If the Command window returns something similar to the following:

```
C:\Documents and Settings\admin>ping 192.168.1.1

Pinging 192.168.1.1 with 32 bytes of data:

Reply from 192.168.1.1: bytes=32 time=1ms TTL=64

Ping statistics for 192.168.1.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms
```

Then the connection between the router and your computer has been successfully established.

If the computer fails to connect to the router, the Command window will return the following:

```
C:\Documents and Settings\admin>ping 192.168.1.1

Pinging 192.168.1.1 with 32 bytes of data:

Request timed out.
Request timed out.
Request timed out.
Request timed out.

Ping statistics for 192.168.1.1:
    Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),
```

Verify your computer's network settings are correct and check the cable connection between the router and the computer.

In order to make the whole network operate successfully, it is necessary to configure the 150Mbps AP through your computer has a WEB browser installed. Please follow up the steps listed below.

5. Login

Open a web browser (Safari, Internet Explorer, etc.) on the computer you have just connected to the router, type <http://192.168.1.1> in the address bar, and press enter

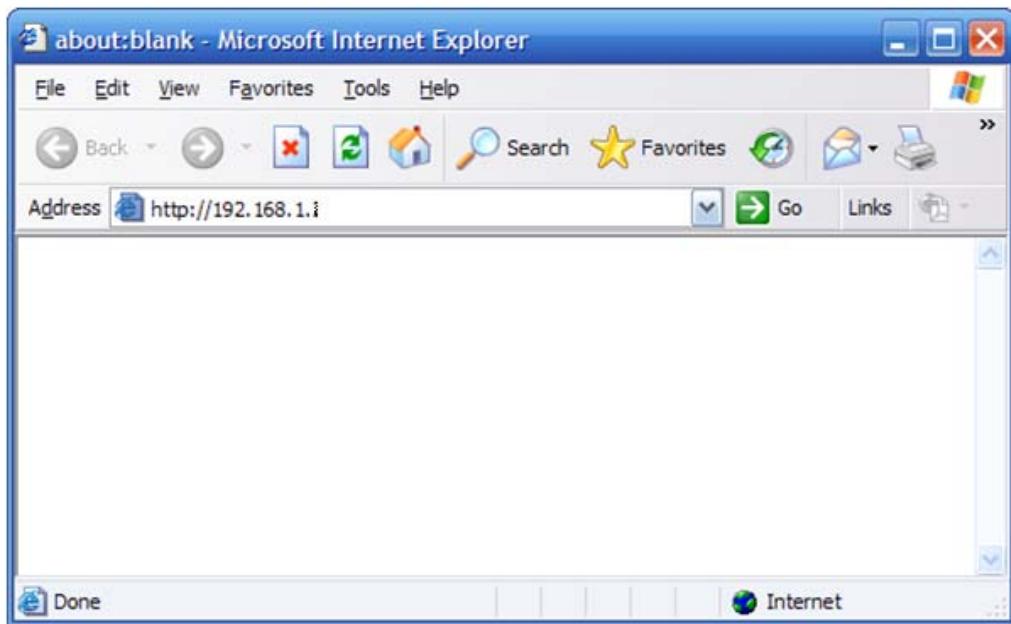


Figure 5-1

In the pop-up window, enter the user name **guest** and password **guest** and then click OK



Figure 5-2

6. Wireless AP Setup

6.1. Password Setup

The default username/password is guest/guest. To ensure the Router's security, it is suggested that you change the default password to one of your choice, here enter a new password and then Re-enter it again to confirm your new password. Click "Save" button to save settings.

Figure 6-1 shows the 'Password Setup' page. At the top, there is a navigation bar with tabs: Password Setup, Upgrade, Reboot, Restore, WOL, and System Time. The 'Password Setup' tab is highlighted. Below the navigation bar, the text 'User name is:guest' is displayed. There are two input fields: 'New Password' and 'Confirm Password', both with placeholder text '(Password only include letter and number)'. A 'Save' button is located at the bottom right of the form.

Figure 6-1

6.2. Upgrade

Click "Browse..." button and select a File to upgrade, after you have selected the appropriate file, click "Upgrade" button to execute upgrade procedure. Do not cut off the power supply during the process of upgrading.

Figure 6-2 shows the 'Upgrade' page. At the top, there is a navigation bar with tabs: Password Setup, Upgrade, Reboot, Restore, WOL, and System Time. The 'Upgrade' tab is highlighted. Below the navigation bar, there is a single input field labeled 'Upgrade File' with a 'Browse...' button to its right. A 'Upgrade' button is located at the bottom right of the form.

Figure 6-2

6.3. Factory Defaults

Click "Restore" button, the Router will erase all of your settings and replace them with the factory defaults, make sure you have backup current settings before click this button.

Figure 6-3 shows the 'Restore' page. At the top, there is a navigation bar with tabs: Password Setup, Upgrade, Reboot, Restore, WOL, and System Time. The 'Restore' tab is highlighted. Below the navigation bar, there is a single 'Restore' button.

Figure 6-3

6.4. Wireless Security Settings

The item allows you to encrypt your wireless communication, and you can also protect your wireless network from unauthorized user access. It supplies "WEP", "WPA-PSK", "WPA2-PSK" and "WPA/WPA2-PSK" five different encryption modes.

6.4.1. WEP

Basic Security WDS Host Filter Host List WPS Advanced

Security Setup

Authentication Type: WEP

WEP

WPS enable, please not use wep!

| | | |
|------------|--|--|
| Key Length | <input checked="" type="radio"/> 64 bits | <input type="radio"/> 128 bits |
| Key Mode | <input type="radio"/> HEX | <input checked="" type="radio"/> ASCII |
| Key | <input type="text"/> | |

Save

Figure 6-4

- Key Length: There are two basic levels of WEP encryption, 64 bits and 128 bits, the more bits password have, the better security wireless network is, at the same time the speed of wireless is more slower.
- Key Mode: If you select WEP to encrypt your data, choose the bits of password, it should be 64 bits or 128 bits. Then choose the format of password; it should be HEX or ASCII. The valid character for HEX format should be numbers from 0 to 9 and letters from A to F. HEX support mixed letter and number mode. And ASCII supports all characters that in keyboard.
- Key Length description: when you select 64bits, you need to input 10 chars for HEX and 5 chars for ASCII, and when you select 128bits, you need to input 26 chars for HEX and 13 chars for ASCII.

Note: when the WPS is enabled, please not use WEP.

6.4.2. WPA-PSK

Basic Security WDS Host Filter Host List WPS Advanced

Security Setup

Authentication Type: WPA-PSK

Pre-Shared Key

Encryption Type: TKIP AES TKIP & AES

Key Mode: HEX ASCII

Key:

Key Renewal (60-86400 seconds): 86400

Save

Figure 6-5

- Encryption type: You can select the algorithm you want to use, TKIP, AES or TKIP&AES. TKIP means “Temporal Key Integrity Protocol”, which incorporates Message Integrity Code (MIC) to provide protection against hackers. AES, means “Advanced Encryption System”, which utilizes a symmetric 128-Bit block data.
- Key Renewal: you can configure the renewal time between 60 to 86400 seconds.
- Key Length description: you need to input 8 to 63 ASCII characters no matter which type you select.

6.4.3. WPA2-PSK

The WPA2-PSK is similar to WPA-PSK and with stronger encryption method than WPA-PSK, using WPA2-PSK; you should input password (leave this value in the range of 8 to 63 characters) and key renewal time (leave this value in the range of 60 to 86400 seconds).

Basic Security WDS Host Filter Host List WPS Advanced

Security Setup

Authentication Type: WPA2-PSK

Pre-Shared Key

| | |
|--------------------------------|--|
| Encryption Type | <input checked="" type="radio"/> TKIP <input type="radio"/> AES <input type="radio"/> TKIP & AES |
| Key Mode | <input type="radio"/> HEX <input checked="" type="radio"/> ASCII |
| Key | 12345678 |
| Key Renewal (60-86400 seconds) | 86400 |

Save

Figure 6-6

6.4.4. WPA/WPA2-PSK

This item mixed WPA-PSK and WPA2-PSK mode, which provides higher security level; you can configure it according with WPA-PSK or WPA2-PSK.

Basic Security WDS Host Filter Host List WPS Advanced

Security Setup

Authentication Type: WPA/WPA2-PSK

Pre-Shared Key


| | |
|--------------------------------|--|
| Encryption Type | <input checked="" type="radio"/> TKIP <input type="radio"/> AES <input type="radio"/> TKIP & AES |
| Key Mode | <input type="radio"/> HEX <input checked="" type="radio"/> ASCII |
| Key | 12345678 |
| Key Renewal (60-86400 seconds) | 86400 |

Save

Figure 6-7

6.5. WDS Settings

If you have selected WDS or AP+WDS mode in Wireless Basic-Radio Mode, please do the following configurations.

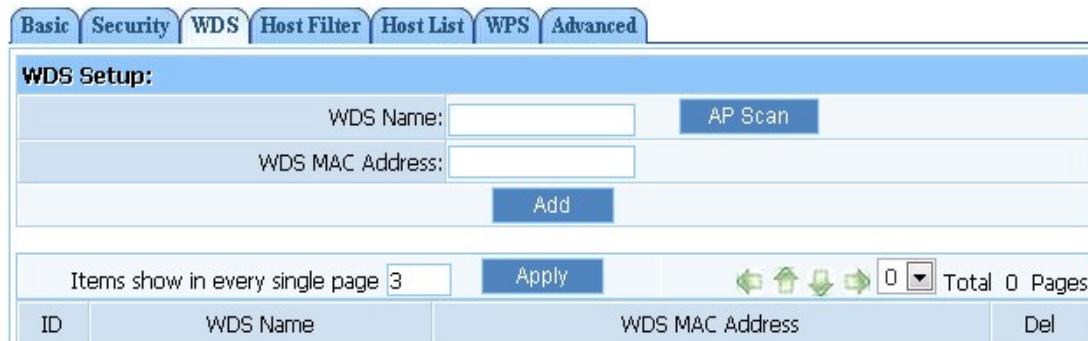

The screenshot shows a web-based configuration interface for WDS settings. At the top, there is a navigation bar with tabs: Basic, Security, WDS (which is selected and highlighted in blue), Host Filter, Host List, WPS, and Advanced. Below the navigation bar is a section titled 'WDS Setup:' containing two input fields: 'WDS Name:' and 'WDS MAC Address:', each with an associated text input box. To the right of these fields are two buttons: 'AP Scan' and 'Add'. Below this section is a table with a header row containing 'ID', 'WDS Name', 'WDS MAC Address', and 'Del'. The table body is currently empty. At the bottom of the interface, there is a toolbar with buttons for 'Items show in every single page' (set to 3), 'Apply', and navigation icons (back, forward, search, etc.). To the right of the toolbar are buttons for 'Total' (0) and 'Pages' (0).

Figure 6-8

- WDS Name: Give a description of your wireless bridge to tell apart.
- WDS MAC Address: If the current working mode is “WDS” or “AP+WDS”, then you need to configure wireless bridge configuration. Enter MAC address of remote access point, at the same time the remote access point also need to configure to “WDS” or ”AP+WDS” mode.
- Current WDS Information: It illustrates basic information of all wireless bridge that in connection status, you may delete unnecessary bridge.

AP1:

- Select radio mode is WDS or AP+WDS in wireless management-basic of AP1.
- Click on ‘Wireless Management’- ‘AP Setup’- ‘Security’ and select and save None as authentication type.
- Click on ‘Wireless Management’- ‘AP Setup’- ‘Security’ and select and save None as WDS authentication type or select a WDS security type, enter key and save.
- Input WDS name (e.g.: default), input MAC address of AP2 (00-22-4f-bc-af-5d), click add, then the record named default will appears in WDS list.
- Select Channel is ‘Channel 6’ in wireless management-basic of AP2.

AP2:

- Select radio mode is WDS or AP+WDS in wireless management-basic of AP2.
- The IP address of AP2 should be 192.168.1.x (1<x<255, e.g.: x=8).
- Select ‘LAN setup’-‘DHCP server’, select disable DHCP server.
- 4. Input WDS name (e.g.: Default), input MAC address of AP1 (00-22-4f-cc-ae-f5), click add, then the record named Default will appears in WDS list.
- Select Channel is ‘Channel 6’ in wireless management-basic of AP2.

Note: Before you setup WDS connection, please make sure that AP1 and AP2 is in the same network, that is if the IP address of AP1 is 192.168.1.1, then the IP address of AP2 should be

192.168.1.x (1<x<255, e.g.: x=8).

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices)

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation of the device