


## Block Diagram

### FOR MODEL:

CF 15W/PAR30L;      CF 15W/BR30;

CF 20W/PAR38;

CF 23W/PAR38;      CF 23W/BR40;

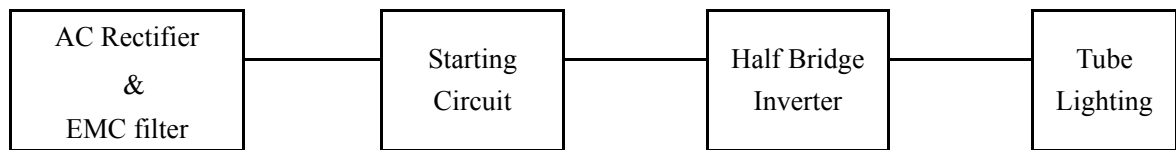

INPUT: 120V/60Hz

FUNDAMENTAL OPERATION FREQUENCY IS 0.45~30MHz