

# Bluetooth Speaker BS-207 User Manual

## Before used

Charging the Battery as follows:

1. The attached USB Cable a type side connected in to the PC USB connector and the Micro USB plug side connected in to the Bluetooth Speaker.
2. The Red LED will light on during charging.
3. When charging completed the Red LED go off.

## Power On and Power Off the Bluetooth Speaker

1. Press the  button for 3 second. An alert tone wills “Di” once and the Blue LED will blink in sequence. (1 second on 1 second off)
2. Press the  button for 3 second. An alert tone wills “Di” twice and the Red LED will flash twice and then go off.

## Pairing the Bluetooth Speaker with a Mobile Phone

Make sure your mobile phone is Bluetooth-enabled. Specific pairing steps may vary with different cell phones. Refer to the User Guide for your mobile phone for further information.

The general pairing steps are as follows:

1. Keep the Bluetooth Speaker close to your mobile phone.
2. Press and hold the  button about 8 seconds during power off mode, the alert tone will “Du” and the Red and Blue LED will fast blink alternately. The Bluetooth Speaker is under pairing mode at the moment.
3. Search the Bluetooth Device under the pairing mode in the mobile phone.
4. Once the search is completed, the “Bluetooth Speaker” will show in the Bluetooth device list.
5. Selected the “Bluetooth Speaker” to connect and entering the matching code with “0000”.
6. The pairing will completed at the moment and the Blue LED of the Bluetooth Speaker will blink in sequence.

**Notes:** If pairing is not successful, switch Off the Bluetooth Speaker and then redo the pairing procedure again.

If pairing is successful, the paired devices will remember each other. Unless the pairing information is deleted because of a new pairing, there is no need to go through the pairing procedure again when using the same devices the next time.

## Playing Music

Under the paired and connected status, if your mobile phone supports A2DP and AVRCP the function as follow:

1. Press the  button to play or pause the Music.
2. Press the  button to next Music.
3. Press the  button to previous Music.
4. Press the Volume + to increase the sound level or press the Volume – to decrease the sound level.

### -----Warning-----

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure statement, This product has been evaluated under FCC Bulletin OET 65C and found compliant to the requirement asset as set forth in CFR 47 section 15.247(i) addressing RF Exposure from radio frequency device, The redialed output power of this product is far below the FCC radio frequency exposure limits.