

Bluetooth Speaker BS-216 User Manual

Before used

Charging the Battery as follows:

1. The attached USB Cable a type side connected in to the PC USB connector and the Micro USB plug side connected in to the Bluetooth Speaker.
2. The Red LED will light on during charging.
3. When charging completed the Red LED go off.

Power On and Power Off the Bluetooth Speaker

1. Press the ON/OFF switch to ON and wait for about 5s an alert tone will “Di” and then Blue LED flash 3 times ,”du”, ”du” then enter the Pairing mode and the Red and Blue LED will fast blink alternately
2. Press the ON/OFF switch to OFF to power off the power.

Pairing the Bluetooth Speaker with a Mobile Phone

Make sure your mobile phone is Bluetooth-enabled. Specific pairing steps may vary with different cell phones. Refer to the User Guide for your mobile phone for further information.

The general pairing steps are as follows:

1. Keep the Bluetooth Speaker close to your mobile phone.
3. Press the ON/OFF switch to ON and wait for the unit entered the Pairing mode when the Red and Blue LED will fast blink alternately
2. Search the Bluetooth Device under the pairing mode in the mobile phone.
3. Once the search is completed, the “**BT Speaker**” will show in the Bluetooth device list.
4. Selected the “**BT Speaker**” to connect and entering the matching code with “**0000**”.
5. The pairing will completed at the moment and the Blue LED of the Bluetooth Speaker will blink two times every 3S.

Notes: If pairing is not successful, Switch Off the Bluetooth Speaker and then redo the pairing procedure again.

If pairing is successful, the paired devices will remember each other. Unless the pairing information is deleted because of a new pairing, there is no need to go through the pairing procedure again when using the same devices the next time.

Playing Music

Under the paired and connected status, if your mobile phone support A2DP and AVRCP the function as follow:

1. Press the **▶||** button to play or pause the Music.
2. Press the **▶|** ^{VOL+} button to next Music.
3. Press the **|◀** ^{VOL-} button to previous Music.

4. Press and hold the Volume + to increase the sound level or press and hold the Volume – to decrease the sound level.

Playing Line in Music

Plug in the attached audio line to AUX socket and the other end of the audio line connected to the music player audio output socket, the unit will change to play the line in music automatically. When plug down the audio line from the AUX socket will change to the Bluetooth function automatically.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.