

# DP-185 Keychain Digital Photo Frame

## Manual

---



# **Feature**

- 1) 1.5 inches CSTN panel; 128 x 128 Pixels.
- 2) 16Mbit Nor-flash
- 3) Stores upto 103 photos
- 3) Support Win2000/XP/ VISTA
- 4) Picture format: JPEG, BMP
- 5) Control buttons: 3KEYS:1.PAGE UP;2.PAGE DOWN; 3.MENU
- 6) The picture can be edited and modified by the picture convert software
- 7) USB 1.1 Fully compliant with USD2.0.
- 8) Auto play mode (Slide show)
- 9) Rechargeable Battery: 3.7V 180mAH (Built-in)
- 10) With Keychain mounting.
- 11) High class aluminium case on plastic cabinet

# Software

## 1 Software Auto Run

The Software will autorun and pup up when the DPF insert the PC if the Windows system which not close the autorun function. It's so convenient for the users to use directly.

## 2 UI manual

The success of the interface connections shown as figure 1:

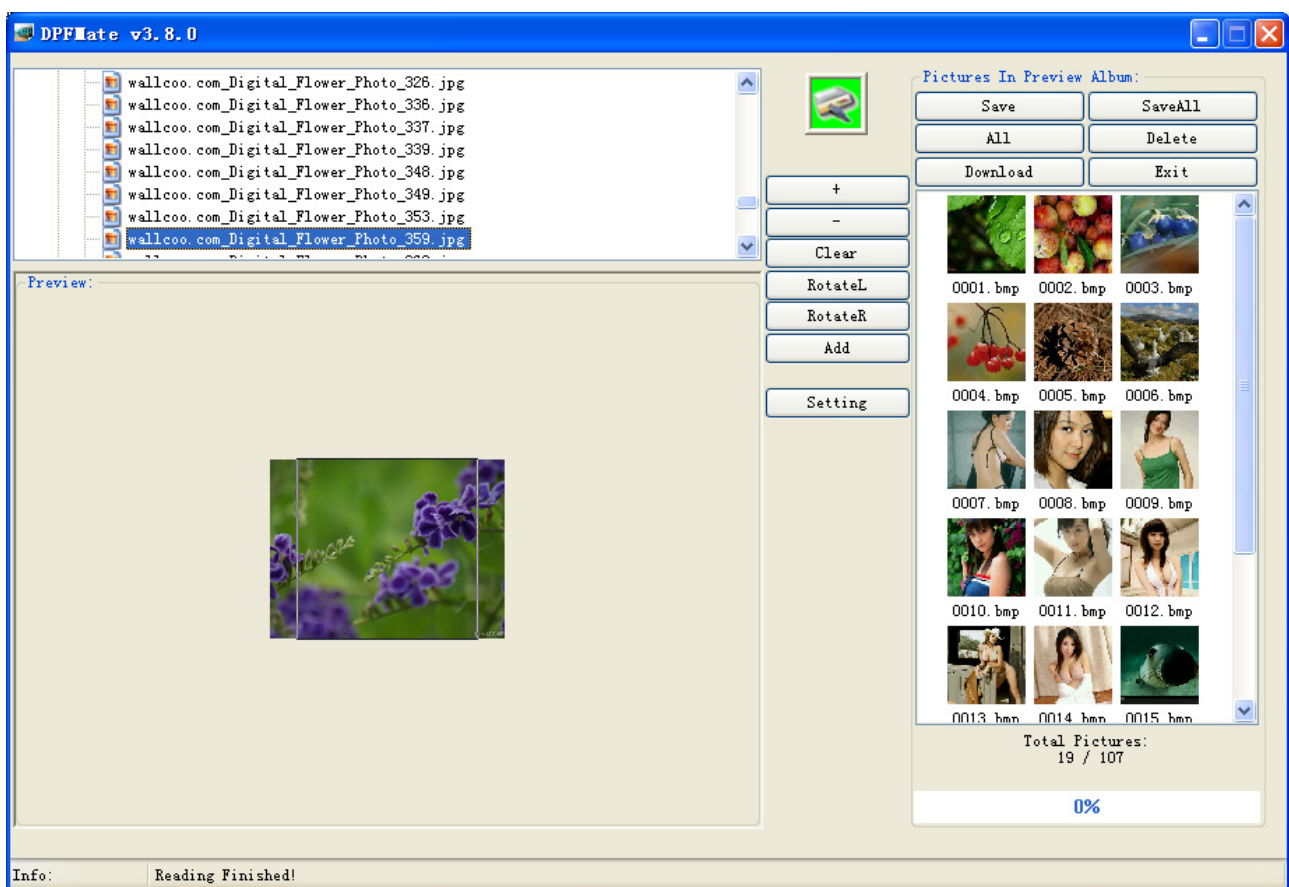



figure 1

## 3 Send the pics to the DPF device

### 3.1 Connect device

Insert the DPF to the USB interface of PC, the application will start and search the DPF device automatically. If there were some pics in the DPF it would load all them to the PC and display on the "Pictures In Preview Album" on the right side while connecting successful. Otherwise it would give you a tips about no pics in the status bar on the bottom of this app.

The connected status signal make you know the connected status in time.The signal figure is as follow:

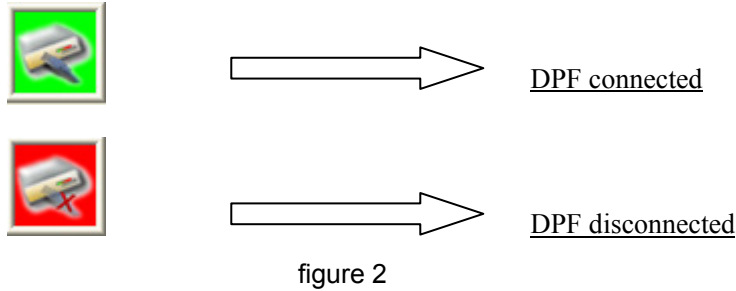 


You cannot use other buttons while reading the pics from DPF to the PC if there were some pics in the DPF already

### 3.2 Send the pics

You can choose the pic you like on the system file tree on the left side. The preview of the pic will display on the preview region when you selected it on the system tree with your left button. Then you edit the pic with the buttons on the right.

The region of the shear rect in the figure 1 is the region of the preview pic which would load down to the device. User can move the shear rect to select the region of the pic as you like. And you can use the buttons to zoom in, zoom out and rotate the pic on the right side of the preview pic. When you choose your favourite region of the preview pic, press the  button to add the cropped pic to the “Pictures In Preview Album” on the right side. Then you can select other pics.

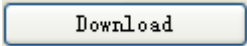You should remember to press the  button to synchronize the pics in the DPFMate and the DPF after you selected all the pics you like. (It means to download the new pics to the DPF device and refresh the deleted pics.)

The detailed step figure as follow:

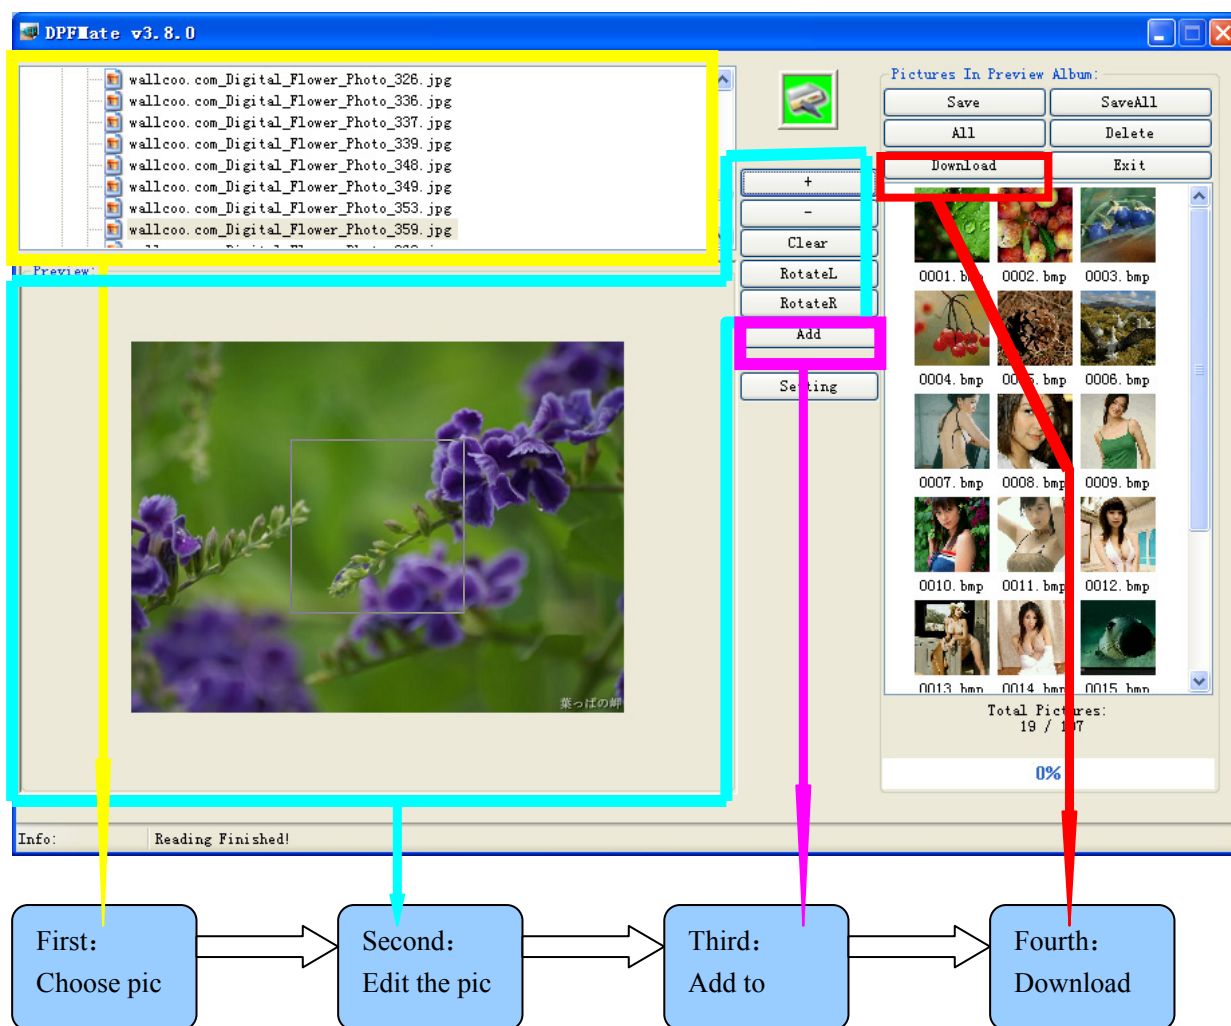


figure 3



The app support the format as: jpg、bmp

**Please avoid pulling out the USB cable while downloading the pics. If you do that, it may destroy some information on your DPF device.**

## 4 Other function introduction

### 4.1 Zoom in and zoom out the preview pic

button  : Zoom in the preview pic;

 
button  : Zoom out the preview pic;

 
Once you select one pic in the the file tree on the left, the pic will show the smallest scale in the preview region if the pic size is large than the device LCD.Else if the pic's width or height is less the the LCD size, the pic will be stretched the same as the device LCD.



 
- 1、Considering not to affect the definition it does nothing if you press the zoomin button when the original pic you selected is zoomed in the biggest size.
- 2、It does nothing if you press the zoomout button when the length or width is equal to the length or width of the DPF LCD.

#### 4.2 Rotate the preview pic

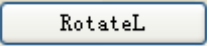button : Rotate the pic in preview region 90 anticlockwise;

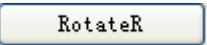button : Rotate the pic in preview region 90 clockwise;

#### 4.3 Crop the selected pic or make it as the same size as the LCD of DPF

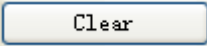There would be a shear rect frame to make the user to crop the region of the selected pic in default situation. At the same time you would find the  button on the right side of the preview. The state figure is like figure 4 as follow:

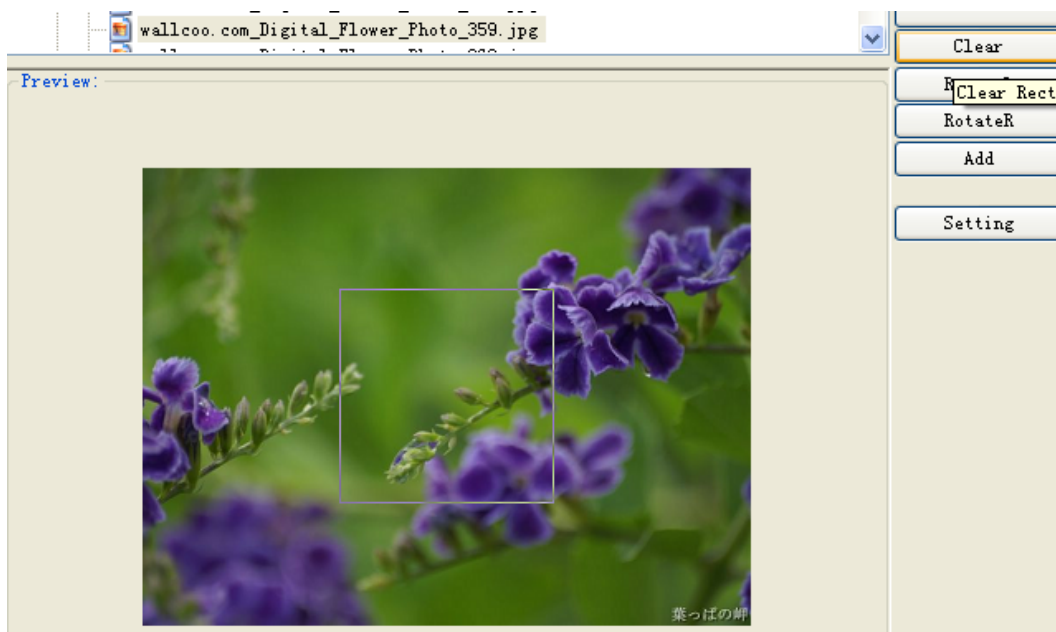
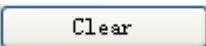 
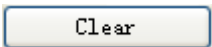 
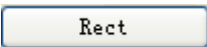 


figure 4

It would make the selected pic as the size of the LCD of the device after you pressing the button . (It means that make the same size automatically.) The the shear rect would disappear and the button  would change to the button  at the same time. The state figure is like figure 5 as follow:

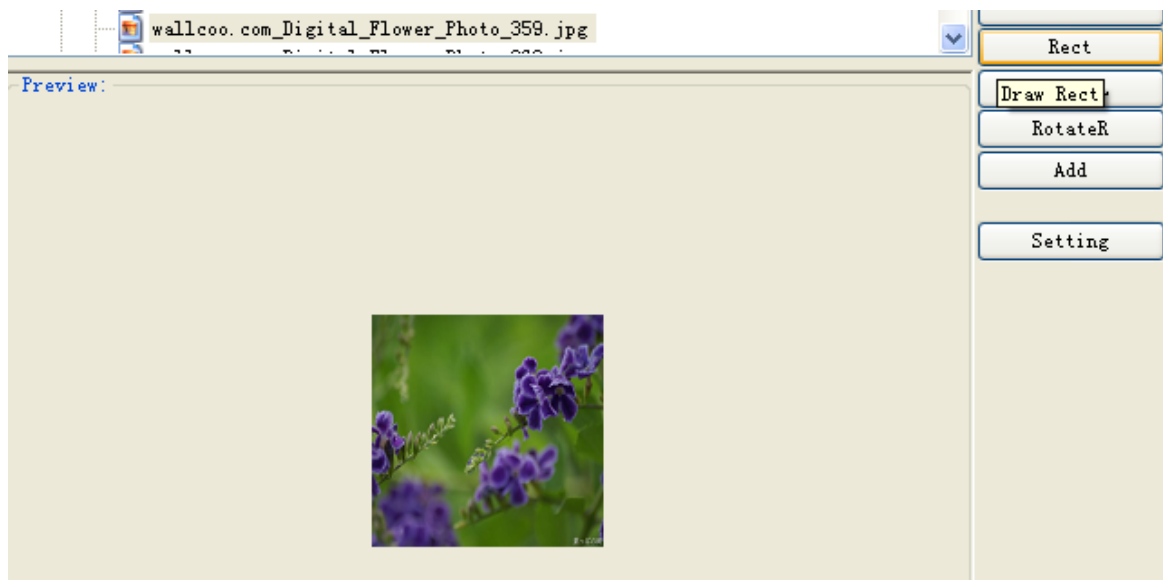
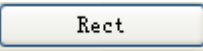 
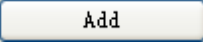 


figure 5

It would change to the state like figure 4 if you press the button  again.

User then can press button  to add the cropped region or the automatic sized pic to the “Pictures In Preview Album” on the right side.

#### 4.4 Delete the pics in the “Pictures In Preview Album”

 
You can press button  to delete the pics you selected in the “Pictures In Preview Album”.

You should press button Ctrl to select when you want to select more than one pic. You can press button

 
 to select all pics in the “Pictures In Preview Album”.



CAUTION

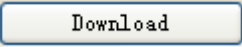You should remember to press button  to make the DPFMate and the DPF synchronized before you exit the application while you delete some pics.

#### 4.5 Read and save the DPF pics:

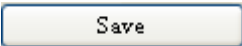Button : Save one of the pics in the “Pictures In Preview Album” to the PC.

Button : Save all of the pics in the “Pictures In Preview Album” to the PC.

#### 4.6 Switch language

Right click the mouse on idle space in DPFMate, and chose the language in the drop down menu..

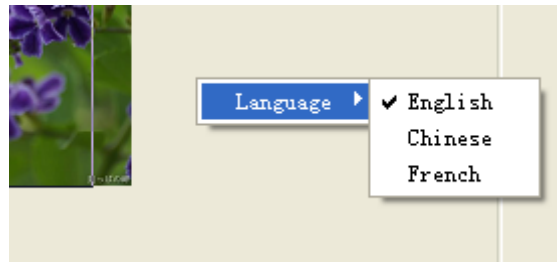


figure 7

#### 4.7 Color setting of the menus in the device

The  button is used to set the fontcolor and the backcolor of the menus in the device, The state figure is like figure 8 as follow. You can see the effect changed while you pull out the device after changing the setting.

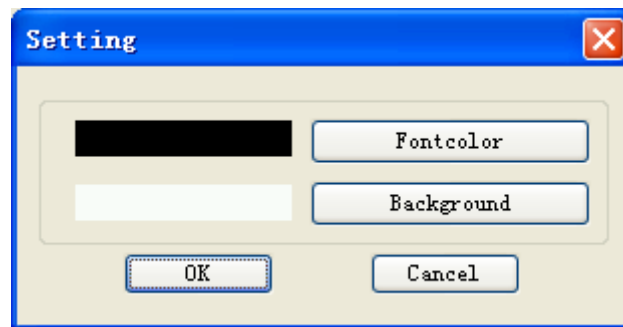


figure 8

#### 4.8 Drag-and-drop files

First, select the files or folders with you mouse. Second, drag and drop the files or folders to software UI .Then it will add the pics to the “Pictures In Preview Album” automatically. If you are not satisfied with one of the drag files, you can select it in “Pictures In Preview Album” and edit it again if you like.




---

If you Drag-and-drop a folder, it donot support subfolder temporarily.

---



## **Function Key Description**

MENU key----- Short press to enter the menu list during photo show, or confirm the function setting when selected a setting menu. Long-press to turn on/off the power.

▲ key ----- Short press to scroll the previous photo or menu. Long-press Up to show/unshow the clock on the photo

▼ key ----- Short press to scroll the next photo or menu. Long-press Down to show/unshow the clock on the photo

## **Menu Description**

1. USB Connect: Digital Photo Frame connect PC
2. Clock : Set digital clock, Analog clock, or adjust the clock timer.
3. Slide Show: Set Slide Show distance.
4. Auto Shut Down : Set the unit Auto Off time.
5. Contrast: Select LCD contrast.
6. Back Light : Select the LCD Backlight .
7. Delete: Delete photo, include delete one photo and Delete all photo
8. Power off: power off the unit.
9. Language: Language selecting, include English, Chinese, Spanish.
10. Exit: Takes user back to photo view

Remark: Connected USB to charge, till the battery is full show battery maximiser gauge

## FCC NOTICE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment.