


4.4. Installation of Serial/ID label

4.4.1. The Thermal Printer is used for creating this label. Use the file named **LAB-T162-SR1** fill out all of the fields with the correct unit data. Print the label.

4.4.2. The label should be applied on the back side of the enclosure between the two hinges. The highlighted green area in the figure below shows the accepted area for the serial label to be applied.

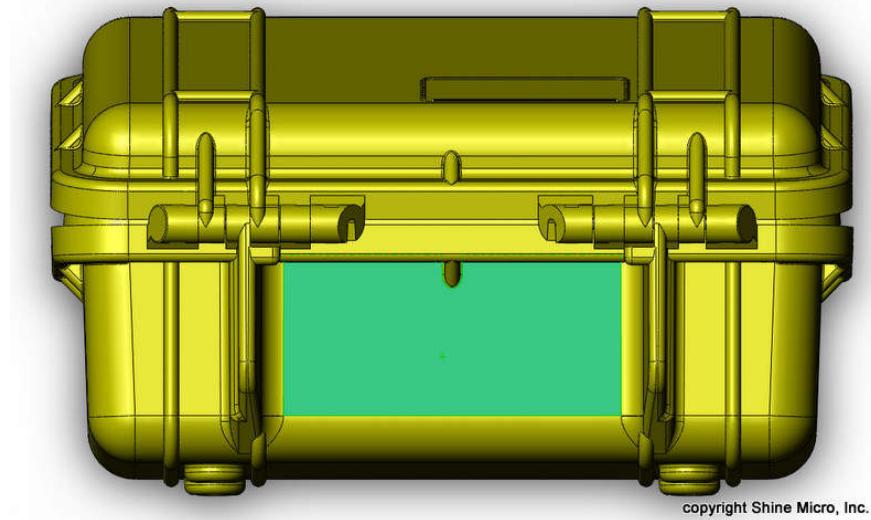

4.4.3. After the label is applied it should look something like the photo below.



-End of Procedure-