



TALON WIRELESS FOOT SWITCH

TO PROGRAM THE FOOT SWITCH:

BEFORE YOU BEGIN:

The MODE button acts like a toggle switch to operate either the left, right, or both Talons simultaneously. The LED's will illuminate to indicate which mode is active. If you are operating only 1 Talon, you will need to learn the switch to the Talon (left or right) that you wish to operate. If you are running 2 Talons, you will need to learn the switch 3 separate times. 1. Left 2. Right and 3. Both

1. Stow the anchors by pressing the Auto UP buttons on the Talons to be controlled.
2. Press the MODE button on the foot switch, and note that either the LEFT, RIGHT, or both LED's will illuminate. This is the Talon that is now ready to learn.
3. Press and continue to HOLD the Auto UP button on the Talon, and then press either the 'UP' or 'DOWN' button on the footswitch one time.
4. A series of 3 beeps will be heard, indicating the footswitch has been programmed to that Talon.
5. Release the Auto UP button on the Talon after the 3 beeps begin.
6. Repeat steps 2-5 to program the other Talon to the other UP button.
7. When learning the switch to both Talons, you must be in 'both' mode and then repeat steps 3-5 once to each Talon.

NOTE: Talon can store up to 10 remotes including the wireless footswitch.

FCC NOTICE:

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference that may be received, including interference that may cause undesired operation.

IC Notice:

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme avec d'Industrie Canada RSS standard exempts de licence. Son fonctionnement est soumis aux deux conditions suivantes:

1. Ce dispositif ne peut causer des interférences, et
2. Ce dispositif doit accepter toute interférence, y compris les interférences qui peuvent causer un mauvais fonctionnement du dispositif.

Transmitter Model: 2994168

IC: 4397A-TALONFS

FCC ID: T62-TALONFS



TO OPERATE THE FOOT SWITCH:

Deploy:

Two taps on the foot switch DOWN button (within 1 second) automatically deploys the anchor. Tapping the UP button once will stop deploy.

Retract:

One tap on the foot switch UP button automatically raises the anchor to the retracted position. Tapping the DOWN button once will stop retraction.

MINN-KOTA

Johnson Outdoors Marine Electronics, Inc.
121 Power Drive
Mankato, MN 56001
www.minnkotamotors.com
©2012
Made in Taiwan
2385314

Product Code: 1810256
Talon Wireless Foot Switch



WARNING: This product may contain chemical(s), known to the State of California, to cause cancer and/or reproductive toxicity.