



Dual Talon Remote

- Wireless remote for independent control of 2 Talon Shallow Water Anchors
- Program up to 10 remotes
- Waterproof and floats
- Includes battery and lanyard



SHALLOW WATER ANCHOR
TALON

TO PROGRAM A NEW REMOTE:

1. Stow the anchors by pressing the Auto UP button on both Talons.
2. Press and hold the Auto UP button on the Talon you want to program first. A steady tone will be heard.
3. While pressing the Auto UP button, press either the left or right UP button on the new remote once to control the Talon from step 2.
4. A series of 3 beeps will be heard, indicating the new remote has been programmed.
5. Release the Auto UP button on the Talon after the 3 beeps begin.
6. Repeat steps 2-5 to program the other Talon to the other UP button.

Product Code: 1810251



NOTE: Talon can store up to 10 remotes.

FCC Compliance

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference that may be received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by Johnson Outdoors Marine Electronics, Inc. could void the user's authority to operate this equipment.

This product meets the applicable industry Canada technical specifications / Le présent matériel est conforme aux spécifications techniques applicables d'Industrie Canada.

Transmitter Model: 2994043
IC: 4397A-T62TAL4BTN
FCC ID: T62TAL4BTN

MINN-KOTA
Johnson Outdoors Marine Electronics, Inc.
121 Power Drive
Mankato, MN 56001
minnkotamotors.com
©2010

2385313