

UNPACKING

Thank you for purchasing SN55. Check whether your phone comes equipped with all the necessary components, as shown in the figure below. If the product is defective or there is a component missing, immediately contact the office where you bought our phone.

- The packing list contains:

SN55 Handset	Travel adaptor	Battery (Li-ion)	Headset	User's manual

CONTENTS

2	UNPACKING	44	• STK
3	CONTENTS	44	• PHONE BOOK
5	SAFETY INFORMATION	45	•• Search Contact
11	BEFORE YOU START	45	•• Add new contact
11	• PHONE ICONS	47	• WAP / WEB
12	• DESCRIPTION OF KEYS	47	•• Internet Service
15	• BACKLIGHT	48	•• Data Account
15	• BATTERY	48	• MULTIMEDIA
17	• NETWORK LINKING	48	•• Camera
18	• INSERT & REMOVE SIM	51	•• Image View
21	• INSERT & REMOVE MicroSD	51	•• Audio Player
22	• THE IDLE PROFILE	52	•• Sound Recorder
22	• CALL FUNCTIONS	53	•• FM radio
25	• CALL MENU	53	•• Schedule FM Record
27	• CALL HISTORY	53	•• Melody Composer
29	• KEY OPERATION	54	• ORGANIZER
30	• VIBRATOR MODE	54	•• Calendar
30	• SILENT MODE	55	•• Task
31	FUNCTION MENU	56	•• Alarm
31	• MESSAGING	56	•• World Clock
31	•• Instant Messaging	56	• SETTINGS
32	•• Email	56	•• Display Setup
37	•• SMS / MMS	56	•• Phone Setup
43	• GAMES	57	•• Call Settings

SAFETY INFORMATION

PERSONAL USE

Operation of any radio equipment including mobile phones may interfere with the function of inadequately shielded medical devices such as hearing aids and pacemakers. Please consult the manufacturer of these devices or your physician before use.

In oil depots and chemical factories where explosive gas or other products are stored, the user should pay close attention to the restriction on the use of mobile phone. Even if your phone is in the idle mode, it will still transmit radio frequency signals. Therefore, you must switch off when requested to do so.

Note traffic safety. When you are driving, please do no use your mobile phone. Stop on the side of the road when you do need to use it. Avoid making calls with your cellular phone in stormy weather.

Safety Information related with children:

- Be cautious of children swallowing the small parts such as the SIM card.
- Prevent children from playing with your cell phone as toys. For example, behaviors like throwing, biting the phone, or immersing it into water should be avoided.
- Do not let children less than 14 years old hang the phone around the neck.

MOBILE PHONE USE

Please use only the accessories or parts offered by the manufacturer or those authorized by the manufacturer. Use of unauthorized accessories might influence the performance of the phone. What's worse, your phone might get damaged and harm will be caused to your body. It might even violate the national regulations on the telecommunication terminal products.

Do not use chemical products like cleaning solvents or detergents to clean your phone. It is recommended that you use slightly damp and static electricity proof cloth instead of cloth that is dry and easy to catch static electricity. Before cleaning, you should switch off your phone.

Your mobile phone produces magnetic fields. Do not place it next to magnetic storage media such as computer diskettes. Operating your mobile phone close to other electrical equipment such as televisions, phones, radios and personal computers may cause interference and therefore influence the performance of your phone.

Do not expose your mobile phone to strong sunlight, direct heat or any liquids in case of any damage.

Harsh handling behaviors such as throwing; beating which might damage the internal integrated circuit of the phone should be avoided.

Please do not link it to other unnecessary equipments.

Note! Non-professionals must not try to disassemble the phone.

Phone Precautions!

- Use your phone battery only for its intended purpose, and never use any battery charger which is damaged or worn out.
- When you unplug your phone from its charger, grasp and pull the plug, not the power cord.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean your phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not attempt to open the casing on your phone or its battery.
- Always keep SIM card out of children's reach.

BATTERY USE

Do not short-circuit the battery terminals. This is dangerous and will damage the battery, produce heat and may cause a fire.

Never dispose of batteries in a fire as it can cause explosion. Return waste batteries to your supplier or an approved recycling center. Do not dispose along with household wastes.

Warning! If the battery case is broken, avoid contact with the contents. Wash contaminated skin with lots of water and seek medical attention.

Battery Precautions!

- Avoid dropping the cell phone. Dropping it, especially on a hard surface, can potentially cause damage to the phone and battery. If you suspect damage to the phone or battery, take it to a service center for inspection.
- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, consider purchasing a new battery.
- If left unused, a fully charged battery will fully discharge itself over time.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as it will reduce the capacity and life of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even

when the battery is fully charged. Batteries are particularly affected by temperatures below 32°F.

- Do not place the phone in areas that may get very hot, such as on or near a cooking surface, cooking appliance, iron, or radiator.
- Prevent your phone or battery from getting wet. Even though they will dry and appear to operate normally, the circuitry could slowly corrode and pose a safety hazard.
- Avoid a battery out of the phone in coming contact with metal objects, such as coins, keys or jewelry.

ON THE ROAD

Before making or receiving calls acquaint yourself thoroughly with the applicable local laws and guidelines regarding the use of mobile radio telephones and always abide by these laws.

Air bags, anti-lock brakes, cruise control and fuel injection systems are normally immune to radio transmissions but if you come across problems, please consult your vehicle dealer.

Turn off your mobile phone when refueling or where there are signs restricting the use of two-way radio equipment. Do not store or carry flammable or explosive materials in the same compartment as your mobile phone because internal sparks could cause ignition.

Safety comes first, and is the ultimate responsibility of the driver. Please:

- Give full attention to driving – driving safely is your first responsibility.
- Use a Hands-free Kit, if available.
- If you have a Hands-free Kit make sure to pre-program numbers when possible, and keep calls brief and to a minimum.
- If you don't have a Hands-free kit, pull off the road and park your vehicle before making or answering a call in driving conditions so require.

ON AN AIRCRAFT

Switch off your mobile phone before boarding an aircraft. Use of mobile phone is strictly forbidden on an aircraft because of the potential interference with the telecommunication system. If the plane has not taken off yet, you should ask the flight crew for permission before you use your phone.

Note! If you have set your phone to Auto Switch ON, please check the Alarm Clock setting status and the Schedule menu to see the reminding time setting so that your phone will not power on automatically during the flight.

EXPLOSIVE ATMOSPHERES AND MATERIALS

Turn your phone off and do not remove the battery when in any area with a potential explosive atmosphere and obey all signs and instructions. You must observe restrictions on the use of radio equipment in fuel depots; below deck on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders, areas with signs about explosive atmospheres or where blasting operations are in progress, any other areas where you would normally be advised to turn off your vehicle engines.

WIRELESS PHONE POSE A HEALTH HAZARD

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe.

Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other

researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

NON-IONIZING RADIATION (Exposure to Radio Frequency Signals)

Your phone is a low power radio transmitter and receiver. When it is on, it receives and also sends radio frequency (RF) signals. Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your mobile phone. RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Consult your vehicle manufacturer and the manufacturer of any equipment that has been added to the vehicle.

CAUTION! Read this information carefully before using your phone

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standards for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standards previously set by both U.S and international standards parties. The design of this phone complies with the FCC guidelines ad these international standards.

BODY-WORN OPERATION

This device has been tested for body-worn operation and meets FCC RF exposure guidelines, and positions the handset at a minimum of 1.5Cm from the body. Use of any body-worn accessories may not compliance with FCC RF exposure guidelines.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

BEFORE YOU START

PHONE ICONS

	Shows the network signal strength. The more the bars, the better the signal strength.
	New text message
	New voice mail
	Appears when general mode is selected as ring tone type
	Appears when vibrator mode is selected as ring tone type
	Appears when Silent mode is selected as ring tone type
	Appears when the alarm clock function is enabled.
	Shows the level of battery status. The more bars you see, the more power battery has left.
	New email icon
	Appears when your phone is registered to a GPRS network.
	External memory card icon
	On calling icon
	Headset mode icon
	Keypad lock icon

DESCRIPTION OF KEYS

Left Soft Key

- Performs the functions indicated by the text in the left bottom line of the display screen above it.
- Go to main menu in idle screen

Right Soft Key

- Performs the functions indicated by the text in the right bottom line of the display screen above it.
- Go to "Contacts" in idle screen.
- In the menu mode, press the right soft key function, to go back to previous screen.

Send Key

- Press to "All calls" on Dialled Calls.
- Press to answer an incoming Call.

End Key

- Press to end a call or reject an incoming call. The phone will switch ON or OFF if it is pressed and held.
- Also in the menu mode, enables you to return to the idle mode (screen) .

Navigation and OK Key

- In the editing mode, moves the cursor and select done.
- In the menu mode, moves the menu cursor and select menu.
- In the idle mode, each key has the following function as default. [User can nominate each key function in setting menu.]
 - Up-Navigation Key: go to STK menu

- Down- Navigation Key: Contacts.
- Left- Navigation Key: go to Write Message.
- Right- Navigation Key: go to Multimedia
- OK key: go to Menu mode

Extra Key

- In the idle mode, each key has the following function.
- Left Extra Key: go to Instant Messaging menu.
- Right Extra Key: go to FM radio .

0~9 Numeric Keys

- By pressing the keys, you can edit numbers and characters.
- If you want input "+" character for international call, press [0] key and hold in number dialing screen.

[s], [z], [w], [p] Key and Space Key

- Depending on the different screens or different menus, the five keys work in different functions :
- [Space] key: In the idle mode, switch between the Vibrator Mode , Silent Mode and the General Mode by long pressing the [Space] key. In the Editing screen, input empty space.
- [Enter] key: In the idle mode, If long pressing the  [Enter] Key, can enter Keypad lock mode and to make unlock, press [Right soft] key and [OK] key.
- In number dialing screen, you can enter characters such as "*", "#" shows it's a extension call, "P" indicates "Pause" and "W" indicates "Waiting" to check to user if the phone may send DTMF before sending.



All character input Keys

- [SHIFT] Key function at edit mode as below
 - First press : onetime capital character input mode
 - Second press: continuous capital character input mode.
- [SYM] Key
 - Symbol characters input
- [Fn] Key function at edit mode as below
 - First press : input onetime upside character of keypad
 - Second press : input continuous upside character of keypad
- [Del] key: If you want erase some characters, press the [Del] Key.
- [Enter] key: If you want new line editing, press the [Enter] Key.
- [1] digit key: In the idle mode, Enter into the "Voice Mail Server" by long pressing the digit "1" key.

Volume Key

- When the phone is in the idle mode, you can adjust the volume of the key tone and Ring tone.
- During a call, when the MP3 player is working, you can adjust the volume of the voice or music.

Hook Button on the headset

- If you insert the headset, you can use it as below
- You can answer or end a call by pressing the hook button on the headset.
- When a new call comes in while you are on a call, you can answer the waiting call by pressing the hook button on the headset. (The first call will be held automatically).
- If you press the hook button shortly
 - In idle mode: MP3 player is background played.
 - In Call list screen: make a call the selected number.
 - MP3 is playing: pause / play or play next song, following option.

- FM Radio is playing: Power on/off or search next channel, following option.
- If you press and hold the hook button :
 - In idle mode: make a call the last number dialed.
 - MP3: stop all action and go to the idle mode.
 - FM Radio: Power Off and go to the idle mode.
- headset volume adjust.
 - To increase the volume, press **volume up** key. 
 - To decrease the volume, press **volume down** key. 

BACKLIGHT

A backlight illuminates the display and the keypad. When you press digit key, the backlight comes on. It goes off when no keys are pressed within a given period of time.

BATTERY

The phone comes with Li-ion battery which is only half charged but can be put into use immediately after the package is opened. However, the battery should be thoroughly discharged and fully recharged for at least 3 recycling times successively to achieve optimum performance.

Insert and Remove Battery

Remove the battery from the phone by two steps:

- Push up the release batch.
- Slightly lift the battery out of the back of the phone.
 - Insert the battery into the phone by following two steps:
 - Align the bottom of the battery down into the holes in the bottom of the phone.

- Then sit the battery on the back of the phone until it clicks into place.



How to Charge the Battery

- Plug your charger into the main socket first.
- Connect the lead from the charger to the upper side of the phone.
- When the battery is charging, the icon on the upper right corner which indicates the battery charge level will flash in cycle. If the phone has powered off, a charging screen will show that the battery is charging now. You have to wait for some time before the charging icon appears on the screen if your phone is overused.
- When the bars in the icon are fully filled and has stopped flashing, it tells you that the battery has been fully charged. If the phone has powered off, the screen will tell you verbally that the charging has finished. Generally, it takes 2~3 hours to fully charge the battery. Normally, the battery, the phone and the charger might get heated in the process.
- Release the charger from the power socket and the phone.
- Warning!** Charge the battery in a well-ventilated area between 0°C ~ 40°C . You must only use the supplied charger. Unauthorized charger might result in danger and any malfunction or damage caused by the use of unapproved charger will void the product warranty and it will not be acknowledged by the manufacturer.

Battery Use

- It is highly recommended that you recharge your battery when your phone powers off automatically or when the screen says "Inadequate Battery". If you recharge the battery before it is fully discharged, the phone will make some adjustment automatically and complete the charging in less time.
- The talk time and standby time suggested by the supplier is measured in an ideal operating environment. Practically, the time may vary with the state of the network, operating environment and the way it is used.

NETWORK LINKING

SIM Card

- Your network service provider will offer you a SIM (subscriber identity module) card, which is inserted into your phone. It is the key to the digital GSM network. You should install a valid SIM card in place before you start to use your phone. Information about network linking and your call record together with your phonebook and SMS is all saved in SIM card. It can be applicable to all GSM linking phones. A new phone will read the data stored automatically.
- Do not touch the gold contacts of SIM card in case the data might get lost or damaged. Avoid placing it near areas where there is a magnetic or electric field. Once the card is damaged, you will not be able to link to the GSM network by it.
- **Warning!** Switch the phone off before you remove the SIM card from the phone. You may damage the card if you try to insert it into the phone or remove it from the phone when your phone is connected to external power.

Insert and Remove the SIM Card

- The SIM card is usually embedded in a sheet card. You should first take it off the card before you assemble it to the phone.
- Switch the phone off. Then remove the battery and pull it away from external power socket.
- Insert the SIM card under the SIM card holder.



- When you need to remove the SIM card, you should first switch off the phone, remove the battery and take it away from under the SIM card holder.

! Note: About the SIM card

The SIM card is a computer chip containing information about your subscription, security, phonebook etc.

When you register as a subscriber with GSM, GPRS network operator, you are provided with the SIM card.

Always handle the SIM card with care and insert with the gold contacts facing down.

Power ON/OFF

- Make sure that the battery is attached. You can switch your phone On/Off by long pressing the [end] key.

- If you switch the phone on without a SIM card :
 - The phone will promote “Insert SIM” — In this case, you can make emergency call.
 - The phone will promote “Network Emergency”— which means it is searching for network but has failed to link.
- When the SIM card is in the due place, the phone will check the validity of the card automatically. Then the screen will promote in sequence:
 - “Enter PIN”— Prerequisite: SIM card security code is enabled.
 - “Enter Lock Code”— Prerequisite: Phone Lock Code is enabled.
 - “No Service”— Network registration failure. In this case, you can not make a call.
 - “Emergency Call Only”— Your phone has registered the other network and only emergency call is allowed.
 - “Searching for Network”— The phone will search for proper network to log on. You may make a call and send or receive SMS.

PIN Code

- A PIN code is adopted to prevent your SIM card from any illegal use. If a PIN code is activated, you are requested to input the PIN code to unlock the SIM card every time your phone is switched on. The user can also disable the PIN code. In this case, your phone will be open to illegal use.
- When the PIN code is enabled, you can erase the wrong input by pressing the Right soft key and confirm the code by pressing [#] or [OK] key
- For example: If the PIN code is set to be 1234, you can enter the code as follow: 1234 #.
- If the PIN code is entered incorrectly more than 3 times in succession, PIN will be blocked and your SIM card will automatically lock-up. Once your SIM card is blocked, you will be asked for the PUK1 password.
- **Note!** A regular PIN code consisting of 4~8 digits will be offered to

you by your network service provider. You are advised to change it into your private code set by yourself as soon as possible.

Phone Lock

- A Phone lock code can be set to prevent your Phone from any illegal use. If Phone Lock code is activated, you are requested to input the phone lock code to unlock the phone every time when your phone power on. Only in this way can you make or receive a call. The user can also disable the phone lock code. In this case, your phone will be open to illegal use.
- When you enter a wrong phone lock code, you can clear it by pressing [Del] key . Confirm your operation by pressing [#] or [OK] key.
- For example: If the phone lock code is set to be 0000, you can enter the code as follow: 0000[#] or 0000[OK]
- If you forget the phone lock code, you must contact your dealer or the local authorized maintenance center.

Link the Network

- If the SIM lock code is acknowledged, your phone will search for the registration network automatically or log on to other applicable networks. “Searching ...” appears on the screen. In the end, you will find the name of the network service provider, appearing in the middle of the screen, to show successful connection and your phone will turn to the idle mode.

INSERT & REMOVE THE Micro SD CARD

- The Micro SD card is embedded in a sheet card. You should first take it off the card before you assemble it to the phone.
- Switch the phone off. Then remove the battery and pull it away from external power socket
- Insert the Micro SD card under the Micro SD card holder.
- When you need to remove the Micro SD card, you should first

switch off the phone, remove the battery and take it away from the Micro SD card holder



THE IDLE PROFILE

Link Icons on the idle main screen

- Signal strength indicator and battery power level indicator: 
- The fully filled bars on both icons only suggest abundance and not necessary 100% in power.
- There are built-in still or animated wallpapers for your choice. You can also download pictures from the PC by connecting your phone to the computer.

CALL FUNCTIONS

Making a call

- You can receive or make a call when the sign of the network service provider appears on the display screen. The number of the bars on the upper left corner indicates the network signal strength.
- Since barriers could greatly influence the talk quality on the telephone line, it is advisable to move within a limited area to receive stronger signal.

Dialing mode

- Whenever you press and input a numeric key, your phone will go to the dialing mode. The Signal indicator icon and the Battery level indicator and other icons remain on the screen.

Connecting a Number

- In the idle mode, you will enter the dialing mode by pressing any numeric key. By pressing the [SEND] key, your phone will try to connect to the entered number. The connecting animation, signal indicator, and the battery level icon will display on the screen. If the number you are dialing is stored in your phonebook in advance, the name will be displayed on the screen. Otherwise, the called number appears on the screen.
- Key operation: You can end a call by pressing, [END/POWER] key or the hook button on the headset.

Adjusting the Call Volume

- During a call, if you want to adjust volume, use the Up/Down-volume key. Press Volume up key to increase the volume level, press the Volume down key decrease the volume level.

Domestic Call

- The most convenient way to make a domestic call is to enter telephone numbers by pressing the numeric keys. (Please add area code before the number.) Press [SEND] key to connect the called number. You can change the entered number by pressing the [Del] key to clear the digit before the cursor. A connecting animation appears on the screen. When the other part ends the call, you can check the call related information.
- Press [END] to end a call.
- The input sequence is: Area code + number + [SEND].

Call an Extension of fixed Phone sets

- Extensions of fixed phone sets cannot be connected directly to your phone. You need to first connect to the telephone exchange and then dial the extension number. However, this can also be achieved by inserting a pause character “P” to indicate the extension number. Your phone will finish the entire dialing automatically.
- The steps to dial an extension number:
Area code + main number + “P” + extension number + [SEND] key
- For example:
If you want to dial 1234567 to call the tele-banking system with the balance inquiry number 7777 and password 0000, the dialing sequence will be: 1234567 + P +7777+ P + 0000. The first part is to call the banking system. When the call is answered, the phone will transmit 7777 to enquire the balance.

International Call

- You should press [0] key and hold for a while , until the symbol “+” appear on the screen. By doing so, you can make an international call in whatever country without having to input the international dialing code. After the prefix symbol is entered, you should input the country code and the telephone number. Country code is customarily fixed. For instance, Germany, it is 49. UK, it is 44. Sweden, it is 46, etc. When you are dialing an international call, you should omit the digit “0” before the city code.
- To dial a fixed number: “+”Country code + complete number + [SEND] key

Call from the List

- Your phone automatically stores each number dialed or answered in its memory. In the call list, you can view recently called and answered numbers. The latest call will be listed in the beginning. All the records are categorized into Missed Calls, Dialed Calls, and Received Calls. The list may be updated continually as new

numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list. You can view the Dialed Call numbers by pressing [Send] key. You can also dial the numbers in the list by pressing [SEND] key.

- You can launch the call information by [OK]key and there are option menus as below:
 - Call
 - Send To Text Message
 - Send Multimedia Message
 - Save To contacts
 - View
 - Delete
 - Edit

Emergency Call

- In whichever countries covered by the digital GSM network, you can make an emergency call if you are within the coverage of the network. The network signal strength indicator will tell you whether you can make it or not. If no service is available, the screen will say “EMERGENCY CALLS ONLY”. Therefore, you can make an emergency call even without the SIM card in place.
- **! Note:** Some network may not allow the emergency call and may request to insert SIM card.

Answer a call

- Press the [SEND] key to answer a call as a default setting. To change the answering mode, press Menu> Settings> User Profiles> General (or select other option)> Customize> Answer Mode.
- When there is an incoming call, the phone icon on the display screen will be displayed, and the melody will sound or the vibrator will work according to the setting.
- If the caller is identified, the caller photograph, phone number/name (if stored in the Phonebook), and caller group name is displayed on

the screen.

CALL MENU

During a Call

- When the call is confirmed by the caller and connected, the main-screen displays the following information when the conversation begins: "Number or Name", "Call Time", "Status (Hand-free On/Off)".

Key Function

- Function Key: Right soft key for switching between Hand and Hand-free mode;
- [END/POWER] key for hanging up the phone.
- Hook Button to end a call on the headset.
- Numeric Keys: You can input numbers to transmit DTMF (Dual Tone Multi Frequency).

Call Options

- These options are visible only when you are during the process of a call. The multi-part call function should get support by the network. Please contact your network service provider for further information.
- The following options are available:
"Hold", "End", "New call", "Phonebook", "Message", "Sound record", "Mute (Local voice will not be transmitted to the other part)", "DTMF (You can set it ON or OFF)" and
- Note!** Some options appear only in some particular situations. Or they may need the support from the network. For example: "New call" should be supported by the network.

Auto DTMF

- In cases when the "P" symbol is placed in between numbers, the

phone will first attempt to connect the call and then automatically send out the numbers after the "P".

Auto Answer

- If the headset has been plugged into the jack on the phone and the Auto Answer function is set ON, the incoming call will be answered automatically in 5 seconds. To set the Auto Answer function, follow the steps: Menu > Settings > User Profiles > Headset > Customize > Answer Mode.

Auto Redial

- If the Auto Redial mode is set ON, the call will be redialed automatically following a failed attempt. To set the Auto Redial function, follow the steps: Menu > Settings > Call Settings > Advance settings > Auto Redial.

Sound Management

- Generally, the key sound and the sound of the ring are heard from phone speaker during a call. If the preset time of the alarm comes during a call, the alarm will be delayed from ringing until after the call has ended.

Call History

In the call records menu screen, you can see the number of Missed Calls, Dialed Calls, and Received Calls.

Following options are available in the sub-menu of Call History:

Missed calls

- This menu lets you view the latest missed calls. In the missed calls list, you can view the details of the record by pressing the left soft key. Then select view option. In the view screen you can make a call to the number by pressing the [SEND] key.

Dialed calls

- This menu lets you view the last some dialed calls.
- In the dialed calls list, you can view the details of the record by pressing the left soft key. Then select view option. In the view screen you can make a call to the number by pressing the [SEND] key.

Received calls

- This menu lets you view the received calls. In the received calls list, you can view the details of the record by pressing the left soft key then select view option. In the view screen you can make a call to the number by pressing the [SEND] key.

Delete call logs

- You can delete the records of missed calls, dialed calls and received calls respectively without clearing the call time record. In order to avoid unnecessary deleting operation, the user should confirm his action before the record is deleted.
- The following options are available.
 - **Missed calls:** You can see the missed calls information and missed call lists.
 - **Dialed calls:** You can see the dialed calls information and dialed call lists.
 - **Received calls:** You can see the received calls information and lists.
 - **Delete all:** If you want to delete all calls, selects the Delete All.

Call timers

- In this menu, you can view the last call time, total sent and total received. You can clear the all call time.
- The following options are available.

- **Last call:** You can see the last call time of your call.

- **Dialed calls:** You can see the total dialed call time of your call.

- **Received calls:** You can see the total received call time of your call.

- **Reset all:** When you want to reset call time, select the Reset All Time.

Call cost

- This menu is dependant to SIM card. Please contact your service provider for detail.
 - **Last call cost:** Used to show the cost of the last call.
 - **Total cost:** Used to show the cost of total call.
 - **Reset cost:** Used to reset all the cost items.
 - **Max cost:** Used to show and set the credit of cost.
 - **Price per unit:** Used to show and set the price per unit of cost of a call.

Text message counter

- In this menu, you can view the amount of sent and received messages. It can be reset.

GPRS counter

- This menu is used to view the data call counter through GPRS network.
- It has following options :
 - **Last sent:** Used to show the last sent GPRS data call.
 - **Last received:** Used to show the last received GPRS data call.
 - **All sent:** Used to show the all sent GPRS data calls.
 - **All received:** Used to show the all received GPRS data calls.
 - **Reset counter:** Used to reset all counter items.
- **Note!** You can only store 20 records of the Missed calls, Dialed Calls or Received Calls respectively. You make a call directly from the record list.

KEY OPERATION

Function Key

- You can answer or deflect an incoming call and you can use the Call background sounds by pressing the left soft key. Also you can reject it by pressing right soft key.
- You can answer a call by pressing [SEND] key and reject it by [End] key.
- **Note!** If the headset is plugged to phone, you can answer a call by pressing the hook button

VIBRATOR MODE

Vibrator mode is convenient, for example in a theater, when you wish to stop the phone from making noise.

In the Idle mode, press and hold the [Space] key  until the "Vibrator Activated" message and the Vibrator mode icon display.

In Vibrator mode, your phone will vibrate instead of ringing.

SILENT MODE

Silent mode is convenient, for example in a theater, when you wish to stop the phone from making noise.

In the Vibratory mode, press and hold the [Space] key  until show the "Silent Activated" message and the Silent mode icon display.

In Silent mode, your phone will not ring or vibrate.

To go back to General mode, press and hold the [Space] key  at Silent mode

FUNCTION MENU

Call History

In the call records menu screen, you can see the number of Missed Calls, Dialed Calls, and Received Calls.

Following options are available in the sub-menu of Call History:

Missed calls

- This menu lets you view the latest missed calls. In the missed calls list, you can view the details of the record by pressing the left soft key. Then select view option. In the view screen you can make a call to the number by pressing the [SEND] key.

Dialed calls

- This menu lets you view the last some dialed calls.
- In the dialed calls list, you can view the details of the record by pressing the left soft key. Then select view option. In the view screen you can make a call to the number by pressing the [SEND] key.

Received calls

- This menu lets you view the received calls. In the received calls list, you can view the details of the record by pressing the left soft key then select view option. In the view screen you can make a call to the number by pressing the [SEND] key.

Delete call logs

- You can delete the records of missed calls, dialed calls and received calls respectively without clearing the call time record. In order to avoid unnecessary deleting operation, the user should confirm his action before the record is deleted.

- The following options are available.
 - **Missed calls:** You can see the missed calls information and missed call lists.
 - **Dialed calls:** You can see the dialed calls information and dialed call lists.
 - **Received calls:** You can see the received calls information and lists.
 - **Delete all:** If you want to delete all calls, selects the Delete All.

Call timers

- In this menu, you can view the last call time, total sent and total received. You can clear the all call time.
- The following options are available.
 - **Last call:** You can see the last call time of your call.
 - **Dialed calls:** You can see the total dialed call time of your call.
 - **Received calls:** You can see the total received call time of your call.
 - **Reset all:** When you want to reset call time, select the Reset All Time.

Call cost

- This menu is dependant to SIM card. Please contact your service provider for detail.
 - **Last call cost:** Used to show the cost of the last call.
 - **Total cost:** Used to show the cost of total call.
 - **Reset cost:** Used to reset all the cost items.
 - **Max cost:** Used to show and set the credit of cost.
 - **Price per unit:** Used to show and set the price per unit of cost of a call.

Text message counter

- In this menu, you can view the amount of sent and received messages. It can be reset.

GPRS counter

- This menu is used to view the data call counter through GPRS network.
- It has following options :
 - **Last sent:** Used to show the last sent GPRS data call.
 - **Last received:** Used to show the last received GPRS data call.
 - **All sent:** Used to show the all sent GPRS data calls.
 - **All received:** Used to show the all received GPRS data calls.
 - **Reset counter:** Used to reset all counter items.
- **Note!** You can only store 20 records of the Missed calls, Dialed Calls or Received Calls respectively. You make a call directly from the record list.

SIM TOOL KIT

Carrier service menu.

ORGANIZER

Calendar

With this menu, you can use the calendar function. If you enter this menu, the date cursor will be on today's date. If the date on the cursor has schedule list, you can selected by pressing option left soft key. And then you may write your schedule. The scheduler function helps you keep track of reminders, meeting, course that you need to remember. Your phone sounds an adequate melody alarm when the set date/time for the schedule is reached. This calendar helps to keep track of memos by alarming clock. Press left soft key "Option" and the following are available:

- **View** : You can view today schedules all. In the menu, you can edit Date/Time, Description, Alarm, Repeat, Repeat until, Location and Priority. You can choose the due date by pressing Numeric key. You can Delete the Schedule and Add a New Schedule.
- **View All** : You can view all schedules recorded.
- **Add event**: You can add a new schedule.
- **Delete event**: You can delete a schedule.
- **Jump to date**: View the designated date.
- **Go to weekly view**

Tasks

You can check the schedule arranged on the current date. To edit Schedule,.

- **View** : You can view today schedules all. In the menu, you can edit Date/Time, Description, Alarm, Repeat, Repeat until, Location and Priority. You can choose the due date by pressing Numeric key. You can Delete the Schedule and Add a New Schedule.
- **Add**: You can add a new schedule.
- **Edit** : You can edit a schedule
- **Delete**: You can delete a schedule.
- **Delete Overdue** : You can delete a schedule by passed.
- **Delete All**: You can delete all schedule recorded.
- **Jump to date**: View the designated date.
- **Send vCalendar**
- **Save AS File** : You can save the schedule to the File Manager.

Alarm

This menu allows you to set the alarm to ring at a specific time. Five options are available. The default mode is OFF. You may set one or all ON if necessary. The time, Repeat, Snooze and Alert type of

each alarm can be set separately.

World Clock

You can view the current time for GMT and the other cities around the world by pressing the navigation key.

FUN & GAMES

- **MSN** : You can enjoy MSN service.
- **Facebook** : You can enjoy Facebook service
- **Twitter** : You can enjoy Twitter service.
- **Yahoo** : You can enjoy Yahoo service.
- **Skype** : You can enjoy Skype service.
- **Games**

There is a Puzzle game. It has Best grades, Help and Game level function.

- Use [2], [4], [6] and [8] key as navigation key in this game.
- During a game, you can pause the game by pressing right soft key. Continue the game by pressing the left soft key.
- Quit the game and go back to the idle screen by pressing the [END/POWER] key.
- You can configure of game setting with “Games settings” menu.

File Manager

You can realize the management of images, video clips, sounds, MP3, folder, etc. through this function menu.

It is to manage your files of audio, eBook, photos, images, my music, received and video as default.

Select drive between phone and memory card (only in case that you are using Micro SD). You can have the following options:

- **Open:** Open the folder. If you create a folder, it will be generated in here.
- **New Folder:** Create a folder as you want.
- **Rename:** Rename a folder as you want
- **Delete :** Delete all files which selected folder
- **Sort By:** you can select one of "Name / Type / Time / Size / None".

Calculator

- Enter numbers by pressing [0]—[9]. Press [.] for a decimal point. Press the [Del] key to clear your input.
- You can press the Up, Down, Left, Right navigation keys to enter the symbols of addition, subtraction, multiplication and division.
- Clear the latest input digit or result by pressing the [Del] key. Long press the [Del] key to clear all the input or the result.
- Press the left soft key to calculate and the result will appear on the screen.
- **Note!** The precision of the calculator is limited for the round off error.

Unit converter

- You can convert one type of unit to another by this function. Such as weight, length, volume, temperature, velocity and surface.

Currency converter

- You can convert the currency at a given exchange rate.

Stopwatch

Your phone can be used as a typical stopwatch or nWay stopwatch. There are Split Timing and Lap Timing stopwatch functions in this typical stopwatch menu. You can view the record in this menu.

E-Book reader

You can read E-Book with this menu. E-Book refers to "E-book" folder from phone or memory card in File Manager.

Note! E-book only support *.txt file format.

You can have the following options:

Open E-Book: Open to read.

Clean up bookshelf: Refresh the file list.

Global settings: Enables to set the following items:

Font style/ Font size/ Scroll by/ Auto scroll/ Scroll speed/ Full screen/Encoding/Alignment.

Book Info: Provides the information of E-Book for title, size, and format.

Delete: Delete the current E-Book file.

Delete all files: Delete all E-Book files in the folder.

Sort by: Enables to sort the E-Book files with the following options: Name/ Type/ Time/ Size/ None.

Apply global settings: Enables to set the Global Settings On or Off.

Help: Informs you how to use the shortcut keys.

MULTIMEDIA

Camera

- In the camera main screen, you can take photos, set camera options or view the saved pictures.
- To take a photo, press [OK] key then press save.
- If there is not enough memory to save a new photo, you need to create free space by deleting old pictures or other files in the menu.
- Option (Press the left key): You can set the corresponding options and enter the album to see saved photos.
- **Photos**
 - You can see the saved pictures in the album.
 - The following options are available.

View: To see the saved photos.

Slide show: You can take slide show with all photos in the album.

Edit: with this menu, you can edit the saved photos.

Print: With this menu, you can print the pictures directly on a PictBridge printer or on a Bluetooth printer.

Browse style: Select the list type of saved photos. The following options are available.

List Style: You can see the list type.

Matrix Style: You can see the matrix type.

Use as: Send the picture to the target place. The following options are available.

To wallpaper: Send the picture to wallpaper.

To screen saver: Send the picture to screen saver.

To power on display: Send the picture to power on.

To power off display: Send the picture to power off.

Caller picture: Send the picture to Contacts.

Send: Send the picture to the target place.

To MMS: Send the picture to MMS

To Email: Send the picture to Email.

To Bluetooth: Send the picture to Bluetooth.

Rename: Change the name of the selected photo.

Delete: Delete the selected photo.

Delete all files: Delete all the saved photos.

Sort by: Rearrange the saved photos by selected means. The following options are available.

Name: The saved photos are sorted by name.

Type: The saved photos are sorted by type.

Time: The saved photos are sorted by time.

Size: The saved photos are sorted by size.

None: The saved photos are not sorted.

Storage: Select where the photo will be stored. The following options are available.

Phone: The saved photos are stored to phone.

Memory card: Save photos to memory card.

- **Camera setting**

- You can select the following camera setting value. All the shortcut keys are valid only in the camera preview mode.

- **EV**: Select the effect of exposure. Use Navi Left/Right. Options: EV-4 ~ EV+4

- **Anti-flicker** : Select the frequency (50Hz/ 60Hz)

- **Delay timer**: Options: Off, 5 secs, 10 secs and 15 secs.

- **Cont. Shot**: Options: Off, 1 shot

- **Image settings**

- **Image size**: Setting the size of photo.

- Options:

- 176*144 / 352 * 288 /

- **Image quality** : Setting the quality level of photo

- Options: Low/ Normal/High

- **White balance**:

- Options : Auto/Daylight/Tungsten/Fluorescent/Cloudy/Incandescent

- **Scene mode**:

- Options : Auto/Night mode

- **Effect settings**

- You can set special photo effect.

- Options: Normal/ Grayscale/ Sepia/ Sepia green/ Sepia blue/ Color Invert.

- **Storage**

- You can select the target storage, Phone/ Memory card

- **Restore default**

- You can restore all the setting value of camera to Factory default

value.

Image viewer

- You can view the saved photos in the phone by image viewer.
- The option of Photos.
 - Browse Style or List Style
 - Storage : you can select "Phone or Memory Card" to view

Audio player

- Move the cursor to the option of "Audio player" and press the left soft key or [OK] key to view the file list.
- Each audio has the following options:
 - **Play**: Play the selected file.
 - **Details**: Check the details of the selected music.
 - **Add to ringtone**: Add the selected music to the ring list.
 - **Refresh list**: Update intentionally the list of Audio.
 - **Settings**: The following options are available:
 - Pre. Play List : you can select from "Phone" or "Memory Card"
 - List Auto Gen : On/Off
 - Repeat :Off / One /All
 - Shuffle : On /Off
 - Background Play : On/Off
 - Ear-mic button option: you can set hook button on the headset to Play Next File / Play/ Pause
- Operational key instructions :
 - Go to the idle mode: press [END] key
 - Play/Pause: press the Up Navigation key
 - Stop: press the Down Navigation key
 - Move to the previous: press the Left Navigation key
 - Move to the next: press the Right Navigation key
 - Volume up/down: press Volume up/down key.
- You can also press the hook button on the headset to Play / Pause

the music or Play next file according to the Earmic option setting.

- **Note!** It is suggested that the volume be turned down before the headset is plugged in to the jack on the phone for loud sound can do harm to your ears.
- **Caution!**
 - Music files must be stored in only "**My music**" folder
 - Audio player only can play music files in "**My music**" folder of phone and memory card.

Sound recorder

- You can record a sound and play the saved sound.
If there is no saved sound, you can have following options:
 - **New Record**: New Record sound.
 - **List** : you can see all saved file list
 - **Settings**: Allows you to set the preferred storage, file format and audio quality
- If there is saved sound already, you can have the following additional options :
 - **Play**: Play the saved sound file.
 - **Append**: Add extra sound to the previous selected sound file.
 - **Rename**: You can change the file name.
 - **Delete**: You can delete the sound file.
 - **Delete all files**: You can delete all of the sound files.
 - **Use as**: Forward the selected sound file to: "To User profile".
 - **Send**: Forward the selected sound file to "As Multimedia Message", "As Email".

FM radio

- Press the left soft key for "Option" to bring the follow menus:
 - **Channel list**: You can define 1~20 channel shortcut.
 - **Manual input**: You can input the frequency manually. [.] key is assigned to point "."
 - **Auto search**: FM Tuner search all available channels for preset

- list.
- **Setting** : You can select the following setting value:
Background play/Loud speaker/Earmic button option
Note! If the earphone is not connected, FM Radio cannot turn on.
Tip! Press [navi up] key, turn on/off search algorism
Press [navi down]key, turn on/off power
Press [digit] key, go to preset channel

Schedule FM Record

Record FM radio channel by user settings.

Melody composer

You can compose ring tone with this menu.
On "Melody Composer" screen, you can find the list of composed melody.
Press the left soft key for "Add" to compose a new ring tone – 1st time of composition only.

Key map is as follows:
[1] ~ [7] : Do ~ Si.
[8]: Vibration.
[0]: Rest.
[*]: Change the length of note/rest.
[#]: Shift to " b ".

Press the left soft key for "Option" to bring the following more options:

Play: Play the selected record.

Play speed: Set the play speed.

Select instrument: Select the instrument with 4options.

Save: Save the composed ring tone.

On the list of composed ring tone, press the left soft key for "Option" to bring the follow menus:

Play: Play the selected composed ring tone.

41

- Edit**: Edit the selected composed ring tone.
- Add**: Compose a new ring tone.
- Rename**: Change the file name of composed ring tone.
- Delete**: Delete the selected composed ring tone.
- Delete all files**: Delete all composed ring tone in "Melody Composer" list.
- Use as**: Forward the selected composed ring tone "To User profile".
- Send**: Forward the selected composed ring tone "As Text Message", "As Multimedia Message", "As Email"

CONTACTS

! Note: If the SIM card is changed, Phone show the message "Copy all from SIM to Phone?"
The SIM card memory and phone memory is physically separated but they are searched as a single entity.

View Contacts

- In Contact List, you can find a number conveniently and quickly in the "Quick Search" sub-menu.
- Input the initial letter of the Name in the place where the cursor is located, and the phone will begin to search for the most possible record.
- For example, In the case of searching for "James", input the letter "J". Then the number corresponding to the surname "James" will show.

Search contact

- You can find phonebook lists conveniently and quickly.

Add new contact

- You can store the phone number in your phone.

42

Enter the name, number and caller group , etc.

Storage Max 400 entries.

- If you want to store the number at the idle screen.

Enter the number at the idle screen and press "Save" (left soft key).

Enter the name of the person and caller group, etc.

Phonebook of name-card style is designed in your phone. Each item stored in it consists of 3 numbers (Mobile, Home, Office), Company, Email address, Fax, Caller picture, Caller ring-ton, Caller group (None, Friends, Family, VIP, Business and others), etc. Your phone is capable of storing and retrieving up to 400 numbers.

Copy all

- Copy all the records stored in the memory of SIM card and the phone memory respectively.

From SIM: copy all of the entries from SIM to Phone.

From phone: copy all of the entries from Phone to SIM.

Delete

- Delete the records stored in SIM card and Phone memory respectively. The records can be deleted instantly or one at a time.

From SIM: You can delete all of the entries from SIM.

From phone: You can delete all of the entries from Phone.

One by one: You can delete an entry.

Caller groups

- You can set different alert Associate sound, associate picture, Associate video and Member list to each of the five groups. Each of the five groups is Friends, Family, VIP, Business and Others. Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Navigation key is for you to choose specific objects.

Extra numbers

- In this category, you can set Owner number and Service dialing number.

Contacts Settings

Memory status: You can see the memory status of the phonebook list.

Preferred storage: You can select "SIM or Phone" to save the phonebook.

My vCard: You can edit or send your vCard.

! Note Options of Phonebook list

- If you press option soft key after locating the menu cursor to the name you wish to do an action, the following options are available.

Call : The number is automatically attached to the number dialed.

Send Text Message : Send SMS to a number selected from the phonebook.

Send Multimedia Message : Send MMS to a number selected from the phonebook.

Send Email : Send email

Send IM : Go to chat mode(while login)

View : You can go through the list of telephone numbers stored in the phonebook.

Edit : Edit names, Number and etc.

Edit Service Field : Add ID to contact list of IM server(while login)

Delete: Delete the selected information/record.

Copy : You can copy the selected information either from Phone memory to SIM card memory or vice versa.

Move : You can move the selected information either from Phone memory to SIM card memory or vice versa.

Send vCard : You can send name cards out or save them to archives by means of SMS, MMS.

Add new contact : add new contact

Caller picture

- If you set a specified picture for a phone number in Contacts, when you received a call from that phone number, the specified picture is displayed.

Caller ringtone

- If you set a specified ring tone for a phone number in Contacts, when you received a call from that phone number, the specified ring tone rings.

MESSAGING

Email

Note : Maximum capacity of Email inbox is 40 per a account , total 60 ea

You can send and receive Emails.

You must set the "Email account" first for use this menu.

- **Send and receive**

Send any unsent mails present in the Outbox folder and receives the new mails, if any, from the POP3/IMAP4 server. If both send and receive are successful, will display number of mail sent and received.

- **Email accounts**

▪ You can configure various server and profile related settings.

- Activate: Activate the selected Profile.
- Edit: Modify an existing profile.
- New account: Create a new account.
- Delete: Delete selected account.

New Account

- **Email address** : write your email address [mandatory @]
- **Protocol** : select option POP3 or IMAP4
- **Data Account** : The name of data account selected by the user.
- **Incoming Server** : Input server name [ex_imap.gmail.com][pop.xxx.com][mail.xxx.com]
- **Outgoing Server** : Input server name [ex_smtp.gmail.com]
- **User name** : Input your email ID [mandatory @]
- **Password** : Input your email account password.
- **Account name** : The name of the account.

! Note : need active email account to use.

You can edit following settings in Edit > **Advanced settings** menu.

Account settings

- Account name: The name of the account.
- Data Account: The name of data account selected by the user.
- Protocol: POP3 or IMAP.
- Email notifications: Auto-update / Disable
 - ◆ Auto-update : push email turn on
 - ◆ Disable : push email turn off , Check interval can be set
- Download size (byte): Maximum size of mail to receive. Entered value should not exceed the boundaries defined.
- Retrieve amount: Maximum number of mail to receive once.
- Reply to address: The address can receive reply mail of your mail.
- Check interval: interval time setting to check email . The available options are OFF, 5 /10 /15 / 30 min, 1 hour and 2 hours.

Outgoing server

This menu is to set SMTP protocol related parameters.

- Outgoing port: The port number of outgoing server.
- Security : Select option Off , Start TLS, SSL / TLS
- Authentication : Select option On / Off

- Incoming server

This menu is to set POP3/IMAP4 protocol related parameters.

- Incoming port: The port number of incoming server.
- Security : Select option Off , Start TLS, SSL / TLS
- Download options:
POP3 mode : Download all/Header only
IMAP mode : Download all/Header only /Header & Content
- Append to server: On/Off.
 - ◆ ON : keep emails in server
 - ◆ Off : delete emails after download to phone
- Drafts Folder : it make draft folder in email server
- Sent Floder : it make sent folder in email server

- Signature

- Auto signature: On/Off the signature status.
- Signature image: The user can select a picture as a signature.
- Signature text: Edit text signature.

! Note: How to set gmail account using IMAP mode [google email]

1. Setting your account [abc@gmail.com] refer to New Account
2. After setting your account, have to go edit menu
3. Enter to advance settings in edit menu.
4. Setting value in Advance settings as followed.

- Outgoing server
 - Security : select to SSL / TLS
- Incoming server
 - Security : select to SSL / TLS

Finally, save all setting value and Activate the account.

- **Write Email**
- You can edit 'To', 'CC', 'BCC', 'Subject', 'Attachments', 'Priority', and

'Message'.

After composing an email, you can send mail by right soft key,

And following options are available:

- Add Cc : Add Cc field
- Add attachments : add attachment files , 3 files can be added
- Add priority: add priority , Low / Medium / High
- Save To Drafts: Store the email to Draft folder, without sending it.
- Quit without saving: Quit without saving anything.

- **Inbox**

▪ Email List : the following options are available :

- View: Read email
- Reply: Send the reply to the sender.
- Reply all : Reply to the sender and all recipients
- Forward : Forwards the email to other parties.
- Write Email: compose new email
- Sort : Sort by date / Sort by sender / Sort by subject / Sort by size
- Mark As unread : Mark as unread Email
- Mark As Deleted: Mark as delete Email
- Delete : Delete a Email.
- Delete with Server: Delete the selected a Email with server.
- Delete marked Emails: Delete the selected all Emails.

Note : Press [Space bar] to mark a email for delete or unread  [Del] key is to delete a email

▪ All received mails will be displayed in the descending time order.

After reading an email, the following options are available:

- More : download over 2K byte content
- Reply: Send the reply to the sender.
- Reply without content: Reply to the sender without original mail content.
- Reply all: Reply to the sender and all recipients.

- Reply all without content: Reply to the sender and all recipients without original content.
- Retrieve Options : In header only mode
- Forward: Forwards the email to other parties.
- Message Details : view message detail.
- Use Number: use number.
- Use Email Address: use email address.
- Use URL: use URL.
- Delete: Delete the selected Email.
- Delete with Server : Delete the selected a Email with Server

Note : first download content size is limited by 2KB.(Header & Content mode)

Tip : When read content

[Navi up/down] keys are for line scroll.

[Navi left / right] keys are for page scroll.

◦ **Outbox**

- All unsent mails displayed in the descending time order.

Following options are available in Outbox folder:

- View: view message detail and Edit and send
- Sort: Sort message.
- Mark as Deleted: mark for delete
- Delete: Delete a item
- Delete marked Emails: Deleted marked all emails.

◦ **Sent**

- All sent mails displayed in the descending time order.

Following options are available for a mail in Sent folder:

- View: edit and forward
- Sort: Sort message.
- Mark as Deleted: mark for delete

- Delete: Delete a item
- Delete marked Emails: Deleted marked all emails.

◦ **Drafts**

- All Drafted mails displayed in the descending time order.

Following options are available for a mail in Draft folder:

- View: edit and send
- Sort: Sort message.
- Mark as Deleted: mark for delete
- Delete: Delete a item
- Delete marked Emails: Deleted marked all emails.

◦ **Clear mailbox**

- Delete all emails by folder

◦ **Delete marked Emails**

- You can delete the marks of email.

! Note : If you want to delete some marked email in Inbox

- Select options and mark as deleted.
- Back out of Inbox and move cursor inbox in Clear Mailbox.
- Then you can see “delete all of selected mailbox?” in pop up
- If say “yes”, can delete all marked email, you choose.

SMS/MMS

◦ **Write message**

▪ **Text message**

Your phone has 10 preset messages. You can also create your own text messages. You can add the message module to the new message you are editing.

You can input the number to which you wish to send your message by either pressing the numeric keys or retrieve it from the phonebook. The finished

message can be sent immediately or saved for later editing. During the process of sending, you can see animation on the screen. If the message is successfully delivered, the screen will display "Successful Delivery". Otherwise, "Failure!" will appear instead. The user should make a confirmation. The message could be saved automatically. That is, after the message is sent and return to the menu screen, the message will still be there.

"Send" option enables you to send the message successfully and "Save To Drafts" save it in the "Drafts" Folder. The capacity of out-box is depend on memory size. Users can delete the messages one by one manually or Delete All. When there is new message, your phone will remind you with both

animation  and alert ring. (Menu> Settings> User profile> General > Customize> Tone Setup> Message) If the inbox is full, corresponding icon will appear on the top of the screen. You can return to the idle screen by pressing the [END/POWER] key.

- Following options are available in the "Write Message" menu: Done, Insert templates, Insert object, Text Format, Insert contact number, Insert contact name and Insert bookmark.
- Each message may be composed of up to 1224 English characters. But in some cities or areas, messages should not be longer than 160 English characters. In the editing mode, you can select the text input symbols by pressing the [SYM] key. Short press the [Del] key to erase the character before the cursor. If you long press the [Del] key, all the characters on the screen will be erased. You can go back to the idle mode by pressing the [END/POWER] key. Select characters by the navigation key.

• Multimedia message

A multimedia message can contain text, images, and sound clips.

The phone has 5 preset MMS Templates which serve as samples when you want to create new MMS.

When a message is readily finished, you can choose to send it at once or save

it for later use. During the process of sending, you can see animation on the screen. If the message is successfully delivered, the screen will display "Successful Delivery". Otherwise, "Failure!" will appear instead. The user should make a confirmation. The message could be saved automatically. That is, after the message is sent and return to the menu screen, the message will still be there.

"Send" option enables you to send the message successfully and save it in the "Drafts" Folder

The capacity of out-box is depend on memory size. Users can delete the messages one by one manually or Delete All.

When there is a new message, your phone will remind you with both animation



and alert ring. (Menu> Settings> User profile> General>Customize> Tone Setup> Message) If the inbox is full, new message icon will blink appear on the top of the screen.

○ Inbox

- With this menu, you can view the new text messages or the read messages. Sender number or name (if stored in the Phonebook) are displayed on the list.
- In the inbox, the scrolling cursor indicates the date and time when the new message arrives.
- Read the message by pressing the left soft key.
- You can view the pre/next message by pressing Left/Right Navigation key. You can also Reply, Forward, Edit the received message. Delete All is also allowed.
- Call back to the message sender through "Message List> Option> Use Number".
- Press the right soft key to the previous menu and press the [END/POWER] to the Idle screen.

The following options are available for each SMS:

Reply, Forward, Delete, Delete all, Use number, Use URL, Use USSD,

Use Email address, Chat and Advanced.

The following options are available for each MMS:

Reply, Reply by SMS, Reply all, Forward, edit, Delete, Delete all, Properties and Use details.

- **Outbox**

- If you send a message, it will be saved to the “Outbox” after the message isn't successfully send. The unsent messages are saved to the “Drafts” and “No Number” is displayed, which indicates that there is no destination.
- If you send a message, it will be saved to the “Sent” after the message is successfully send.
- In delivering a stored message, you can send to a person, many people or group.

The following options are available for each SMS:

Send, Delete, Delete all and Move to Draft.

The following options are available for each MMS:

View, Send, Edit, Delete, Delete all, Properties and Use details.

- **Sent messages**

- With this menu, you can view a list of the sent message.

The following options are available for each SMS:

View, Forward, Delete, Delete all, Use number, Use URL, Use USSD, Use Email address and Advanced.

The following options are available for each MMS:

View, Forward, Edit, Delete, Delete all, Properties and Use details.

- **Drafts**

- With this menu, you can view a list of any draft messages that have been created in the ‘write message mode’ and you can save the draft messages here.

The following options are available for each SMS:

View, Send, Edit, Delete, Delete all, Use number, Use URL, Use USSD,

Use Email address and Advanced.

The following options are available for each MMS:

View, Send, Edit, Delete, Delete all, Properties and Use details,

- **Delete messages**

- Delete the records stored in the Inbox/Outbox/Sent messages/Drafts /All messages.

- **Templates**

- Users can insert a preset phrase into a text message which is being composed.
- When you are sending a message, you can quickly use a preset phrase.

- **Message settings**

- **Text message**

- Profile settings: Profile name, SMSC address, Validity period and Message type.
- Common settings:

Delivery report: Option that allows you to check if the message has been successfully delivered through the network to the other person.

Reply path: Transmit the reply path to the network terminals.

The support of the SMS center is needed for this function.

Save sent message: If the message has been successfully delivered, it is saved in the “Sent” folder.

- Memory status: To examine the status of the SIM card and Phone memory.
- Preferred storage: Allows you to select the default storage between phone and SIM card.
- Preferred connection: Prefer GPRS, Prefer GSM and GSM only.

- **Multimedia message**

- Profile: You can activate or edit MMS Profile.

- Common settings:

- Compose: You can set these parameters below:

Slide time: You can set the MMS slide timing.

Creation mode: You can set it to "Free", "Restricted".

Picture resizing: You can set it to "Off", "160x120", "320x240", "640x480"

Auto signature: You can set it to "ON", "OFF".

Signature: You can set your signature Text, Picture, Video and Sound.

- Sending

Validity period: The period of time the MMS kept in the SMS center.

Delivery report: You can set it to ON/OFF.

Read report: Requests notification from the service provider whether the receiver has read the MMS. You can set it ON/OFF.

Priority: You can set to priority: Low, Medium, and High

Delivery time: You can set the MMS delivery Time. The following options are available: Immediate, 1 hour later, in 12 hours later, in 24 hours later.

Hide sender: You can set it to "ON", "OFF".

Send and save: You can set it to "ON", "OFF".

- Retrieval

Home network: You can set the Home Network. The following options are available: Immediate, Deferred, Reject.

Roaming: You can set the Roaming Network. The following options are available: As home, Immediate, Deferred, Reject.

Filters: Anonymous: You can set to allow or reject the anonymous MMS.

Read report: Requests notification from the service provider

whether the receiver has read the MMS. Options:

"Send", "Never send", "On request".

Delivery report: Whether the delivery report is allowed or not.

Viewer size: You can set it to "normal screen", "Full screen".

- Memory Status: Indicate the used memory size for MMS.

Voice mail

- The phone support up to 2 phone numbers of voice message center.
- Select a phone number of voice message center, then you can have 2 options :
 - **Call Voice mail:** You can call to the current voice message center.
 - **Edit:** You can edit the phone number of voice message center.
- You can call to the voice message center that is saved in 1st directory simply by holding down [1] more than 2 seconds on idle mode.

Broadcast message

- **Receive mode:** You can set activation "ON" or "OFF".
- **Read message:** You can read the message.
- **Languages:** You can set the language type you want.
- **Channel settings**

Select: You can select the channel you want.

Add: You can add the channel you want. Type "Channel title" and "Channel ID".

Edit: You can edit the existing channel.

Delete: You can delete the channel you want.

- **! Note:** The Voice mail service may not be available on all networks. For more detail, please contact your network service provider.

CHAT

- **Login**
Login to instant messaging server
- **Settings**
 - Accounts
 - Support 3 Account
 - Activate : activate selected account.
 - EDIT
 - Account Settings
 - Account Name
 - Server Address
 - User name
 - Password
 - Login mode : Normal / Secure
 - Auto Login : Never / Always / Only home network
 - Connection Settings
 - Data Account
 - Connection type : HTTP / WAP
 - Use Proxy : No / Yes
 - Proxy IP
 - Proxy Port
 - Message Settings
 - Show Time : Yes / No
 - Block Stranger : No / Yes
 - Received File Settings
 - Auto Save : Decided by user / Yes / No
 - Save To Folder: select folder to save received files.

INTERNET

Internet Services

WAP is a standard application protocol specially created for mobile communications devices and gives fast and easy access to Internet information and service. You can obtain rich information by the WAP browser instead of a PC. Multi-services are available such as Reservation, News, Sports and Weather Broadcast.

- **Homepage:** Once the connection is built, you will link to the home page defined by yourself.
- **Bookmarks:** Once you choose the menu Bookmarks, you can connect to your favorite site much more conveniently.
- **Recent pages:** The phone keeps track of the recent pages you log in. When you choose 'Recent pages', your WAP browser will open the latest page at any time.
- **Offline pages:** The offline pages.
- **Input address:** If you know the URL of a website, you can go to the site directly by inputting the URL.
- **Service inbox:** You can view the service messages.
- **Settings:** You can utilize the various WAP settings with the following options.

Profile: Choose from the network setting options.

Browser options: Choose the time span you wait while opening the pages and set whether display the pictures.

Service message settings: You can set whether to receive the server push messages or not.

Clear cache: Clear the pages saved in the cache to make more room for new ones.

Clear cookies: Clear personal information such as User ID, password stored in the cache of the phone.

Trusted certificates: View or delete Certificate.

Data Account

- This menu allows you to change and edit settings for the GSM and GPRS network services. For further details, contact your service provider.
- **GSM Data:** This menu allows you to manage and edit the settings required by the CSD connection.
- **GPRS:** This menu allows you to manage and edit the settings required by the GPRS connection.

Conn. Management

- This menu allows you to manage connection.

SETTINGS

Many different features of your phone can be customized to suit your preferences. All of these features are accessed via the Setting menu.

Display setup

- In this menu, you can change various settings for the display.
- The following options are available :
 - Wallpaper:** Allows you to set the wallpaper from the "System" or "User Define".
 - Screen saver:** Allows you to set the screen saver from the "System" or "User Define".
 - Power on display:** Allows you to set the power on animation from the "System" or "User Define".
 - Power off display:** Allows you to set the power off animation from the "System" or "User Define".
 - Show Date and Time:** Allows you to set the showing date and time in idle mode.

Show Owner number: Allows you to set the showing Owner's number in idle mode. It must be show while taking a network.

Phone setup

- **Time and date**
 - This menu allows you to change the current time and date displayed. You can choose another city on status of same time zone by pressing the Up/Down navigation key.
 - The time and date format could be set by Left/Right navigation key.
 - Set Time Zone:** You can set the city.
 - Set time/date:** You can set the time and date.
 - Set format:** You can select the format such as time, date.
 - Update time with time zone:** You can select option On/Off.
 - Auto update of date and time:** You can set the auto-update of date and time from Network system.
- **Schedule power on/off**
 - In this menu, you can set the schedule to the Power On/Off time and action.
- **Language**
 - You can set the language with this menu.
- **Greeting text**
 - Greeting is an alternative to the switch-on animation.
- **Dedicated key**
 - You can set function for Navigation key (up/down/right/left)
- **Flight mode**
 - You can set this function when you are boarded in airplane.
 - You cannot make or receive any call but only use MP3/MP4 function.

- **LCD backlight**
 - LCD backlight: You can set the brightness (1~5 level) and backlighting time (5~60 seconds) of the phone.

Call settings

- **Caller ID**
 - Set whether to display your number on the other party's phone. It can also depend on the network.
- **Call waiting**
 - Three options are available: Activate, Deactivate and Query status.
- **Call divert**
 - You can divert the coming calls on your own setting.
- **Call barring**
 - You can bar the "Outgoing calls", "Incoming calls" "Activate all" and "Cancel all" settings. Also, you can change the barring password.
- **Line switching**
 - You can switch between two network lines available on the phone. This is a network feature.
- **Advance settings**
 - Black list: Allow you to set up 20 Black list numbers to reject their calling.
 - Auto redial: With this function activated on, your phone will redial your unconnected call automatically.
 - Speed dial: You can set it On or Off. You also need to edit the

- speed dial number 2~9.
- Call time display: You can set whether to calculate and display the call time of the conversation.
- Call time reminder: You can set a tone to sound every minute or user specific period during a call as a reminder of the time.
- Auto quick end: In this menu, you can drop the call with automatically as below :
 - Set: You can set it On or Off
 - Time (1~9999s): You can set end time

Network setup

- **Network selection**
 - Select Network selection between Automatic and Manual.
- **Preferences**
 - Preferred Networks
- **GPRS connection**
 - Select your GPRS connection method setting (Always / When needed)

Security setup

You can set security pattern with this menu so that your phone and SIM card will be guarded against any illegal use.

- **SIM lock**
 - When you want to activate the PIN code function, enter your Personal Identification Number.
 - Personal Identification Number is needed to establish authorization for access to certain functions or information in your SIM card. The PIN code comes with your subscription. It may be a four to eight digit number and can be change as required.

- **Phone lock**
 - When the Phone lock feature is enabled, the phone is locked and you must enter the 4 to 8 digit phone password each time the phone is switched on.
 - The password is preset to "0000". Once the correct password has been entered, you can use the phone until you switch it off.
- **Auto keypad lock**
 - Without any key touch for a set period, the keypad will be locked. There are 6 values (None, 5 sec, 30 sec, 1 min, 5 min and LCD Light off).
 - Default value is LCD Light off. If you don't want use this keypad lock option, you have to set to "None" value.
- **Fixed dial**
 - You can set the mode and fixed dial list.
- **Barred dial**

Note! : The Barred Dial service may not be available on all cellular phones.
- **Change Password**

You can change the password such as PIN, PIN2, and Phone Lock Password.

Note! The default Phone Lock code is **0000**. It is highly recommended for you to change it.
- **Certificate Manager**

Certificate Manager list.

User profiles

You can use the sound setting features to customize various settings such as ring type, vibrator, and volume depending on environments: General, Meeting, Outdoor, Indoor, and Headset

You do not have to change every setting every time you arrive at a new setting. Instead, you just switch to the readily set mode that fits the setting.

In each profile, when pressing customize in option menu, you can set the following items::

- **Tone setup:** You can set alert ring to the following operation: Incoming call, Power off, Message tone and Keypad tone.
- **Volume:** Set the volume of Ring tone and Key tone.
- **Alert type:** Ring only, Vib. only, Vib. and ring and Vib. then ring.
- **Ring type:** Single, Repeat and Ascending.
- **Extra tone:** Warning, Error, Camp on and Connect.
- **Answer mode:** Any Key/Auto (Headset mode).

Note! Switch back to silent mode or vibrator mode by long pressing the [Space] key in the idle mode. Pressing and holding again will go back to the previous mode.

Restore factory settings

- To use this option, first enter your phone password. All the settings will be restored to the factory setting. Please operate carefully. If you want, you have to input Phone lock code.

MP3 INSTRUCTION

This phone do not support to connect with computer.

First step, please make "My music" folder in memory card by using computer.

Second step, please download "audio file" into "My music" folder in memory card

Third step, please put memory card into the phone and enjoy music.

Use the follow the sequence "Menu> Multimedia> Audio Player" to activate the music player.

In case play music with headset: To play music, short press ear button of headset.

If you long press the ear button, the phone will dial the last call made.

TROUBLESHOOTING

If you meet a trouble on your phone operation, please check the followings. These checks enable you to save time and expense due to unnecessary after-service.

When Enter PIN appears at the power-up...

☞ The PIN check is currently enabled. You must enter the PIN supplied together with your SIM card. You can disable the PIN check if you want, please see Security Setting menu.

When Enter PUK appears at the power-up...

☞ PUK (Personal Unblocking Key) is used to unblock the blocked SIM card due to incorrectly entered PIN. PUK code is composed of 8 digits, and usually provided with your SIM card. If the PUK code is entered incorrectly several times in succession, PUK will be blocked and your SIM card will be automatically lock-up and the SIM Blocked message will be displayed. Once you see the message, you need to contact your network service provider for a new SIM card.

When Insert SIM screen appears at the power-up...

☞ Please, check that your SIM card is inserted properly.

When Enter Lock Code appears at the power-up...

☞ Your phone is phone locked. You must enter the Lock Code supplied together with your phone.

When No Service appears...

☞ You probably are in the area out of the coverage of a GSM/ GPRS or EDGE network.

When Emergency Only appears even though a number of the signal bar are indicated...

☞ You probably are in the area out of the coverage of your home GSM, GPRS or EDGE network. You probably are in the coverage of another GSM, GPRS or EDGE network but you are not allowed to be registered to the network.

If any tone is not generated when you press a keypad...

☞ You need to check the quick silence mode setting. If you can find  icon on the top of the main display screen it is the quick silence mode. By pressing and holding [Space] key on the idle screen, you can switch it off. You need to check the Key Tone Type of Sound Setting menu. You need to check Key Tone Volume of the profile option that you have set on Profiles menu.

If an audible alert is not made when a call is received...

☞ You need to check the quick silence mode setting. If you can find  icon on top of the main display screen it is the quick silence mode. By pressing and holding [Space] key on the idle screen, you can switch it off. You need to check Ring Type and Ring Volume of the profile option that you have set on Profiles menu.

If an audible alert is not made when an alarm is expired...

☞ You need to check the quick silence mode setting. If you can find  icon on top of the main display screen it is quick silence mode. By pressing and holding [Space] key on the idle screen, you can switch it off.

If an outgoing call is not made...

☞ You have probably set an outgoing calls barring option. You need to check Call Barring menu. Otherwise, you have probably set to Hide Number in Caller Number menu of Call Setting menu. In some network, when you make a call with hiding the telephone number, the network does not allow to make the call.

If an incoming call is not made...

☞ You have probably set an incoming calls barring option. You need to check Call Barring menu.

If an outgoing SMS message is not sent...

☞ You need to check the Message Center option in SMS Setting menu.

If all audible key tones are muted and all audible alerts are changed to vibrator alert...

☞ You need to check the quick silence mode setting. If you can find  icon on top of the main display screen it is the quick silence mode. By pressing and holding [Space] key on the idle screen, you can switch it off.

If some audible action is not prompted on a menu of Sound Setting menu...

☞ You need to check the quick silence mode setting. If you can find  icon on top of the main display screen it is the quick silence mode. By pressing and holding [Space] key on the idle screen, you can switch it off.

If the image on the screen is blurred when you try to take a picture...

☞ You need to check that the protection film is detached or the lens is clean. To remove fingerprints or other stains, wipe the lens with soft cloth.

GLOSSARY

Cell Broadcast

This network service allows you to receive the broadcasted text messages on various topics such as weather, traffic, local district code, local hospitals, taxis or pharmacy in the area where you are.

CUG (Closed User Group)

This network service allows the restriction of calls to and from a selected user group.

DTMF (Dial Tone Multi Frequency)

Codes sent as tone signals. Used for telephone banking, for accessing an answering machine, etc.

GPRS (General Packet Radio Service)

New packet service that allows information to be sent and received across a mobile network. The GPRS promises data rates from 56 up to 114 Kbps and continuous packet connection to the Internet for mobile phone and computer users. It is based on existing GSM such as circuit-switched cellular phone connections and complements that.

Network Service Operator

To be able to use your phone, you need a subscription to a network. You get this subscription from a network operator, together with a SIM card that you need to use with your phone.

PIN (Personal Identification Number)

The code is to establish authorization for access to certain functions or information in your SIM card. The PIN code comes with your subscription. It may be a four to eight digit number and can be changed as required.

PIN2 (Personal Identification Number 2)

The code is an authorization code to access certain special field in your SIM card. The PIN2 code does not come with your subscription in some country.

PUK (Personal Unblocking Key Code)

Used to unlock a blocked SIM card. This comes with your subscription.

Roaming

Use your phone when you are outside your subscription network area.

SIM (Subscriber Identity Module)

It contains subscriber details, security information and memory for a personal directory of numbers.

SMS (Short Message Service)

Messages to be sent and received between the network service operator's message center to your mobile phone. To use this service, it must be supported by your network.

WAP (Wireless Application Protocol)

A standard specifically created for mobile communication devices which give fast and easy access to Internet information and services.

LIMITED WARRANTY STATEMENT

1. WHAT THIS WARRANTY COVERS:

IDENTITY offers you a limited warranty that the enclosed subscriber unit will be free from defects in material and workmanship, according to the following terms and conditions:

The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.

This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the purchased local area.

The external housing and cosmetic parts shall be free of defects at the same time of shipment and, therefore, shall not be covered under these limited warranty terms.

Upon request from IDENTITY, the customer must provide information reasonably prove the date of purchasing.

The customer shall bear the cost of shipping the product to the Customer Service Center of IDENTITY. IDENTITY shall bear the cost of shipping the product back to the customer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

Defects or damages resulting from use of the product in other than its normal and customary manner.

Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of IDENTITY, including damage caused by shipping, blown fuses, spills of food or liquid.

Breakage or damage to antennas unless caused directly by defects in material or workmanship.

That the Customer Service Department at IDENTITY was not notified by

consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.

Products which have had the serial no. removed or made illegible.

This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or fitness for a particular use.

Damage resulting from use of non-IDENTITY approved accessories.

All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.

Products operated outside published maximum ratings.

Products used or obtained in a rental program.

Consumables (such as fuses).

3. STATE LAW RIGHT:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. IDENTITY SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts: so these limitations or exclusives may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

4. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please contact the retailer where you purchased this handset.

FCC Regulations:

●This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

●This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

●The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

► RF Exposure Information (SAR)

This mobile phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is **0.546** W/kg and when worn on the body, as described in this user guide, is **0.486** W/kg (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: **T6QSN55**

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of **1.5 cm** from the body.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of **1.5 cm** from your body when the phone is switched on.